Storm Water Pollution Prevention Plan

For:

Perris Valley Big League Dreams

NEC TRUMBLE ROAD AND MAPES ROAD

Prepared for:
County of Riverside
1325 Spruce Street
Riverside, CA 92507

Contractor:
To Be Determined

Project Site Location/Address:
2155 Trumble Road
Perris, CA 92570

Contractor's Storm Water Pollution Prevention Manager
Swpppm Name
Swpppm Telephone

SWPPP Prepared by:
Walden & Associates
2552 White Road, Suite B
Irvine, CA 92614
949-660-0110
Prepared by: David Bacon
Project No. 1612-290-001

SWPPP Preparation Date:
January 7, 2010

Estimated Project Dates:
Start of Construction: TBD Completion of Construction: TBD

WDID No.: 8 33M000356

IMPORTANT NOTICE: The General Contractor and his/her subcontractors shall be responsible for implementing the SWPPP, including the implementation and installation of all required BMPs, the maintenance and repair of all installed, damaged and/or nonfunctional BMPs, the periodic inspection of all BMPs and maintenance of all related inspection logs, all mandated Contractor and Subcontractor staff training and BMPs, and the maintenance of the approved SWPPP and related maintenance/monitoring documents on the project site during the grading and construction phase of the project. As such, the General Contractor shall provide the RDA with copies of all completed SWPPP/BMP inspection documents and related forms when requested, including but not necessarily limited to the following: (1) "Storm Water Quality Construction Site Inspection Checklist" [Attachment "H"], (2) "Trained Contractor Personnel Log" [Attachment "I"], (3) "Subcontractor Notification Letter and Notification Log" [Attachment "J"], (4) "Notice of Non-Compliance" [Attachment "K"], (5) "Annual Certification of Compliance Form" [Attachment "M"], and (6) "Storm Water Pollution Prevention Plan (SWPPP) and Monitoring Program Checklist" [Attachment "L"]. The General Contractor will be required to designate a trained employee to manage the implementation of the SWPPP; maintain water quality on and offsite as it relates to the grading and construction phases of the project; complete the required inspections and forms; and serve as an on-site liaison between the General Contractor and the RDA relating to the SWPPP. Inspections shall follow the schedule outlined in Section 500.5: Construction BMP Maintenance, Inspection and Repair, and Attachment "G". Redevelopment Agency staff and/or any consultant designated by the RDA and/or staff of the local water quality control board has the right to conduct on-site inspections relating to the implementation of the SWPPP and the maintenance of BMPs and on-site water quality, and require that corrective action(s) be taken immediately to address any noted concerns, whether or not they are in the form of informal oral and/or written corrective measures or formal written notices of "violation" (NOV). Some written corrective measures and formal notices of violation may necessitate the testing of water quality on the construction site and/or at a designated location(s) off-site. The cost of any water quality testing and/or any required remediation due to the non-implementation and/or improper installation of BMPs, malfunctioning and/or damaged BMPs, improper onsite containment procedures, and on-site spill incidents, etc., as well as any monetary fines resulting from legal action taken by the local water quality control board relating to the implementation, maintenance and monitoring of this SWPPP, shall be borne exclusively and entirely by the General Contractor and his/her subcontractors.

_____ _____

General Contractor Date

CONTENTS

SECTION 100 SWPPP CERTIFICATES AND APPROVAL 100-1
100.1 Initial SWPPP Certification by Contractor 100-1
100.2 Owner Approval and Certification of SWPPP 100-2
100.3 Annual Compliance Certification 100-3

SECTION 200 SWPPP AMENDMENTS 200-1
200.1 SWPPP Amendment Certification and Approval 200-1
200.2 Amendment Log 200-2

SECTION 300 INTRODUCTION AND PROJECT DESCRIPTION 300-1
300.1 Introduction and Project Description 300-1
300.2 Unique Site Features 300-1
300.3 Construction Site Estimates 300-1
300.4 Project Schedule/Water Pollution Control Schedule 300-1
300.5 Contact Information/List of Responsible Parties 300-2

SECTION 400 REFERENCES 400-1

SECTION 500 BODY OF SWPPP 500-1
500.1 Objectives 500-1
500.2 Vicinity Map 500-1
500.3 Pollutant Source Identification and BMP Selection 500-2
500.3.1 Inventory of Materials and Activities that May Pollute Storm Water 500-3
500.3.2 Existing (pre-construction) Control Measures 500-4
500.3.3 Nature of Fill Material and Existing Data Describing the Soil 500-4
500.3.4 Erosion Control 500-5
500.3.5 Sediment Control 500-6
500.3.6 Tracking Control 500-7
500.3.7 Wind Erosion Control 500-8
500.3.8 Non-Storm Water Control 500-9
500.3.9 Waste Management and Materials Pollution Control 500-10
500.3.10 Cost Breakdown for Water Pollution Control 500-10
500.4 Water Pollution Control Drawings (WPCDs) 500-11
500.5 Construction BMP Maintenance, Inspection, and Repair 500-12
500.6 Post-Construction Storm Water Management 500-12
500.6.1 Post-Construction Control Practices 500-13
500.6.2 Operation/Maintenance after Project Completion 500-13
500.7 Training 500-13
500.8 List of Subcontractors 500-14
500.9 Other Plans/Permits 500-15

SECTION 600 MONITORING PROGRAM AND REPORTS 600-1
600.1 Site Inspections 600-1
600.2 Non-Compliance Reporting 600-1
600.3 Record Keeping and Reports 600-2
600.4 Sampling and Analysis Plan for Sediment 600-2
600.5 Sampling and Analysis Plan for Non-Visible Pollutants 600-2

SWPPP ATTACHMENTS

Attachment A ..... Vicinity Map
Attachment B ..... Water Pollution Control Drawings
Attachment C ..... BMP Consideration Checklist
Attachment D ..... Computation Sheet for Determining Runoff Coefficients
Attachment E ..... Computation Sheet for Determining Run-on Discharges
Attachment F ..... Notice of Intent (NOI)
Attachment G ..... Program for Maintenance, Inspection, and Repair of Construction Site BMPs
Attachment H ..... Storm Water Quality Construction Checklist Site Inspection
Attachment I ..... Trained Contractor Personnel Log
Attachment J ..... Subcontractor Notification Letter and Log
Attachment K ..... Notice of Non-Compliance
Attachment L ..... SWPPP and Monitoring Program Checklist
Attachment M ..... Annual Certification of Compliance Form
Attachment N ..... Other Plans/Permits
Attachment P ..... Notice of Termination (NOT)
Attachment Q ..... BMPs Selected for the Project
Attachment R ..... Sampling Activity Log
Attachment S ..... Construction Material and Pollutant Testing Guidance Table — Non-Visible Pollutants
Attachment T ..... Discharge Reporting Log

SECTION 100 – SWPPP CERTIFICATIONS AND APPROVAL

100.1 INITIAL SWPPP CERTIFICATION BY PREPARER

Project Name: PERRIS VALLEY BIG LEAGUE DREAMS

Project Number: NEC TRUMBLE ROAD AND MAPES ROAD

"I certify under a penalty of law that this document and all attachments were prepared under my direction or supervision in accordance with a system designed to ensure that qualified personnel properly gather and evaluate the information submitted. Based on my inquiry of the person or persons who manage the system or those persons directly responsible for gathering the information, to the best of my knowledge and belief, the information submitted is true, accurate, and complete. I am aware that there are significant penalties for submitting false information, including the possibility of fine and imprisonment for knowing violations."

Preparer's Signature

1/18/00
Date

DAVE BACON
Preparer's Name

949-660-0110
Telephone Number

100.2 OWNER APPROVAL AND CERTIFICATION OF SWPPP

Owner's (Or Authorized Representative)
Approval And Certification Of The
Storm Water Pollution Prevention Plan

Project Name: PERRIS VALLEY BIG LEAGUE DREAMS

Project Number: NEC TRUMBLE ROAD AND MAPES ROAD

"I certify under a penalty of law that this document and all attachments were prepared under my direction or supervision in accordance with a system designed to ensure that qualified personnel properly gather and evaluate the information submitted. Based on my inquiry of the person or persons who manage the system or those persons directly responsible for gathering the information, to the best of my knowledge and belief, the information submitted is true, accurate, and complete. I am aware that there are significant penalties for submitting false information, including the possibility of fine and imprisonment for knowing violations."

Owner (or Authorized Representative) Signature	**Date**
Owner (or Authorized Representative) Name	**Telephone Number**

100.3 ANNUAL COMPLIANCE CERTIFICATION

By July 1 of each year, the Owner shall complete an Annual Certification of Compliance stating compliance with the terms and conditions of the Permit and the SWPPP. The blank Annual Certification of Compliance Form is included in Attachment M. Completed Annual Certifications of Compliance and Approvals can be found in the following pages.

SECTION 200 – SWPPP AMENDMENTS

200.1 SWPPP AMENDMENT CERTIFICATION AND APPROVAL

This SWPPP shall be amended:

- Whenever there is a change in construction or operations which may affect the discharge of pollutants to surface waters, groundwater(s), or a municipal separate storm sewer system (MS4); or
- If any condition of the Permits is violated or the general objective of reducing or eliminating pollutants in storm water discharges has not been achieved. If the RWQCB determines that a Permit violation has occurred, the SWPPP shall be amended and implemented within 14-calendar days after notification by the RWQCB;
- Annually, prior to the defined rainy season; and
- When deemed necessary by the Owner/Contractor.

The following items will be included in each amendment:

- Who requested the amendment.
- The location of proposed change.
- The reason for change.
- The original BMP proposed, if any.
- The new BMP proposed.

The amendments for this SWPPP, along with the Owners Certification and the Owner approval, can be found in the following pages. Amendments are listed in the Amendment Log in section 200.2

SWPPP AMENDMENT NO.

Project Name: _____

Project Number: _____

PREPARER CERTIFICATION OF THE STORM WATER POLLUTION PREVENTION PLAN AMENDMENT

"I certify under a penalty of law that this document and all attachments were prepared under my direction or supervision in accordance with a system designed to ensure that qualified personnel properly gather and evaluate the information submitted. Based on my inquiry of the person or persons who manage the system or those persons directly responsible for gathering the information, to the best of my knowledge and belief, the information submitted is true, accurate, and complete. I am aware that there are significant penalties for submitting false information, including the possibility of fine and imprisonment for knowing violations."

Preparer's Signature	**Date**
Preparer's Name	**Telephone Number**

OWNER (OR AUTHORIZED REPRESENTATIVE) APPROVAL OF THE STORM WATER POLLUTION PREVENTION PLAN AMENDMENT

"I certify under a penalty of law that this document and all attachments were prepared under my direction or supervision in accordance with a system designed to ensure that qualified personnel properly gather and evaluate the information submitted. Based on my inquiry of the person or persons who manage the system or those persons directly responsible for gathering the information, to the best of my knowledge and belief, the information submitted is true, accurate, and complete. I am aware that there are significant penalties for submitting false information, including the possibility of fine and imprisonment for knowing violations."

Owner (or Authorized Representative) Signature	**Date**
Owner (or Authorized Representative) Name	**Telephone Number**

200.2 AMENDMENT LOG

Project Name: _____

Project Number: _____

Amendment No.	Date	Brief Description of Amendment	Prepared By

SECTION 300 – Introduction and Project Description

300.1 INTRODUCTION AND PROJECT DESCRIPTION

The project is located at the northeast corner of Trumble Road and Mapes Road in the city of Perris, California. The 36.1-acre site is bounded by open land to the north; Sherman Road and residential development to the east; Mapes Road and open land to the south; and Trumble Road and the Eastern Municipal Water District (EMWD) facilities to the west. The Big League Dreams sports park will include six (6) baseball/softball fields, two (2) covered soccer fields, a batting cage, tot lots, picnic areas, a concession building, an administration building and stadium club building.

The construction project's vicinity map (Attachment A-1), parcel exhibit (A-2), and receiving waters map (A-3) are included in Attachment A of the SWPPP. These maps are provided to show the project location, parcels, surface water boundaries, geographic features, and general topography.

Project Site Address: 9155 Trumble Road, Perris, CA 92570

Thomas Bros. Map: Page 808 – Grids C5, C6, D5 & D6

APN Number(s): 327-190-005-1, 327-190-006-2, 327-190-007-3, 327-190-009-5, 327-190-010-5, 327-190-011-6, 327-190-012-7, 327-190-015-0, 327-190-017-2, 327-190-019-4, 327-190-026-0

Project Watershed: Santa Ana River

Sub-watershed: San Jacinto River, Reach 3

California Regional Water Quality Control Board Region: Santa Ana Region, Region 8

300.2 UNIQUE SITE FEATURES

None

300.3 CONSTRUCTION SITE ESTIMATES

The following are estimates of the construction site:

Construction site area	36.1	acres
Percentage impervious area before construction	10	%
Runoff coefficient before construction [1]	0.36	
Percentage impervious area after construction	20	%
Runoff coefficient after construction [1]	0.35	
Anticipated storm water flow on to the construction site [2]	0	cfs

[1] Calculations are shown in Attachment D

[2] Calculations are shown in Attachment E

300.4 PROJECT SCHEDULE/WATER POLLUTION CONTROL SCHEDULE

Estimate Construction Start: TBD

Estimate Construction Finish: TBD

Rainy season begins: October 1

Rainy season ends: May 1

Mobilization of equipment and materials to begin on: TBD

Store temporary soil stabilization and temporary sediment control products beginning on: TBD

Install stabilized construction entrance on: TBD

Start implementation of temporary soil stabilization and sediment control BMPs on: TBD (before rainy season starts). Continue to implement and maintain temporary BMPs throughout rainy season. Complete installation of temporary soil stabilization and sediment control BMPs on: TBD

Grading work: TBD

Complete SWPPP Annual Certification of Compliance by: July 1

Implement final erosion control of substantially completed areas: TBD

Install temporary concrete washout: TBD

Begin final paving/construction on: TBD . Continue to apply soil stabilization and sediment controls as needed during construction.

Remove concrete washout and restore area to original grade: TBD

Start final stabilization, revegetation and landscape by: TBD

Project complete: TBD

300.5 CONTACT INFORMATION/LIST OF RESPONSIBLE PARTIES

The Storm Water Pollution Prevention Manager (SWPPM) assigned to this project is:

SWPPPM NAME
SWPPPM TELEPHONE
CONTRACTOR NAME
CONTRACTOR ADDRESS
CONTRACTOR CITY, STATE

The SWPPM shall have primary responsibility and significant authority for the implementation, maintenance, inspection and amendments to the approved SWPPP. The SWPPM will be available at all times throughout the duration of the project. Duties of the SWPPM include but are not limited to:

- Ensuring full compliance with the SWPPP and the Permit
- Implementing all elements of the SWPPP, including but not limited to:
  - Implementation of prompt and effective erosion and sediment control measures
  - Implementing all non-storm water management, and materials and waste management activities such as: monitoring discharges (dewatering, diversion devices); general site clean-up; vehicle and equipment cleaning, fueling and maintenance; spill control; ensuring that no materials other than storm water are discharged in quantities which will have an adverse effect on receiving waters or storm drain systems; etc.

- Pre-storm inspections
- Storm event inspections
- Post-storm inspections
- Routine inspections as specified in the project's specifications or described in the SWPPP
- Updates/ Amendments to the SWPPP, as needed
- Preparing annual compliance certification
- Ensuring elimination of all unauthorized discharges
- The SWPPM shall be assigned authority by the Contractor to mobilize crews in order to make immediate repairs to the control measures
- Coordinate with the Contractor to assure all of the necessary corrections/repairs are made immediately, and that the project complies with the SWPPP, the Permit and approved plans at all times
- Submitting Notices of Discharge and reports of Illicit Connections or Illegal Discharges

IMPORTANT NOTICE: The General Contractor and his/her subcontractor s shall be responsible for implementing the SWPPP, including the implementation and installation of all required BMPs, the maintenance and repair of all installed, damaged and/or non-functional BMPs, the periodic inspection of all BMPs and maintenance of all related inspection logs, all mandated Contractor and Subcontractor staf f training and BMPs, and the maintenance of the approved SWPPP and related maintenance/monitoring documents on the project site during the grading and constr uction phase of the project. As such, the General Contractor shall provide the RDA with copies of all completed SWPPP/BMP inspection documents and related forms when requested, including but not necessarily limited to the following: (1) "Storm Water Quality Construction Site Inspection Checklist" [Attachment "H"], (2) "Trained Contractor Personnel Log" [Attachment "I"], (3) "Subcontractor Notification Letter and Notification Log" [Attachment "J"], (4) "Notice of Non-Compliance" [Attachment "K"], (5) "Annual Certification of Compliance Form" [Attachment "M"], and (6) "Storm Water Pollution Prevention Plan (SWPPP) and Monitoring Program Checklist" [Attachment "L"]. The General Contractor will be required to designate a trained employee to manage the implementation of the SWPPP; maintain water quality on and off-site as it relates to the grading and construction phases of the project; complete the required inspections and forms; and serve as an on-site liaison between the General Contractor and the RDA relating to the SWPPP. Inspections shall follow the schedule outlined in Section 500.5: Construction BMP Maintenance, Inspection and Repair, and Attachment "G". Redevelopment Agency staff and/or any consultant designated by the RDA and/or staff of the local water quality control board has the right to conduct on-site inspections relating to the implementation of the SWPPP and the maintenance of BMPs and on-site water quality, and require that corrective action(s) be taken immediately to address any noted concerns, whether or not they are in the form of informal oral and/or written corrective measures or formal written notices of "violation" (NOV). Some written corrective measures and formal notices of violation may necessitate the testing of water quality on the construction site and/or at a designated location(s) off-site. The cost of any water quality testing and/or any required remediation due to the non-implementation and/or improper installation of BMPs, malfunctioning and/or damaged BMPs, improper on-site containment procedures, and on-site spill incidents, etc., as well as any monetary fines resulting from legal action taken by the local water quality control board relating to the implementation, maintenance and monitoring of this SWPPP, shall be borne exclusively and entirely by the General Contractor and his/her subcontractors.

SECTION 400 – REFERENCES

The following documents are made a part of this SWPPP by reference:

- Project plans and specifications: Precise Grading Plan, dated 02/09/2009, prepared by Walden & Associates, project number: 1612-290-001.
- State Water Resources Control Board (SWRCB) Order No. 99-08-DWQ, National Pollutant Discharge Elimination System (NPDES) General Permit No. CAS000002, Waste Discharge Requirements (WDRs) for Discharges of Storm Water Runoff Associated with Construction Activity.
- California Stormwater BMP Handbook - Construction, January 2003
- County of Riverside Standards and Specifications
- Geotechnical Investigation Report, dated October 30, 2008, prepared by Converse Consultants, project number: 07-81-368-01

SECTION 500 – BODY OF SWPPP

500.1 OBJECTIVES

This Storm Water Pollution Prevention Plan (SWPPP) has six main objectives:

- Identify all pollutant sources, including sources of sediment that may affect the quality of storm water discharges associated with construction activity (storm water discharges) from the construction site, and
- Identify non-storm water discharges, and
- Identify, construct, implement in accordance with a time schedule, and maintain Best Management Practices (BMPs) to reduce or eliminate pollutants in storm water discharges and authorized non-storm water discharges from the construction site during construction, and
- Develop a maintenance schedule for BMPs installed during construction designed to reduce or eliminate pollutants after construction is completed (post-construction BMPs).
- Identify a sampling and analysis strategy and sampling schedule for discharges from construction activity which discharge directly into water bodies listed on Attachment 3 of the Permit (Clean Water Act Section 303(d) [303(d)] Water Bodies listed for Sedimentation).
- For all construction activity, identify a sampling and analysis strategy and sampling schedule for discharges that have been discovered through visual monitoring to be potentially contaminated by pollutants not visually detectable in the runoff.

This SWPPP conforms with the required elements of the General Permit No. CAS000002 issued by the State of California, State Water Resources Control Board (SWRCB). This SWPPP will be modified and amended to reflect any amendments to the Permit, or any changes in construction or operations that may affect the discharge of pollutants from the construction site to surface waters, groundwaters, or the municipal separate storm sewer system (MS4). The SWPPP will also be amended if it is in violation of any condition of the Permit or has not achieved the general objective of reducing pollutants in storm water discharges. The SWPPP shall be readily available on-site for the duration of the project.

500.2 VICINITY MAP

The construction project vicinity map showing the project location and surface water boundaries is located in Attachment A.

500.3 POLLUTANT SOURCE IDENTIFICATION AND BMP SELECTION

INVENTORY OF MATERIALS AND ACTIVITIES THAT MAY POLLUTE STORM WATER

The following is a list of construction materials that will be used and activities that will be performed that will have the potential to contribute pollutants, other than sediment, to storm water runoff (control practices for each activity are identified in the Water Pollution Control Drawings (WPCDs) and/or in Sections 500.3.4 through 500.3.9:

- Vehicle fluids, including oil, grease, petroleum, and coolants
- Asphaltic emulsions associated with asphalt-concrete paving operations
- Cement materials associated with PCC concrete paving operations, drainage structures, median barriers, and bridge construction.
- Base and subbase material
- Paints

- Solvents, thinners, acids
- Mortar mix
- Raw landscaping materials and wastes (topsoil, plant materials, herbicides, fertilizers, mulch, pesticides)
- BMP materials (sandbags)
- PCC rubble
- Masonary block rubble
- General litter

Construction activities that have the potential to contribute sediment to storm water discharges include:

- Clear and grub operations
- Grading operations
- Soil import operations
- Utility excavation operations
- Landscaping operations

Attachment C lists all Best Management Practices (BMPs) that have been selected for implementation in this project. Implementation and location of BMPs are shown on the WPCDs in Attachment B. Narrative descriptions of BMPs to be used during the project are listed by category in each of the following SWPPP sections. Attachment Q includes a list, and/or copies of the fact sheets of all the BMPs selected for this project.

500.3.2 EXISTING (PRE-CONSTRUCTION) CONTROL MEASURES

The following are existing (pre-construction) control measures encountered within the project site:

- None

500.3.3 NATURE OF FILL MATERIAL AND EXISTING DATA DESCRIBING THE SOIL

The Geotechnical Investigation Report identifies the following soils at the site:
Fill – mixtures of sand, silt and clay
Alluvium – mixtures of sand, silt and clay

Existing site features that, as a result of past usage, may contribute pollutants to storm water (e.g., toxic materials that are known to have been treated, stored, disposed, spilled, or leaked onto the construction site) include:

- None

500.3.4 EROSION CONTROL

Erosion control, also referred to as soil stabilization, consists of source control measures that are designed to prevent soil particles from detaching and becoming transported in storm water runoff. Erosion Control BMPs protect the soil surface by covering and/or binding soil particles. This project will incorporate erosion control measures required by the contract documents, and other measures selected by the Contractor. This project will implement the following practices for effective temporary and final erosion control during construction:

1) Preserve existing vegetation where required and when feasible.

2) Apply temporary erosion control to remaining active and non-active areas as required by the California Stormwater BMPs Handbook - Construction, and the contract documents. Reapply as necessary to maintain effectiveness.

3) Implement temporary erosion control measures at regular intervals throughout the defined rainy season to achieve and maintain the contract's disturbed soil area requirements. Implement erosion control prior to the defined rainy season.

4) Stabilize non-active areas as soon as feasible after the cessation of construction activities.

5) Control erosion in concentrated flow paths by applying erosion control blankets, check dams, and/or sand (or gravel) bags as required in the contract documents.

6) Apply seed to areas deemed substantially complete during the defined rainy season.

7) At completion of construction, apply permanent erosion control to all remaining disturbed soil areas.

Sufficient erosion control materials will be maintained on-site to allow implementation in conformance with Permit requirements and described in this SWPPP. This includes implementation requirements for active areas and non-active areas that require deployment before the onset of rain.

Implementation and locations of temporary erosion control BMPs are shown on the Water Pollution Control Drawings (WPCDs) in Attachment B and/or described in this section.

The BMP Consideration Checklist in Attachment C indicates the BMPs that will be implemented to control erosion on the construction site; these are:

- EC-1, Scheduling
- EC-2, Preservation of Existing Vegetation

Implementation of Erosion Control BMPs

- BMPs will be deployed in a sequence to follow the progress of grading and construction. As the locations of soil disturbance change, erosion and sedimentation controls will be adjusted accordingly to control storm water runoff at the downgrade perimeter and drain inlets. BMPs will be mobilized as follows:

Year-round:

- The Storm Water Pollution Prevention Manager (SWPPM) will monitor weather using National Weather Service reports to track conditions and alert crews to the onset of rainfall events.

During the rainy season:

- Disturbed areas will be stabilized with temporary or permanent erosion control before rain events.

- Disturbed areas that are substantially complete will be stabilized with permanent erosion control (soil stabilization) and vegetation (if within seeding window for seed establishment).

- Prior to forecast storm events, temporary erosion control BMPs will be deployed and inspected.

During the non-rainy season:

- The project schedule will sequence construction activities with the installation of both erosion control and sediment control measures. The construction schedule will be arranged as much as practicable to leave existing vegetation undisturbed until immediately prior to grading.

500.3.5 SEDIMENT CONTROL

Sediment controls are structural measures that are intended to complement and enhance the selected erosion control measures and reduce sediment discharges from active construction areas. Sediment controls are designed to intercept and settle out soil particles that have been detached and transported by the force of water. This project will incorporate sediment control measures required by the contract documents, and other measures selected by the Contractor, SWPPP Manger, or Owner.

Sufficient quantities of temporary sediment control materials will be maintained on-site throughout the duration of the project, to allow implementation of temporary sediment controls in the event of predicted rain, and for rapid response to failures or emergencies, in conformance with other Permit requirements and as described in this SWPPP. This includes implementation requirements for active areas and non-active areas before the onset of rain.

Implementation and locations of temporary sediment control BMPs are shown on the Water Pollution Control Drawings (WPCDs) in Attachment B.

The BMP Consideration checklist in Attachment C indicates all the BMPs that will be implemented to control sediment on the construction site; these are:

- SE-2, Sediment Basin
- SE-5, Fiber Rolls
- SE-7, Street Sweeping and Vacuuming
- SE-8, Sand Bag Barrier or SE-6, Gravel Bag Berm
- SE-10, Storm Drain Inlet Protection

Implementation of Temporary Sediment Controls

- Temporary sediment control BMPs will be deployed according to the schedule shown in SWPPP Section 300.4.
- During the rainy season, temporary sediment controls will be implemented at the draining perimeter of disturbed soil areas, at the toe of slopes, and at storm drain inlets and at outfall areas at all times.
- During the non-rainy season, temporary sediment controls will be implemented at the draining perimeter of disturbed soil areas and at storm drains downstream from disturbed areas before rain events.
- Storm drain inlet protection will be used at all operational internal inlets to the storm drain system during the rainy season as shown on the WPCDs.
- During the non-rainy season, in the event of a predicted storm, the following temporary sediment control materials will be maintained onsite: sandbags for linear barriers (or gravel bags).

500.3.6 TRACKING CONTROL

The following BMPs have been selected to reduce sediment tracking from the construction site onto private or public roads:

- SE-7, Street Sweeping and Vacuuming
- TC-1, Stabilized Construction Entrance/Exit

BMPs to Reduce Sediment Tracking

Stabilized Construction Entrance/Exit

- The site entrance/exit will be stabilized to reduce tracking of sediment as a result of construction traffic. The entrance will be designed and graded to prevent runoff from leaving the site. Stabilization material will be 3 to 4-inch aggregate.

Road Cleaning BMPs – Street Sweeping and Vacuuming

- Road sweeping and vacuuming will occur during soil hauling and as necessary to keep street surfaces clear of soil and debris. Washing of sediment tracked onto streets into storm drains will not occur.

500.3.7 WIND EROSION CONTROL

The following BMPs have been selected to control dust from the construction site:

- WE-1, Wind Erosion Control

Dust Control

- Potable water will be applied to disturbed soil areas of the project site to control dust and maintain optimum moisture levels for compaction. The water will be applied using water trucks.

- BMP WE-1, Wind Erosion Control, and BMP NS-1, Water Conservation Practices, will be implemented to provide dust control and prevent discharges from dust control activities and water supply equipment. Water application rates will be minimized as necessary to prevent runoff and ponding and water equipment leaks will be repaired immediately.

- During windy conditions (forecast or actual wind conditions of approximately 25 mph or greater), dust control will be applied to disturbed areas to adequately control wind erosion.

- WM-3, Stockpile Management, using plastic covers will be implemented to prevent wind dispersal of sediment from stockpiles.

500.3.8 NON-STORM WATER CONTROL

An inventory of construction activities and potential non-storm water discharges is provided in Section 5.3.1. The BMP Consideration Checklist in Attachment C and the following list indicates the BMPs that have been selected to control non-storm water pollution on the construction site. Implementation and locations of some non-storm water control BMPs are shown on the Water Pollution Control Drawings (WPCDs) in Attachment B. A narrative description of each BMP follows.

- NS-1, Water Conservation Practices
- NS-3, Paving and Grinding Operations
- NS-6, Illicit Connection/Illegal Discharge Detection and Reporting
- NS-7, Potable Water/Irrigation
- NS-12, Concrete Curing
- NS-13, Concrete Finishing
- WM-8, Concrete Waste Management

Illicit Connection/Illegal Discharge Detection and Reporting

- The Contractor will implement BMP NS-6, Illicit Connection/Illegal Discharge Detection and Reporting throughout the duration of the project.

Paving Operations

- BMP NS-3, Paving and Grinding Operations, will be implemented to prevent paving materials from being discharged off-site. Covers will be placed over each inlet adjacent to paving operations. The covers will consist of scrap carpeting place over, and tucked under, each inlet grate. Following paving operations, the area will be swept, inlet covers will be removed, and the inlets will be inspected for paving materials.

500.3.9 WASTE MANAGEMENT AND MATERIALS POLLUTION CONTROL

An inventory of construction activities, materials, and wastes is provided in Section 5.3.1. The BMP Consideration Checklist in Attachment C and the following list indicates the BMPs that have been selected to handle materials and control construction site wastes. A narrative description of each BMP follows.

- WM-1, Material Delivery and Storage
- WM-2, Material Use
- WM-3, Stockpile Management
- WM-8, Concrete Waste Management
- WM-4, Spill Prevention and Control
- WM-5, Solid Waste Management
- WM-9, Sanitary/Septic Waste Management

Material Delivery, Storage, and Use

- In general, BMPs WM-1 and WM-2 will be implemented to help prevent discharges of construction materials during delivery, storage, and use. A sandbag (or gravel bag) barrier (BMP SE-8 or SE-6) will be provided around the storage area to prevent run-on from adjacent areas.

- Very large items, such as framing materials, and stockpiled lumber, will be stored in the open in the general storage area. Such materials will be elevated with wood blocks to minimize contact with run-on.

- Spill clean-up materials, material safety data sheets, a material inventory, and emergency contact numbers will be maintained and stored in a separate container.

Stockpile Management

- BMP WM-3, Stockpile Management, will be implemented to reduce or eliminate pollution of stormwater from stockpiles of soil and paving materials such as Portland cement concrete (PCC) rubble, asphalt concrete (AC), asphalt concrete rubble, aggregate base, aggregate subbase, pre-mixed aggregate, and asphalt minder (so called "cold mix" asphalt). Stockpile will be surrounded with gravel or sand-filled bags. Plastic covers will be used.

Spill Prevention and Control

- BMP WM-4, Spill Prevention and Control, will be implemented to contain and clean-up spills and prevent material discharges to the storm drain system. Spill prevention is also discussed above in Material Delivery, Storage, and below in the following waste management and equipment maintenance sections.

Waste Management

- BMP WM-5, Solid Waste Management, will be implemented to minimize storm water contact with waste materials and prevent waste discharges. Solid wastes will be loaded directly into trucks for off-site disposal. When on-site storage is necessary, solid wastes will be stored in watertight dumpsters in the general storage area. Solid waste, including rubble stockpiles, will be removed and disposed off-site at least weekly. Hazardous wastes will be stored in clearly marked shipping containers and segregated from other non-waste materials.

Concrete Residuals and Washout Wastes

- BMP WM-8, Concrete Waste Management, will be implemented and a concrete washout facility will be constructed and maintained at the Contractor's yard as shown on the WPCD. All excess concrete and concrete washout slurries will be discharged to the washout facility for drying. BMP maintenance, waste disposal, and BMP removal will be conducted as described in WM-8.

Sanitary and Septic Wastes

- The Contractor will implement BMP WM-9, Sanitary and Septic Waste Management, and portable toilets will be located and maintained for the duration of the project. Specific locations are shown on WPCD. Weekly maintenance will be provided and wastes will be disposed off-site. The toilets will be located away from concentrated flow paths and traffic flow.

500.4 WATER POLLUTION CONTROL DRAWINGS (WPCDS)

The Water Pollution Control Drawings can be found in Attachment B of the SWPPP.

500.5 CONSTRUCTION BMP MAINTENANCE, INSPECTION, AND REPAIR

Inspections will be conducted as follows:

- Prior to a forecast storm
- after a rain event that causes runoff from the construction site
- at 24-hour intervals during extended rain events
- at any other time(s) or intervals of time specified in the contract documents

Completed inspection checklists will be kept with the SWPPP.

A tracking or follow-up procedure shall follow any inspection that identifies deficiencies in BMPs. A program for Maintenance, Inspection and Repair of BMPs is shown in Attachment G.

500.6 POST-CONSTRUCTION STORM WATER MANAGEMENT

500.6.1 POST-CONSTRUCTION CONTROL PRACTICES

The following are the post-construction BMPs that are to be used at this construction site after all construction is complete:

- Infiltration System

The site will drain to the storm drain connecting to perforated pipe for Infiltration into the soils.

500.6.2 OPERATION/MAINTENANCE AFTER PROJECT COMPLETION

The post-construction BMPs that are described above will be funded and maintained by:

COUNTY OF RIVERSIDE

500.7 TRAINING

Section 300.5 shows the name of the Contractor's Storm Water Pollution Prevention Manager (SWPPM). This person has received the following training:

Ongoing, formal training sessions will be selected from one of the following organizations:

- City of Los Angeles Storm Water Program
- County of Los Angeles Storm Water Program
- State of California Regional Water Quality Control Board
- IECA, ABAG and/or AGC sponsored training
- USEPA sponsored training
- Recognized municipal stakeholder organizations throughout California
- Professional organizations and societies in the building and construction field

Other Contractor personnel attending tailgate training will document attendance using the form in Attachment I. Informal training will include tailgate site briefings to be conducted by-weekly and address the following topics:

- Erosion Control BMPs
- Sediment Control BMPs
- Non-Storm Water BMPs
- Waste Management and Materials Pollution Control BMPs
- Emergency Procedures specific to the construction site storm water management

This SWPPP was prepared by Walden & Associates, under the direction of Mr. Dave Bacon. Mr. Bacon has over 7 years of experience in the preparation of Storm Water Pollution Prevention Plans (SWPPPs), and has the following previous experience:

- Has prepared over 50 project-specific SWPPPs
- BIA Construction Stormwater Compliance Workshop – March 2006
- ASCE/OC Storm Water Quality and NPDES Permits Seminar – March 2005

The training log showing formal and informal training of various Contractor personnel is shown in Attachment I.

500.8 LIST OF SUBCONTRACTORS

All contractors and subcontractors will be notified of the requirement for storm water management measures during the project. A list of contractors will be maintained and included in the SWPPP. If subcontractors change during the project, the list will be updated accordingly. The subcontractor notification letter and log is included in the SWPPP as Attachment J.

500.9 OTHER PLANS/PERMITS

Attachment N includes copies of other local, state, and federal plans and permits. Following is a list of the plans and permits included in Attachment N:

- State Water Resources Control Board (SWRCB) Order No. 99-08-DWQ, National Pollutant Discharge Elimination System (NPDES) General Permit No. CAS000002, Waste Discharge Requirements (WDRs) for Discharges of Storm Water Runoff Associated with Construction Activity.

SECTION 600 – MONITORING PROGRAM AND REPORTS

600.1 SITE INSPECTIONS

The SWPPPM will inspect the site prior to a forecast storm, after a rain event that causes runoff from the construction site, at 24-hour intervals during extended rain events, and as specified in the contract documents. The results of all inspections and assessments will be documented. Copies of the completed inspection checklists will be maintained with the SWPPP. Site inspections conducted for monitoring purposes will be performed using the inspection checklist shown in Attachment H.

The name(s) and contact number(s) of the assigned inspection personnel are listed below:

Assigned inspector: SWPPPM NAME Contact phone: SWPPPM TELEPHONE

600.2 NON-COMPLIANCE REPORTING

If a discharge occurs or if the project receives a written notice of non-compliance, the Contractor will immediately notify the Owner and will file a written report to the Owner within 7 days of the discharge or notice. The Owner is responsible for filing a written report to the Regional Water Quality Control Board (RWQCB) within 30 days or identification of non-compliance. Corrective measures will be implemented immediately following the discharge, notice or order. A sample Notice of Non-Compliance (NONC) form is provided in Attachment K. All discharges will be documented on a Discharge Reporting Log using the example form in Attachment T.

The report to the Owner and to the RWQCB will contain the following items:

- The date, time, location, nature of operation, and type of unauthorized discharge, including the cause or nature of the notice or order,
- The control measures (BMPs) deployed before the discharge event, or prior to receiving notice or order,
- The date of deployment and type of control measures (BMPs) deployed after the discharge event, or after receiving the notice or order, including additional measures installed or planned to reduce or prevent re-occurrence, and
- An implementation and maintenances schedule for any affected BMPs

600.3 RECORD KEEPING AND REPORTS

Records shall be retained for a minimum of three years for the following items:

- Site inspections
- Compliance certifications
- Discharge reports
- Approved SWPPP document and amendments

600.4 SAMPLING AND ANALYSIS PLAN FOR SEDIMENT

This project does not have the potential to discharge directly to a water body listed as impaired due to Sedimentation/Siltation and/or Turbidity pursuant to Clean Water Act, Section 303(d).

600.5 SAMPLING AND ANALYSIS PLAN FOR NON-VISIBLE POLLUTANTS

This Sampling and Analysis Plan (SAP) for Non-Visible Pollutants describes the sampling and analysis strategy and schedule for monitoring non-visible pollutants in storm water discharges from the project site and off-site activities directly related to the project, in accordance with the requirements of Section B of the General Permit, including SWRCB Resolution 2001-046.

600.5.1 SCOPE OF MONITORING ACTIVITIES

The following construction materials, wastes or activities, as identified in Section 500.3.1, are potential sources of non-visible pollutants to storm water discharges from the project.

- Solvents, Thinners
- Concrete Curing
- Treated Wood
- Soil Stabilizers
- Fertilizers, Herbicides, Pesticides

The following existing site features, as identified in Section 500.3.3, are potential sources of non-visible pollutants to storm water discharges from the project. Locations of existing site features contaminated with non-visible pollutants are shown on the WPCDs in Attachment B.

- None

The following soil amendments have the potential to change the chemical properties, engineering properties, or erosion resistance of the soil and will be used on the project site. Locations of soil amendment application are shown on the WPCDs in Attachment B.

- None

The project has the potential to receive storm water run-on with the potential to contribute non-visible pollutants to storm water discharges from the project.

- None

Sampling for non-visible pollutants will be conducted when (1) a breach, leakage, malfunction, or spill is observed; and (2) the leak or spill has not been cleaned up prior to the rain event; and (3) there is the potential for discharge of non-visible pollutants to surface waters or drainage system.

600.5.2 MONITORING STRATEGY

Sampling Schedule

Samples for the applicable non-visible pollutant(s) and a sufficiently large uncontaminated background sample shall be collected during the first two hours of discharge from rain events that result in a sufficient discharge for sample collection. Samples shall be collected during daylight hours (sunrise to sunset) and shall be collected regardless of the time of year, status of the construction site, or day of the week.

In conformance with the U.S. Environmental Protection Agency definition, a minimum of 72 hours of dry weather will be used to distinguish between separate rain events.

Collection of discharge samples for non-visible pollutant monitoring will be triggered when any of the following conditions are observed during the required inspections conducted before or during rain events:

- Materials or wastes containing potential non-visible pollutants are not stored under watertight conditions. Watertight conditions are defined as (1) storage in a watertight container, (2) storage under a watertight roof or within a building, or (3) protected by temporary cover and containment that prevents storm water contact and runoff from the storage area.

- Materials or wastes containing potential non-visible pollutants are stored under watertight conditions, but (1) a breach, malfunction, leakage, or spill is observed, (2) the leak or spill is not cleaned up prior to the

rain event, and (3) there is the potential for discharge of non-visible pollutants to surface waters or a storm sewer system.

- An operational activity, including but not limited to those in Section 600.5.1, with the potential to contribute non-visible pollutants (1) was occurring during or within 24 hours prior to the rain event, (2) applicable BMPs were observed to be breached, malfunctioning, or improperly implemented, and (3) there is the potential for discharge of non-visible pollutants to surface waters or a storm sewer system.

- Soil amendments that have the potential to change the chemical properties, engineering properties, or erosion resistance of the soil have been applied, and there is the potential for discharge of non-visible pollutants to surface waters or a storm sewer system.

Sampling Locations

Sampling locations are based on proximity to planned non-visible pollutant storage, occurrence or use; accessibility for sampling, personnel safety; and other factors in accordance with the applicable requirements in the Permit. Planned sampling locations are shown on the WPCDs in Attachment B and include the following:

- One sampling location has been identified for the collection of samples of runoff that drain areas where soil amendments that have the potential to change the chemical properties, engineering properties, or erosion resistance of the soil will be applied.

- Sample location number one is located: To Be Determined

- A location has been identified for the collection of an uncontaminated sample of runoff as a background sample for comparison with the samples being analyzed for non-visible pollutants. This location was selected such that the sample will not have come in contact with (1) operational or storage areas associated with the materials, wastes, and activities identified in Section 500.3.1; (2) potential non-visible pollutants due to historical use of the site as identified in Section 500.3.3; (3) areas in which soil amendments that have the potential to change the chemical properties, engineering properties, or erosion resistance of the soil have been applied; or (4) disturbed soils areas.

- If applicable Sample location number two is located: To Be Determined

If an operational activity or storm water inspection conducted 24 hours prior to or during a rain event identifies the presence of a material storage, waste storage, or operations area with spills or the potential for the discharge of non-visible pollutants to surface waters or a storm sewer system that was an unplanned location and has not been identified on the WPCDs, sampling locations will be selected using the same rationale as that used to identify planned locations.

600.5.3 MONITORING PREPARATION

Samples on the project site will be collected by the following Contractor sampling personnel:

SWPPPM NAME
SWPPPM TELEPHONE

Prior to the rainy season, all sampling personnel and alternates will review the SAP. Qualifications of designated Contractor personnel describing environmental sampling training and experience are provided in Attachment I.

An adequate stock of monitoring supplies and equipment for monitoring non-visible pollutants will be available on the project site prior to a sampling event. Monitoring supplies and equipment will be stored in a cool-

temperature environment that will not come into contact with rain or direct sunlight. Sampling personnel will be available to collect samples in accordance with the sampling schedule.

Supplies maintained at the project site will include, but are not limited to, surgical gloves, sample collection equipment, coolers, appropriate number and volume of sample bottles, identification labels, re-sealable storage bags, paper towels, personal rain gear, ice, Sampling Activity Log forms, and Chain of Custody (COC) forms. The Contractor will obtain and maintain the field-testing instruments, as identified in Section 600.5.6, for analyzing samples in the field by Contractor sampling personnel.

Safety practices for sample collection will be in accordance with the Contractor's Health and Safety Plan for the project.

Samples on the project site will be collected by the following laboratory or environmental consultant:

Company Name: To Be Determined (See http://www.cdph.ca.gov/certlic/labs/Pages/ELAP.aspx for California state-certified laboratories)
Address:
Telephone Number:
Point of Contact:

Qualifications of designated Contractor personnel describing environmental sampling training and experience are provided in Attachment I.

SWPPM will contact the laboratory or environmental consultant 24 hours prior to a predicted rain event and if one of the triggering conditions is identified during an inspection before, during, or after a storm event to ensure that adequate sample collection personnel, supplies and field test equipment for monitoring non-visible pollutants are available and will be mobilized to collect samples on the project site in accordance with the sampling schedule.

The laboratory or environmental consultant will obtain and maintain the field-testing instruments, as identified in Section 600.5.6, for analyzing samples in the field by their sampling personnel.

600.5.4 ANALYTICAL CONSTITUENTS

Identification of Non-Visible Pollutants

Table 600-2 lists the specific sources and types of potential non-visible pollutants on the project site and the applicable water quality indicator constituent(s) for that pollutant.

TABLE 600-2
POTENTIAL NON-VISIBLE POLLUTANTS AND WATER QUALITY INDICATOR CONSTITUENTS

Pollutant Source	Pollutant	Water Quality Indicator Constituent

600.5.5 SAMPLE COLLECTION AND HANDLING

Sample Collection Procedures

Samples of discharge will be collected at the designated sampling locations shown on the WPCDs for observed breaches, malfunctions, leakages, spills, operational areas, soil amendment application areas, and historical site usage areas that triggered the sampling event.

Grab samples will be collected and preserved in accordance with the methods identified in the Table 600-3, "Sample Collection, Preservation and Analysis for Monitoring Non-Visible Pollutants," provided in Section 600.5.6. Only personnel trained in proper water quality sampling will collect samples.

Samples will be collected by placing a separate lab-provided sample container directly into a stream of water downgradient and within close proximity to the potential non-visible pollutant discharge location. This separate lab-provided sample container will be used to collect water, which will be transferred to sample bottles for laboratory analysis. The upgradient and uncontaminated background samples shall be collected first prior to collecting the downgradient to minimize cross-contamination. The sampling personnel will collect the water upgradient of where they are standing. Once the separate lab-provided sample container is filled, the water sample will be poured directly into sample bottles provided by the laboratory for the analyte(s) being monitored.

To maintain sample integrity and prevent cross-contamination, sampling collection personnel will:

- Wear a clean pair of surgical gloves prior to the collection and handling of each sample at each location.
- Not contaminate the inside of the sample bottle by not allowing it to come into contact with any material other than the water sample.
- Discard sample bottles or sample lids that have been dropped onto the ground prior to sample collection.
- Not leave the cooler lid open for an extended period of time once samples are placed inside.
- Not sample near a running vehicle where exhaust fumes may impact the sample.
- Not touch the exposed end of a sampling tube, if applicable.
- Avoid allowing rainwater to drip from rain gear or other surfaces into sample bottles.
- Not eat, smoke, or drink during sample collection.
- Not sneeze or cough in the direction of an open sample bottle.
- Minimize the exposure of the samples to direct sunlight, as sunlight may cause biochemical transformation of the sample to take place.
- Decontaminate sampling equipment prior to sample collection using a TSP-soapy water wash, distilled water rinse, and final rinse with distilled water.
- Dispose of decontamination water/soaps appropriately; i.e., not discharge to the storm drain system or receiving water.

Sample Handling Procedures

Immediately following collection, sample bottles for laboratory analytical testing will be capped, labeled, documented on a Chain of Custody form provided by the analytical laboratory, sealed in a re-sealable storage bag, placed in an ice-chilled cooler, at as near to 4 degrees Celsius as practicable, and delivered within 24 hours to the following California state-certified laboratory:

Laboratory Name: To Be Determined
Address:
Telephone Number:
Point of Contact:

Immediately following collection, samples for field analysis will be tested in accordance with the field instrument manufacturer's instructions and results recorded on the Sampling Activity Log.

Sample Documentation Procedures

All original data documented on sample bottle identification labels, Chain of Custody forms, Sampling Activity Logs, and Inspection Checklists will be recorded using waterproof ink. These will be considered accountable documents. If an error is made on an accountable document, the individual will make corrections by lining through the error and entering the correct information. The erroneous information will not be obliterated. All corrections will be initialed and dated. Copies of the Sampling Activity Log and Chain of Custody form are provided in Attachment R.

Sampling and field analysis activities will be documented using the following:

- Sample Bottle Identification Labels: Sampling personnel will attach an identification label to each sample bottle. At a minimum, the following information will be recorded on the label, as appropriate:
  - Project name
  - Project number
  - Unique sample identification number and location. [Project Number]- [Six digit sample collection date]-[Location] (Example: 0G5304-081801-1n1et472).

    Quality assurance/quality control (QA/QC) samples shall be identified similarly using a unique sample number or designation (Example: 0G5304-081801-DUP1).
  - Collection date/time (No time applied to QA/QC samples)
  - Analysis constituent
- Sampling Activity logs: A log of sampling events will identify:
  - Sampling date
  - Separate times for collected samples and QA/QC samples recorded to the nearest minute
  - Unique sample identification number and location
  - Analysis constituent
  - Names of sampling personnel
  - Weather conditions (including precipitation amount)
  - Field analysis results
  - Other pertinent data
- Chain of Custody (COC) forms: All samples to be analyzed by a laboratory will be accompanied by a COC form provided by the laboratory. Only the sample collectors will sign the COC form over to the lab. COC procedures will be strictly adhered to for QA/QC purposes.
- Storm Water Quality Construction Inspection Checklists: When applicable, the Contractor's storm water inspector will document on the checklist that samples for nonvisible pollutants were taken during a rain event.

600.5.6 SAMPLE ANALYSIS

Samples will be analyzed for the applicable constituents using the analytical methods identified in Table 600-3, "Sample Collection, Preservation and Analysis for Monitoring Non-Visible Pollutants" in this section.

TABLE 600-3
SAMPLE COLLECTION, PRESERVATION AND ANALYSIS FOR MONITORING NON-VISIBLE POLLUTANTS

Constituent	Analytical Method	Minimum Sample Volume	Sample Bottle	Sample Preservation	Reporting Limit	Maximum Holding Time

For samples collected for field analysis, collection, analysis and equipment calibration will be in accordance with the field instrument manufacturer's specifications.

The following field instrument(s) will be used to analyzed the following constituents:

Field Instrument	Constituent

- The instrument(s) will be maintained in accordance with manufacturer's instructions.
- The instrument(s) will be calibrated before each sampling and analysis event.
- Maintenance and calibration records will be maintained with the SWPPP.

600.5.7 QUALITY ASSURANCE/QUALITY CONTROL

For an initial verification of laboratory or field analysis, duplicate samples will be collected at a rate of 10 percent or 1 duplicate per sampling event. The duplicate sample will be collected, handled, and analyzed using the same protocols as primary samples. A duplicate sample will be collected at each location immediately after the primary sample has been collected. Duplicates will be collected where contamination is likely, not on the background sample. Duplicate samples will not influence any evaluations or conclusions; however, they will be used as a check on laboratory quality assurance.

600.5.8 DATA MANAGEMENT AND REPORTING

A copy of all water quality analytical results and QA/QC data will be included in the onsite SWPPP within 5 days of sampling (for field analyses) and within 30 days (for laboratory analyses).

Lab reports and COCs will be reviewed for consistency between lab methods, sample identifications, dates, and times for both primary samples and QA/QC samples. All data, including COC forms and Sampling Activity Logs, shall be kept with the SWPPP.

600.5.9 DATA EVALUATION

An evaluation of the water quality sample analytical results, including figures with sample locations, the water quality analytical results, and the QA/QC data, will be included in the on-site SWPPP.

Should the runoff/downgradient sample show an increased level of the tested analyte relative to the background sample, the BMPs, site conditions, and surrounding influences will be assessed to determine the probable cause for the increase. As determined by the site and data evaluation, appropriate BMPs will be repaired or modified to mitigate discharges of non-visual pollutant concentrations. Any revisions to the BMPs will be recorded as an amendment to the SWPPP.

600.5.10 CHANGE OF CONDITIONS

Whenever SWPPP monitoring, pursuant to Section B of the General Permit, indicates a change in site conditions that might affect the appropriateness of sampling locations or introduce additional non-visible pollutants of concern, testing protocols will be revised accordingly. All such revisions will be recorded as amendments to the SWPPP.

ATTACHMENT A

Vicinity Map

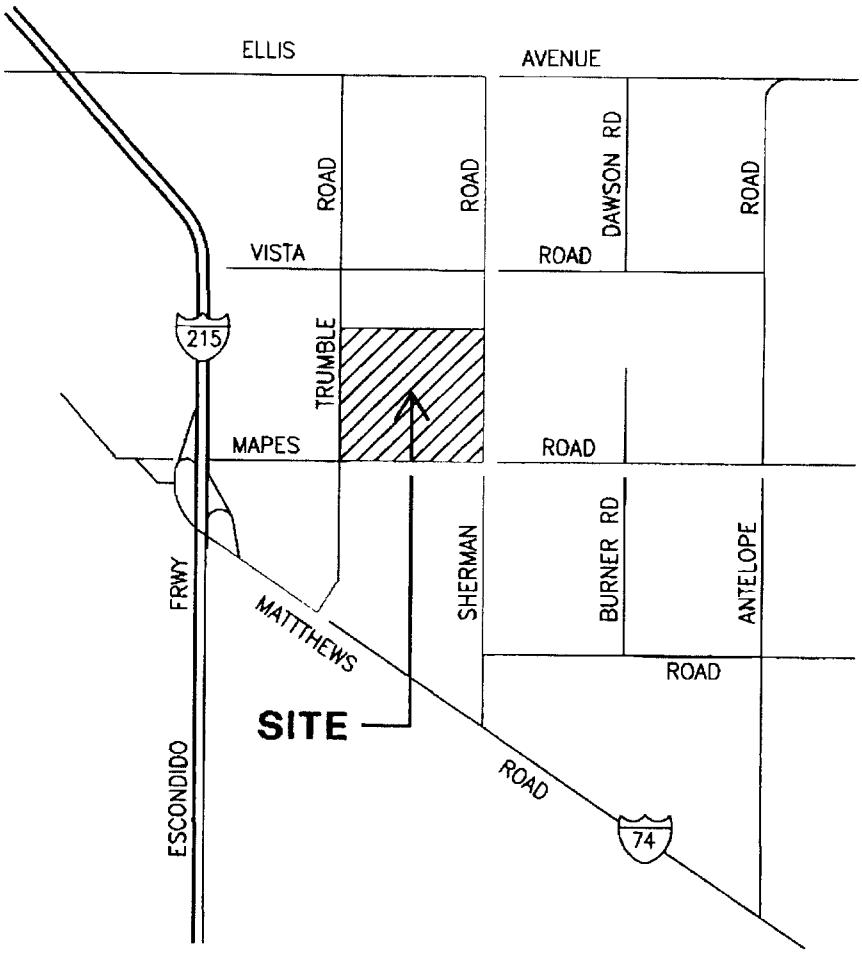

TOWNSHIP 5 SOUTH RANGE 3 WEST SECTION 3

N

VICINITY MAP

NO SCALE

ATTACHMENT A-1

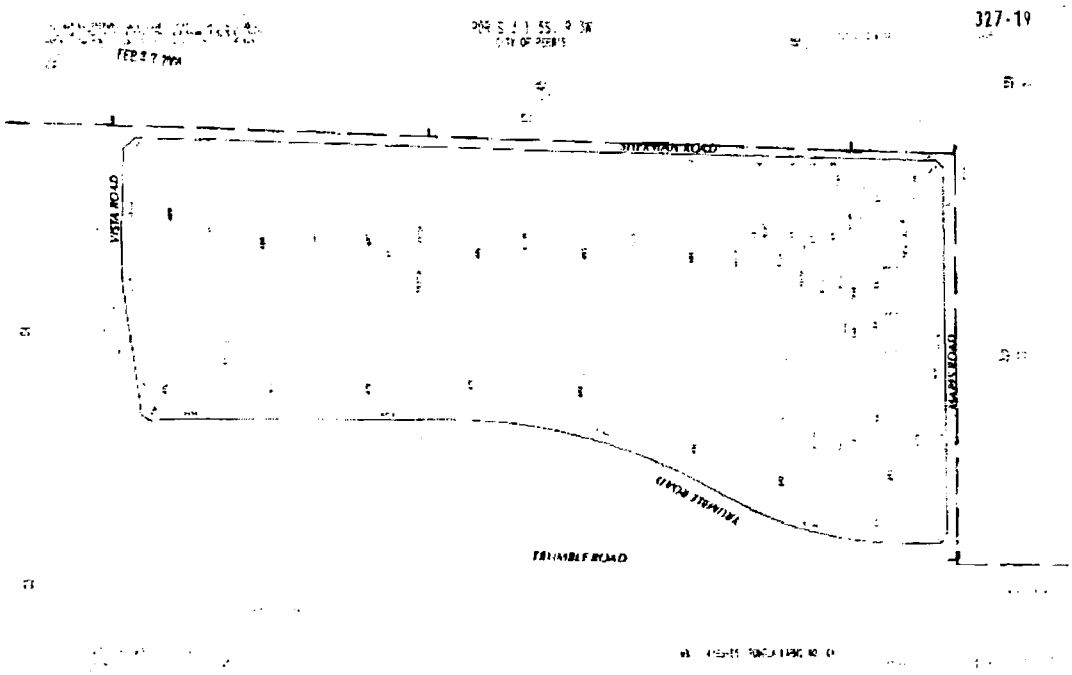

PARCEL EXHIBIT

NO SCALE

ATTACHMENT A-2

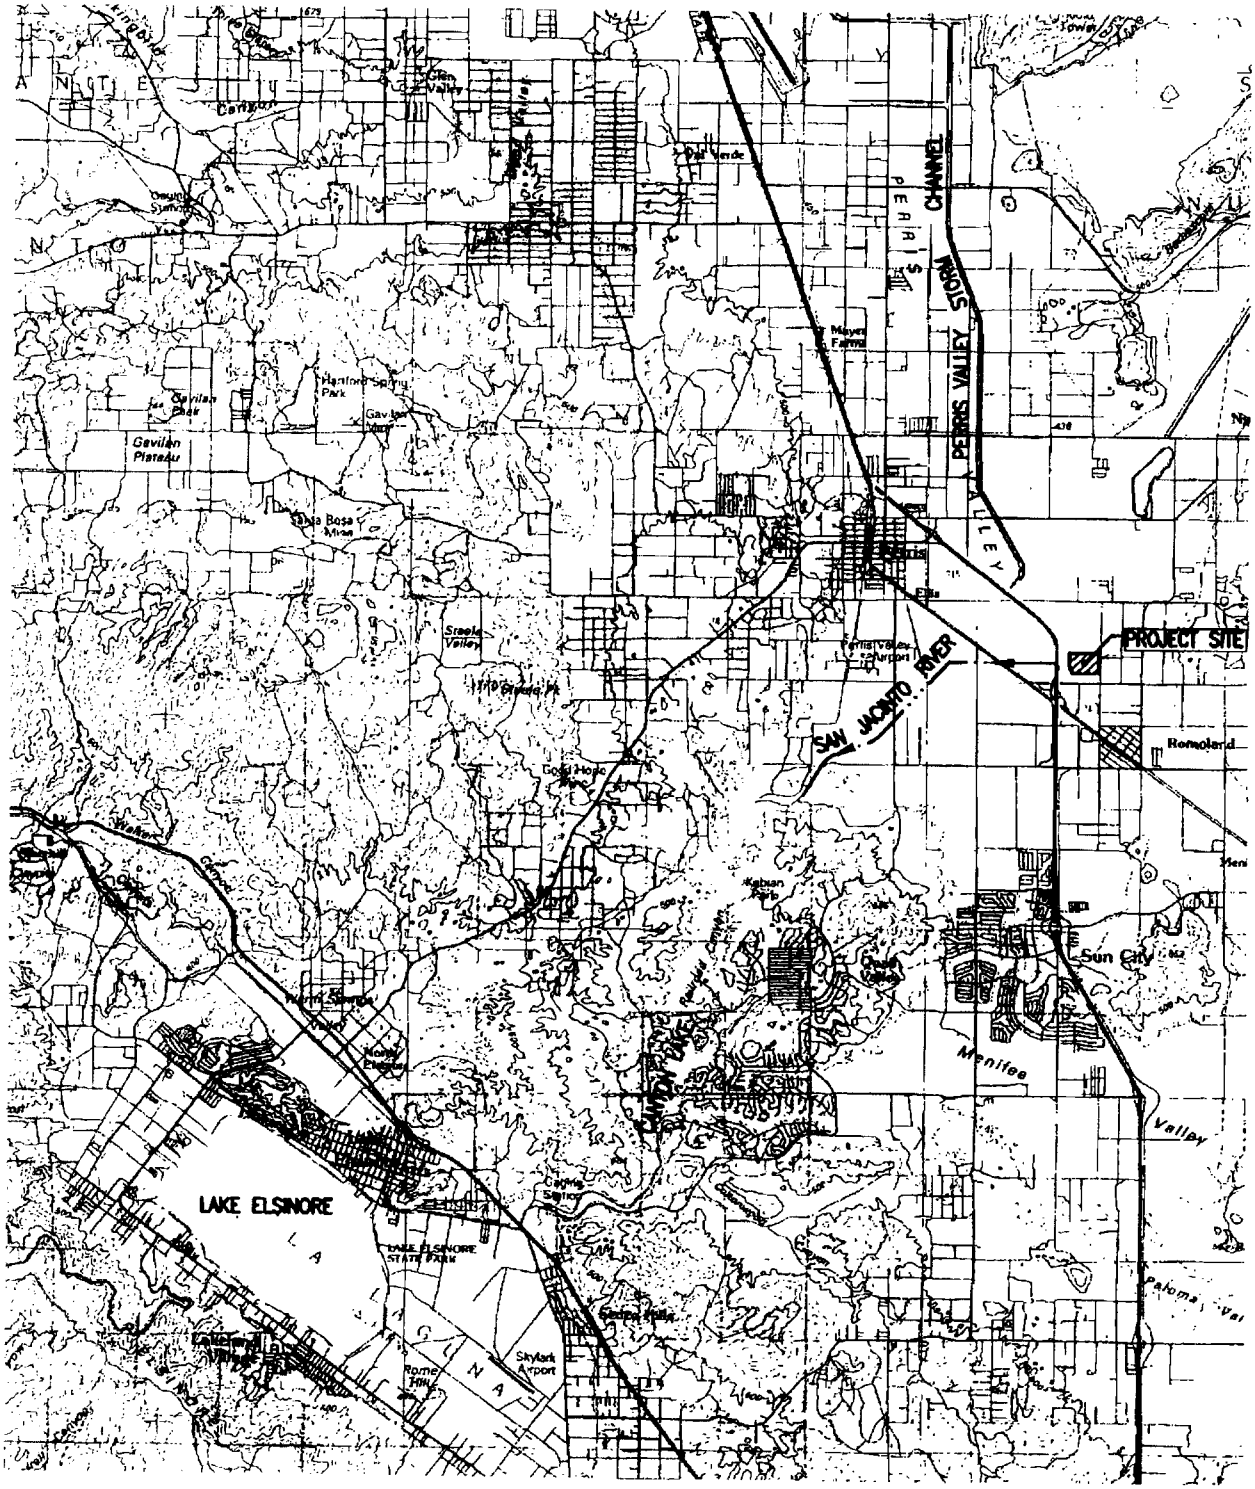

SOURCE: USGS 1983 TOPOGRAPHIC MAP OF SANTA ANA, CA (N3330-W11700/30X60)

RECEIVING WATERS MAP

NO SCALE

ATTACHMENT A-3

ATTACHMENT B

Water Pollution Control Drawings (WPCDs)

ATTACHMENT C

BMP Consideration Checklist

CONSTRUCTION SITE BMPs CONSIDERATION CHECKLIST					
The BMPs listed here should be considered for every project. Those BMPs that are not included in the SWPPP must be checked as "Not Used" with a brief statement describing why it is not being used.					
EROSION CONTROL BMPs					
BMP No.	BMP	CONSIDERED FOR PROJECT	CHECK IF USED	CHECK IF NOT USED	IF NOT USED, STATE REASON
EC-1	Scheduling	YES	XX		
EC-2	Preservation of Existing Vegetation	YES	XX		
EC-3	Hydraulic Mulch	YES		XX	Gravel bags used
EC-4	Hydroseeding	YES		XX	Gravel bags used
EC-5	Soil Binders	YES		XX	Gravel bags used
EC-6	Straw Mulch	YES		XX	Gravel bags used
EC-7	Geotextiles & Mats	YES		XX	Gravel bags used
EC-8	Wood Mulching	YES		XX	Gravel bags used
EC-9	Earth Dikes & Drainage Swales	YES		XX	No offsite run-on
EC-10	Velocity Dissipation Devices	YES		XX	No concentrated flow
EC-11	Slope Drains	YES		XX	No large sloping areas

CONSTRUCTION SITE BMPs
CONSIDERATION CHECKLIST

The BMPs listed here should be considered for every project. Those BMPs that are not included in the SWPPP must be checked as "Not Used" with a brief statement describing why it is not being used.

BMP No.	BMP	CONSIDERED FOR PROJECT	CHECK IF USED	CHECK IF NOT USED	IF NOT USED, STATE REASON
SEDIMENT CONTROL BMPs					
SC-1	Silt Fence	YES		XX	Gravel bags used
SC-2	Sediment Basin	YES		XX	Gravel bags used
SC-3	Sediment Trap	YES		XX	Area too large
SC-4	Check Dam	YES		XX	No open channels
SC-5	Fiber Rolls	YES		XX	Gravel bags used
SC-6	Gravel Bag Berm	YES	XX		
SC-7	Street Sweeping and Vacuuming	YES	XX		
SC-8	Sand Bag Barrier	YES		XX	Gravel bags used
SC-9	Straw Bale Barrier	YES		XX	Gravel bags used
SC-10	Storm Drain Inlet Protection	YES	XX		
WIND EROSION CONTROL BMPs					
WE-1	Wind Erosion Control	YES	XX		
TRACKING CONTROL BMPs					
TC-1	Stabilized Construction Entrance/Exit	YES	XX		
TC-2	Stabilized Construction Roadway	YES		XX	TC-1 used
TC-3	Entrance/Outlet Tire Wash	YES		XX	

CONSTRUCTION SITE BMPs
CONSIDERATION CHECKLIST

The BMPs listed here should be considered for every project. Those BMPs that are not included in the SWPPP must be checked as "Not Used" with a brief statement describing why it is not being used.

NON-STORM WATER MANAGEMENT BMPs					
BMP No.	BMP	CONSIDERED FOR PROJECT	CHECK IF USED	CHECK IF NOT USED	IF NOT USED, STATE REASON
NS-1	Water Conservation Practices	YES	XX		
NS-2	Dewatering Operations	YES		XX	Insignificant water on site
NS-3	Paving and Grinding Operations	YES	XX		
NS-4	Temporary Stream Crossing	YES		XX	No streams
NS-5	Clear Water Diversion	YES		XX	No water courses
NS-6	Illicit Connection/ Discharge	YES	XX		
NS-7	Potable Water/Irrigation	YES	XX		
NS-8	Vehicle and Equipment Cleaning	YES		XX	No cleaning allowed
NS-9	Vehicle and Equipment Fueling	YES		XX	No fueling allowed
NS-10	Vehicle and Equipment Maintenance	YES		XX	No maintenance allowed
NS-11	Pile Driving Operations	YES		XX	No piles
NS-12	Concrete Curing	YES	XX		
NS-13	Concrete Finishing	YES	XX		
NS-14	Material and Equipment Use Over Water	YES		XX	Not over water
NS-15	Demolition Adjacent to Water	YES		XX	Not adjacent to water
NS-16	Temporary Batch Plants	YES		XX	No batch plants

CONSTRUCTION SITE BMPs
CONSIDERATION CHECKLIST

The BMPs listed here should be considered for every project. Those BMPs that are not included in the SWPPP must be checked as "Not Used" with a brief statement describing why it is not being used.

WASTE MANAGEMENT AND MATERIALS POLLUTION CONTROL BMPs

BMP No.	BMP	CONSIDERED FOR PROJECT	CHECK IF USED	CHECK IF NOT USED	IF NOT USED, STATE REASON
WM-1	Material Delivery and Storage	YES	XX		
WM-2	Material Use	YES	XX		
WM-3	Stockpile Management	YES	XX		
WM-4	Spill Prevention and Control	YES	XX		
WM-5	Solid Waste Management	YES	XX		
WM-6	Hazardous Waste Management	YES		XX	No hazardous waste
WM-7	Contaminated Soil Management	YES		XX	No contaminated soil
WM-8	Concrete Waste Management	YES	XX		
WM-9	Sanitary/Septic Waste Management	YES	XX		
WM-10	Liquid Waste Management	YES		XX	No liquid waste

ATTACHMENT D

Computation Sheet for Determining Runoff Coefficients

Total Site Area	=	36.1 Acres	(A)

Existing Site Conditions

Impervious Site Area [1]	=	3.61 Acres	(B)
Impervious Site Area Runoff Coefficient [2, 4]	=	0.95	(C)
Pervious Site Area [3]	=	32.49 Acres	(D)
Pervious Site Area Runoff Coefficient [4]	=	0.30	(E)
Existing Site Area Runoff Coefficient $\frac{(B \times C) + (D \times E)}{(A)}$	=	0.36	(F)

Proposed Site Conditions (after construction)

Impervious Site Area [1]	=	7.22 Acres	(G)
Impervious Site Area Runoff Coefficient [2, 4]	=	0.95	(H)
Pervious Site Area [3]	=	28.88 Acres	(I)
Pervious Site Area Runoff Coefficient [4]	=	0.20	(J)
Proposed Site Area Runoff Coefficient $\frac{(G \times H) + (I \times J)}{(A)}$	=	0.35	(K)

1. Includes paved areas, areas covered by buildings, and other impervious surfaces.
2. Use 0.95 unless lower or higher runoff coefficient can be verified.
3. Includes areas of vegetation, most unpaved or uncovered soil surfaces, and other pervious areas.
4. Refer to local Hydrology Manual for typical C values.

ATTACHMENT E

Computation Sheet for Determining Run-on Discharges

Existing Site Conditions

Area Runoff Coefficient		=	_____	(A)
Area Rainfall Intensity		=	_____ in/hr	(B)
Drainage Area		=	0.0 Acres	(C)
Site Area Run-on Discharge	(A) x (B) x (C)	=	0.0 ft^3/sec	(D)

ATTACHMENT F

Notice of Intent (NOI)

CALIFORNIA REGIONAL WATER QUALITY CONTROL BOARD – SANTA ANA REGION

NOTICE OF INTENT

TO COMPLY WITH THE TERMS OF THE RIVERSIDE COUNTY MUNICIPAL STORMWATER PERMIT FOR STORMWATER DISCHARGES ASSOCIATED WITH CONSTRUCTION ACTIVITIES

ORDER No. R8-2002-0011 (NPDES No. CAS618033)

MARK ONLY ONE ITEM 1. ☒ New Construction 2. ☐ Reconstruction 3. ☐ Change of Information for WDID# _____

I. OWNER

Name Redevelopment Agency for the County of Riverside	Contact Person Tina English		
Mailing Address 1325 Spruce Street, Suite 400	Title Deputy Executive Director		
City Riverside	State CA	Zip 92507	Phone (951) 955 –8916 Fax (951)955 –6686 Email diombardi@rivcoeda.org

II. CONTRACTOR INFORMATION

Name TBD	Contact Person		
Local Mailing Address	Title		
City	State	Zip	Phone ( ) – Fax ( ) – Email

III. SITE INFORMATION

A. Project Title Big League Dreams Perris Valley	Site Address 2155 Trumble Road		
City Perris	State CA	Zip 92570	Contact Person Phone (951)955 –8916
B. Construction commencement date. (Month / Day / Year) 12/1/2009	C. Projected construction completion date (Month / Day / Year) 1/1/2011		

D. Type of Work ☐ Utility ☐ Flood Control ☐ Transportation ☒ Other (Specify) Commercial

Description of Work: Sports Park Facility (Softball/Baseball Fields, Playgrounds, Restaurant)

E. Total size of site. 35 Acres

IV. RECEIVING WATER INFORMATION

A. Does the storm water runoff from the construction site discharge to (Check all that apply)

1. ☒ Indirectly to waters of the U S
2. ☐ Storm drain system - Enter owner's name _____
3. ☐ Directly to waters of U S. (e.g., river, lake, creek, stream, bay, ocean, etc.) _____

V. IMPLEMENTATION OF NPDES PERMIT REQUIREMENTS

A. STORM WATER POLLUTION PREVENTION PLAN (SWPPP) (mark one)
- ☐ A SWPPP has been prepared for this facility and is available for review
- ☒ A SWPPP will be prepared and ready for review by (date). 10 / 1 / 09

B. MONITORING PROGRAM (MP) (mark one)
- ☐ A MP has been prepared for this facility and is available for review
- ☒ A MP will be prepared and ready for review by (date). 10 / 1 / 09

VI. CERTIFICATIONS

"I certify under penalty of law that this document and all attachments were prepared under my direction and supervision in accordance with a system designed to assure that qualified personnel properly gather and evaluate the information submitted. Based on my inquiry of the person or persons who manage the system, or those persons directly responsible for gathering the information, the information submitted is, to the best of my knowledge and belief, true, accurate, and complete. I am aware that there are significant penalties for submitting false information, including the possibility of fine or imprisonment. In addition, I certify that the Provisions No. 15-20 of Order No. 96-30, including the development and implementation of a Storm Water Pollution Prevention Plan and a Monitoring Program Plan, will be complied with."

Printed Name: Tina English

Title: Deputy Executive Director

Signature: Tina English

Date: 8/11/09

CALIFORNIA REGIONAL WATER QUALITY CONTROL BOARD – SANTA ANA REGION

NOTICE OF CONSTRUCTION

TO COMPLY WITH THE TERMS OF THE RIVERSIDE COUNTY MUNICIPAL STORMWATER PERMIT
FOR STORMWATER DISCHARGES ASSOCIATED WITH CONSTRUCTION ACTIVITIES
ORDER No. 96-30 (NPDES No. CAS618033)

Tracting WDID: **8 33M000356** (STATUS) **A** NOC Received by **Mail**

Project Type New Construction Receive Date **Aug 12, 2009**

MUNICIPAL OWNER INFORMATION

County Code: **33** 30 (Orange County, 33 (Riverside County), 36 (San Bernardino)

Municipal Name: **County of Riverside Economic Development Agency**

Mailing Address: **1325 Spruce Street, Ste. 400**

City: **Riverside** State-Zip: **CA 92507**

Contact Person: **Tina English** Phone Number: **(951) 955-9816**

CONTRACTOR INFORMATION

Contractor Name: **TBD**

Mailing Address:

City: State-Zip:

Contact Person: Phone Number:

SITE INFORMATION

Site Name: **Big League Dreams Perris Valley**

Site Address: **2155 Trumble Road**

City: **Perris** State-Zip: **CA 92570**

Type of Work: **Other**

Project Description: **Sport Park Facility (Softball/baseball fields, playgrounds, restaurant)**

Total size	Size Unit	Project start date	ect estimated complete
35	**Acres**	**Dec 01, 2009**	**Jan 01, 2011**

RECEIVING WATER INFORMATION

Storm Drain System (owner name): **County of Riverside Economic Development Agency**

Discharge Type: Name of water body:

PERMIT REQUIREMENT

SWPPP

SWPPP's at site for review ☐ SWPPP's being prepared and availabe on: **10/1/2009**

Monitoring Program

MP at site for review ☐ MP's being prepared and available on: **10/1/2009**

CERTIFICATION

Document signed by: **Tina English** Date of signature: **Aug 11, 2009**

Person's title: **Assistant Director**

ATTACHMENT G

Program for Maintenance, Inspection, & Repair of Construction Site BMPs

The contractor shall use the following guidelines for maintenance, inspection, and repair of BMPs identified in the SWPPP		
BEST MANAGEMENT PRACTICES (BMPs)	**INSPECTION FREQUENCY (all controls)**	**MAINTENANCE/REPAIR PROGRAM**
TEMPORARY EROSION CONTROL BMPs		
EC-2 Preservation of Existing Vegetation	Monthly	■ Maintain Plants, water as needed, weed as needed
TEMPORARY SEDIMENT CONTROL BMPs		
SC-7 Street Sweeping and Vacuuming	Daily/Weekly as needed	■ During high traffic days clean and sweep daily, otherwise weekly.
SC-6 Gravel Bag Berm	Weekly during non-rainy season, daily during rainy season.	■ Maintain trapping characteristics, repair breaches as necessary
SC-10 Storm Drain Inlet Protection	Weekly during non-rainy season, daily during rainy season.	■ Maintain trapping characteristics, repair breaches as necessary
WIND EROSION CONTROL BMPs		
WE-1 Wind Erosion Control	Daily during high winds	■ Wet down area as needed
TRACKING CONTROL BMPs		
TC-1,Stabilized Construction Entrance	Weekly	■ Clean out debris and sediment as needed
NON-STORM WATER MANAGEMENT BMPs		
NS-1 Water Conservation Practices	Daily	■ Repair leaks as necessary
NS-3 Paving and Grinding Operations	Daily	■ Maintain traps and diversions, repair as necessary.
NS-6 Illicit Connection/Discharge	Weekly	■ Maintain protections, review violations
NS-7 Potable Water/Irrigation	Weekly	■ Maintain irrigation systems and repair leaks/faulty systems
WASTE MANAGEMENT AND MATERIALS POLLUTION CONTROL BMPs		
WM-1 Material Delivery and Storage	Weekly during non-rainy season, daily during rainy season.	■ Maintain covers and sandbag protection around area. Repair breaks as necessary.
WM-5 Solid Waste Management	Weekly	■ Maintain covers and sandbag protection around area. Repair breaks as necessary
WM-8 Concrete Waste Management	Weekly	■ Clean area weekly and dispose of waste in approved manner. Repair any areas needed
WM-9 Sanitary/Septic Waste Management	Daily	■ Keep area clean and service toilets as recommended.

ATTACHMENT H

Storm Water Quality Construction Site Inspection Checklist

GENERAL INFORMATION				
Project Name	PERRIS VALLEY BIG LEAGUE DREAMS			
Project N°	NEC TRUMBLE ROAD AND MAPES ROAD			
Contractor				
Inspector's Name				
Inspector's Title				
Signature				
Date of Inspection				
Inspection Type (Check Applicable)	❒ Prior to forecast rain ❒ 24-hr intervals during extended rain		❒ After a rain event ❒ Other _____	
Season (Check Applicable)	❒ Rainy		❒ Non-Rainy	
Storm Data	Storm Start Date & Time:		Storm Duration (hrs):	
	Time elapsed since last storm (Circle Applicable Units)	Min. Hr. Days	Approximate Rainfall Amount (inches)	

PROJECT AREA SUMMARY AND DISTURBED SOIL AREA (DSA) SIZE		
Total Project Area	_____	Acres
Field Estimate of Active DSAs	_____	Acres
Field Estimate of Non-Active DSAs	_____	Acres

INSPECTION OF BMPs				
BMP	**Yes**	**No**	**N/A**	**Corrective Action**
Preservation of Existing Vegetation				
Is temporary fencing provided to preserve vegetation in areas where no construction activity is planned?				
Location:				
Location:				
Location:				
Location:				
Erosion Control				
Does the applied temporary erosion control provide 100% coverage for the affected areas?				
Are any non-vegetated areas that may require temporary erosion control?				
Is the area where erosion controls are used required free from visible erosion?				
Location:				
Location:				
Location:				
Location:				
Temporary Linear Sediment Barriers (Silt Fence, Fiber Rolls, Sandbag Barriers, etc.)				
Are temporary linear sediment barriers properly installed, functional and maintained?				
Are temporary linear sediment barriers free of accumulated litter?				
Is the built-up sediment less than 1/3 the height of the barrier?				
Are cross barriers installed where necessary and properly spaced?				
Location:				
Location:				
Location:				
Location:				
Location:				
Storm Drain Inlet Protection				
Are storm drain inlets internal to the project properly protected?				
Are storm drain inlet protection devices in working order and being properly maintained?				
Location:				

INSPECTION OF BMPs				
BMP	**Yes**	**No**	**N/A**	**Corrective Action**
Location:				
Location:				
Location:				
Location:				
Stockpiles				
Are all locations of temporary stockpiles, including soil, hazardous waste, and construction materials in approved areas?				
Are stockpiles protected from run-on, run-off from adjacent areas and from winds?				
Are stockpiles located at least 15 m from concentrated flows, downstream drainage courses and storm drain inlets?				
Are required covers and/or perimeter controls in place?				
Location:				
Location:				
Location:				
Location:				
Concentrated Flows				
Are concentrated flow paths free of visible erosion?				
Location:				
Location:				
Location:				
Location:				
Tracking Control				
Is the entrance stabilized to prevent tracking				
Is the stabilized entrance inspected daily to ensure that it is working properly				
Are points of ingress/egress to public/private roads inspected and swept and vacuumed as needed?				
Are all paved areas free of visible sediment tracking or other particulate matter?				
Location:				
Location:				
Location:				
Location:				

Wind Erosion Control				
Is dust control implemented?				
Location:				
Location:				
Location:				
Location:				
Dewatering Operations				
Are all one-time dewatering operations covered by the General Permit inspected before and as they occur and BMPs implemented as necessary during discharge?				
Is ground water dewatering handled in conformance with the dewatering permit issued by the RWQCB?				
Is required treatment provided for dewatering effluent?				
Location:				
Location:				
Location:				
Location:				
Vehicle & Equipment Fueling, Cleaning, and Maintenance				
Are vehicle and equipment fueling, cleaning and maintenance areas reasonably clean and free of spills, leaks, or any other deleterious material?				
Are vehicle and equipment fueling, cleaning and maintenance activities performed on an impermeable surface in dedicated areas?				
If no, are drip pans used?				
Are dedicated fueling, cleaning, and maintenance areas located at least 15 m away from downstream drainage facilities and watercourses and protected from run-on and runoff?				
Is wash water contained for infiltration/ evaporation and disposed of appropriately?				
Is on-site cleaning limited to washing with water (no soap, soaps substitutes, solvents, or steam)?				
On each day of use, are vehicles and equipment inspected for leaks and if necessary, repaired?				
Location:				
Location:				
Location:				
Location:				

Waste Management & Materials Pollution Control				
Are material storage areas and washout areas protected from run-on and runoff, and located at least 15 m from concentrated flows and downstream drainage facilities?				
Are all material handling and storage areas clean; organized; free of spills, leaks, or any other deleterious material; and stocked with appropriate clean-up supplies?				
Are liquid materials, hazardous materials, and hazardous wastes stored in temporary containment facilities?				
Are bagged and boxed materials stored on pallets?				
Are hazardous materials and wastes stored in appropriate, labeled containers?				
Are proper storage, clean-up, and spill-reporting procedures for hazardous materials and wastes posted in open, conspicuous and accessible locations adjacent to storage areas?				
Are temporary containment facilities free of spills and rainwater?				
Are temporary containment facilities and bagged/boxed materials covered?				
Are temporary concrete washout facilities designated and being used?				
Are temporary concrete washout facilities functional for receiving and containing concrete waste and are concrete residues prevented from entering the drainage system?				
Do temporary concrete washout facilities provide sufficient volume and freeboard for planned concrete operations?				
Are concrete wastes, including residues from cutting and grinding, contained and disposed of off-site or in concrete washout facilities?				
Are spills from mobile equipment fueling and maintenance properly contained and cleaned up?				
Is the site free of litter?				
Are trash receptacles provided in the yard, field trailer areas, and at locations where workers congregate for lunch and break periods?				
Is litter from work areas collected and placed in watertight dumpsters?				
Are waste management receptacles free of leaks?				

Are the contents of waste management receptacles properly protected from contact with storm water or from being dislodged by winds?				
Are waste management receptacles filled at or beyond capacity?				
Location:				
Location:				
Location:				
Location:				
Illicit Connection/ Discharge				
Is there any evidence of illicit discharges or illegal dumping on the project site?				
If yes, has the Owner/Operator been notified?				
Location:				
Location:				
Location:				
Location:				
Discharge Points				
Are discharge points and discharge flows free from visible pollutants?				
Are discharge points free of any significant sediment transport?				
Location:				
Location:				
Location:				
Location:				
SWPPP Update				
Does the SWPPP and Project Schedule adequately reflect the current site conditions and contractor operations?				
Are all BMPs shown on the water pollution control drawings installed in the proper location(s) and according to the details in the SWPPP?				
Location:				
Location:				
Location:				
Location:				
General				
Are there any other potential concerns at the site?				
Location:				
Location:				

Location:				
Location:				

Storm Water Monitoring				
Does storm water discharge directly to a water body listed in the General Permit as impaired for sediment/sedimentation or turbidity?				
If yes, were samples for sediment/sedimentation or turbidity collected pursuant to the sampling and analysis plan in the SWPPP?				
Did the sampling results indicate that the discharges are causing or contributing to further impairment?				
If yes, were the erosion/sediment control BMPs improved or maintained to reduce the discharge of sediment to the water body?				
Were there any BMPs not properly implemented or breaches, malfunctions, leakages or spills observed which could result in the discharge of pollutants to surface waters that would not be visually detectable in storm water?				
If yes, were samples for non-visually detectable pollutants collected pursuant to the sampling and analysis plan during rain events?				
If sampling indicated pollution of the storm water, were the leaks, breaches, spills, etc. cleaned up and the contaminated soil properly disposed of?				
Were the BMPs maintained or replaced?				
Were soil amendments (e.g., gypsum, lime) used on the project?				
If yes, were samples for non-visually detectable pollutants collected pursuant to the sampling and analysis plan in the SWPPP?				
If sampling indicated pollution of the storm water by the use of the soil amendments, is there a contingency plan for retention onsite of the polluted storm water?				
Did storm water contact stored materials or waste and run off the construction site? (Materials not in watertight containers, etc.)				
If yes, were samples for non-visually detectable pollutants collected pursuant to the sampling and analysis plan in the SWPPP?				

ATTACHMENT I

Trained Contractor Personnel Log

(1) STORM WATER MANAGEMENT TRAINING LOG

Project Name: **PERRIS VALLEY BIG LEAGUE DREAMS**

Project Number/Location: **NEC TRUMBLE ROAD AND MAPES ROAD**

Storm Water Management Topic: (check as appropriate)

- ❑ Erosion Control
- ❑ Sediment Control
- ❑ Wind Erosion Control
- ❑ Tracking Control
- ❑ Non-storm water management
- ❑ Waste Management and Materials Pollution Control
- ❑ Storm Water Sampling

Specific Training Objective: _____

Location: _____ Date: _____

Instructor: _____ Telephone: _____

Course Length (hours): _____

(2) ATTENDEE ROSTER (ATTACH ADDITIONAL FORMS IF NECESSARY)

Name	Company	Phone

Name	Company	Phone

COMMENTS:

ATTACHMENT J

Subcontractor Notification Letter and Notification Log

SWPPP NOTIFICATION

Company
Address
City, State, ZIP

Dear Sir/Madam,

Please be advised that the California State Water Resources Control Board has adopted the General Permit (General Permit) for Storm Water Discharges Associated with Construction Activity (CAS000002). The goal of these permits is prevent the discharge of pollutants associated with construction activity from entering the storm drain system, ground and surface waters.

County of Riverside has developed a Storm Water Pollution Prevention Plan (SWPPP) in order to implement the requirements of the Permits.

As a subcontractor, you are required to comply with the SWPPP and the Permits for any work that you perform on site. Any person or group who violates any condition of the Permits may be subject to substantial penalties in accordance with state and federal law. You are encouraged to advise each of your employees working on this project of the requirements of the SWPPP and the Permits. A copy of the Permits and the SWPPP are available for your review at the construction office. Please contact me if you have further questions.

Sincerely,

Name
Title

SUBCONTRACTOR NOTIFICATION LOG

Project Name: **PERRIS VALLEY BIG LEAGUE DREAMS**

Project Number/Location: **NEC TRUMBLE ROAD AND MAPES ROAD**

SUBCONTRACTOR COMPANY NAME	CONTACT NAME	ADDRESS	PHONE NUMBER	PAGER/ FIELD PHONE	DATE NOTIFICATION LETTER SENT	TYPE OF WORK

USE ADDITIONAL PAGES AS NECESSARY

ATTACHMENT K

Notice of Non-Compliance

To: Date:

Subject: Notice of Non-Compliance

Project Name: **PERRIS VALLEY BIG LEAGUE DREAMS**

Project Number/Location: **NEC TRUMBLE ROAD AND MAPES ROAD**

In accordance with the NPDES Statewide Permit for Storm Water Discharges Associated with Construction Activity, the following instance of discharge is noted:

Date, time, and location of discharge

Nature of the operation that caused the discharge

Initial assessment of any impact cause by the discharge

Existing BMP(s) in place prior to discharge event

Date of deployment and type of BMPs deployed after the discharge.

Steps taken or planned to reduce, eliminate and/or prevent recurrence of the discharge

Implementation and maintenance schedule for any affected BMPs

If further information or a modification to the above schedule is required, notify the contact person below.

Name of Contact Person	***Title***
Company	***Telephone Number***
Signature	***Date***

ATTACHMENT L

Storm Water Pollution Prevention Plan (SWPPP) and Monitoring Program Checklist

CONSTRUCTION PROJECT: **PERRIS VALLEY BIG LEAGUE DREAMS**

CONTRACTOR: _____

CONTRACT NO: _____

SECTION A: STORM WATER POLLUTION PREVENTION PLAN (SWPPP)				
CHECK IF ADDRESSED N/A IF NOT APPLICABLE	***SWPPP Section***	***ITEM***	**GENERAL PERMIT REF.**	***COMMENTS***
XX	100	***SWPPP Certification and Approval***	**C.10**	
XX	100.1	SWPPP Certification	**C.10**	
XX	100.2	SWPPP Approval	**C.10**	
XX	200	***SWPPP Amendments***	**A.4.a, A.16**	
XX	200.1	Amendment number and date entered into SWPPP – Amendment Log	**A.4.a, A.16**	
XX	200.2	Amendment Certification and Approval	**A.4.a, A.16**	
XX	300	***Introduction/Project Description***		
XX	300.1	Project Description and Location (narrative)	**A.5.a.1**	
XX	300.2	Unique Site Features (narrative)	**A.5.a.1**	
XX	300.4	***Project Schedule (narrative and graphical)***	**A.5.c.5**	
XX	400	***References***	**A.14**	
XX	500.2	***Vicinity Map (narrative or graphic)***	**A.5.a.1**	
XX	500.2	Site perimeter	A.5.a.1	
XX	500.2	Geographic Features	A.5.a.1	
XX	500.2	General topography	A.5.a.1	
XX	500.4	***Water Pollution Control Drawings (WPCDs) (graphic or narrative)***	A.5.a.2	
XX	500.4	**Site perimeter**	**A.5.a.2**	
XX	500.4	Existing and proposed buildings, lots, and roadways	**A.5.a.2**	

SECTION A: STORM WATER POLLUTION PREVENTION PLAN (SWPPP)				
CHECK IF ADDRESSED N/A IF NOT APPLICABLE	*SWPPP Section*	*ITEM*	GENERAL PERMIT REF.	*COMMENTS*
XX	500.4	Storm water collection and discharge points	**A.5.a.2**	
XX	500.4	General topography before and after construction	**A.5.a.2**	
XX	500.4	Anticipated discharge location(s)	**A.5.a.2**	
XX	500.4	Drainage patterns including the entire relevant drainage areas	**A.5.a.2**	
XX	500.4	Temporary on-site drainage(s)	**A.5.a.2**	
XX	500.3	***Pollutant Source and BMP Identification (narrate/ or indicate on site map)***	A.5.b	
XX		***Drainage***	A.5.b.1	
XX	500.4	Drainage patterns after major grading	A.5.b.1	
XX	500.4	Slopes after major grading	A.5.b.1	
XX	Attach. E	Calculations for storm water run-on	A.5.b.1	
XX	500.4	BMPs that divert off-site drainage from passing through site	A.5.b.1	
XX	500.4	***Storm Water Inlets***	A.5.b.2	
XX	500.4	Drainage patterns to storm water inlets or receiving water	A.5.b.2	
XX	500.4	BMPs that protect storm water inlets or receiving water	A.5.b.2	
XX		***Site History (narrative; if possible, indicate location(s) on the Water Pollution Control Drawings)***	A.5.b	
XX	500.3.3	Nature of fill material and data describing the soil. Description of toxic materials treated, stored, disposed, spilled or leaked on site	A.5.b.3	
XX	500.3.8 & 500.3.9	BMPs that minimize contact of contaminants with storm water	A.5.b.3	
XX		***Location of Areas Designated for:***	A.5.b.4	
XX	500.3.8 & 500.4	Vehicle storage & service	A.5.b.4	
XX	500.3.8 & 500.4	Equipment storage, cleaning, maintenance	A.5.b.4	
XX	500.3.9 & 500.4	Soil or waste storage	A.5.b.4	
XX	500.3.9 & 500.4	Construction material loading, unloading, storage and access	A.5.b.4	

SECTION A: STORM WATER POLLUTION PREVENTION PLAN (SWPPP)				
CHECK IF ADDRESSED N/A IF NOT APPLICABLE	*SWPPP Section*	*ITEM*	GENERAL PERMIT REF.	*COMMENTS*
XX	500.3.8 & 500.3.9	Areas outside of physical site (yards, borrow areas, etc.)		
XX		***BMP Locations or Descriptions for:***	A.5.b.5	
XX	500.3.9 & 500.4	Waste handling and disposal areas	A.5.b.5	
XX	500.3.9 & 500.4	On-site storage and disposal of construction materials and waste	A.5.b.5	
XX	500.3.8, 500.3.9 & 500.4	Minimum exposure of storm water to construction materials, equipment, vehicles, waste	A.5.b.5	
XX	500.6	***Post Construction BMPs***	A.5.b.6	
XX	500.6.1	Listing or Description of Post-construction BMPs	A.5.b.6	
XX	500.4	Location of post-construction BMPs	A.5.b.6	
XX	500.6.2	Parties responsible for long-term maintenance	A.5.b.6	
XX		***Additional Information***	A.5.c	
XX	500.3.1	Description of other pollutant sources and BMPs	A.5.c.1	
XX	500.3.2	Pre-construction control practices	A.5.c.1	
XX	500.3.1	Inventory of materials and activities that may pollute storm water	A.5.c.2	
XX	500.3.8 & 500.3.9	BMPs to reduce/eliminate potential pollutants listed in the inventory	A.5.c.2	
XX	300.4	Runoff coefficient (before & after)	A.5.c.3	
XX	300.4	Percent impervious (before & after)	A.5.c.3	
XX	Attach. F	Copy of the NOT	A.5.c.4	
XX	300.3	Construction activity schedule	A.5.c.5	
XX	300.5	Contact information	A.5.c.6	
XX	500.4.1	**SOIL STABILIZATION (EROSION CONTROL)**	A.6	
XX		***The SWPPP shall include:***	A.6.a-c	
XX	500.4	Areas of vegetation on site	A.6.a.1	
XX	500.4	Areas of soil disturbance that will be stabilized during rainy season	A.6.a.2	
XX	500.4	Areas of soil disturbance which will be exposed during any part of the rainy season	A.6.a.3	

SECTION A: STORM WATER POLLUTION PREVENTION PLAN (SWPPP)				
CHECK IF ADDRESSED N/A IF NOT APPLICABLE	*SWPPP Section*	*ITEM*	GENERAL PERMIT REF.	*COMMENTS*
XX	300.4	Implementation schedule for erosion control measures	A.6.a.4	
XX	500.3.4	BMPs for erosion control	A.6.b	
XX	500.3.7	BMPs to control wind erosion	A.6.c	
XX	500.3.5	**SEDIMENT CONTROL**	**A.8**	
XX	500.3.5 & 500.4	Description/Illustration of BMPs to prevent increase of sediment load in discharge	A.8	
XX	300.4, 500.3.5	Implementation schedule for sediment control measures	A.8	
XX	500.3.6	BMPs to control sediment tracking	A.8	
XX	500.3.8 & 500.3.9	**NON-STORM WATER MANAGEMENT**	A.9	
XX	500.3.8 & 500.3.9	Description of non-storm water discharges to receiving waters	A.9	
XX	500.3.8 & 500.3.9	Locations of discharges	A.9	
XX	500.3.8 & 500.3.9	Description of BMPs	A.9	
XX	300.5	Name and phone number of person responsible for non-storm water management	A.9	
XX	500.6	**POST-CONSTRUCTION**	A.10	
XX	500.6.1	Description of post-construction BMPs	A.10	
XX	500.6.2	Operation/Maintenance of BMPs after project completion (including short-term funding, long-term funding and responsible party)	A.10	
XX	500.5	**MAINTENANCE, INSPECTIONS, AND REPAIR**	**A.11**	
XX	300.5, 600.1	Name and phone number of person(s) responsible for inspections	A.11	
XX	600.1, Attach. H	Complete inspection checklist: date, weather, inadequate BMPs, visual observations of BMPs, corrective action, inspector's name, title, signature	A.11.a-f	
XX		**OTHER REQUIREMENTS**	A.12-16	
XX	500.7	Documentation of all training	A.12	
XX	500.8	List of Contractors/Subcontractors	A.13	

SECTION B: MONITORING AND REPORTING REQUIREMENTS				
CHECK IF ADDRESSED *N/A IF NOT APPLICABLE*	*SWPPP Section*	*ITEM*	GENERAL PERMIT REF.	*COMMENTS*
XX	600.1	Description of Site Inspection Plans	B.3	
XX	100.3	Compliance certification (annually 7/1)	B.4	
XX	600.2	Discharge reporting	B.5	
XX	600.3	Keep records of all inspections, compliance certifications, and noncompliance reports on site for a period of at least three years	B.6	
N/A	600.4	Sampling and Analysis Plan for Sediment	B.7	
XX	600.5	Sampling and Analysis Plan for Non-Visible Pollutants	B.8	

SECTION C: STANDARD PROVISIONS FOR CONSTRUCTION ACTIVITIES				
CHECK IF ADDRESSED *N/A IF NOT APPLICABLE*	*SWPPP Section*	*ITEM*	GENERAL PERMIT REF.	*COMMENTS*
XX	100.1	Signed SWPPP Certification	C.9,10	

ATTACHMENT M

Annual Certification of Compliance Form

Project Name: PERRIS VALLEY BIG LEAGUE DREAMS

Project Number: NEC TRUMBLE ROAD AND MAPES ROAD

Contractor Company Name: _____

Contractor Address: _____

Construction Start Date: _____ **Completion Date:** _____

Description of Work: description of work

Work Now in Progress: work in progress

Work Planned for Next 12 Months: work planned

"I certify under penalty of law that this document and all attachments were prepared under my direction or supervision in accordance with a system designed to assure that qualified personnel properly gather and evaluate the information submitted. Based on my inquiry of the person or persons who manage the system or those persons directly responsible for gathering the information, to the best of my knowledge and belief, the information submitted is, true, accurate, and complete. I am aware that there are significant penalties for submitting false information, including the possibility of fine and imprisonment for knowing violations."

_____ _____

Owner /Developer/Contractor Signature **Date**

ATTACHMENT N

Other Plans and Permits

FACT SHEET FOR WATER QUALITY ORDER 99-08-DWQ
STATE WATER RESOURCES CONTROL BOARD (SWRCB)
901 P STREET, SACRAMENTO, CALIFORNIA 95814

NATIONAL POLLUTANT DISCHARGE ELIMINATION SYSTEM (NPDES)
GENERAL PERMIT FOR STORM WATER DISCHARGES ASSOCIATED WITH
CONSTRUCTION ACTIVITY (GENERAL PERMIT)

BACKGROUND

In 1972, the Federal Water Pollution Control Act (also referred to as the Clean Water Act [CWA]) was amended to provide that the discharge of pollutants to waters of the United States from any point source is unlawful unless the discharge is in compliance with an NPDES permit. The 1987 amendments to the CWA added Section 402(p) which establishes a framework for regulating municipal and industrial storm water discharges under the NPDES Program. On November 16, 1990, the U.S. Environmental Protection Agency (USEPA) published final regulations that establish storm water permit application requirements for specified categories of industries. The regulations provide that discharges of storm water to waters of the United States from construction projects that encompass five (5) or more acres of soil disturbance are effectively prohibited unless the discharge is in compliance with an NPDES Permit.

While federal regulations allow two permitting options for storm water discharges (individual permits and General Permits), the SWRCB has elected to adopt only one statewide General Permit at this time that will apply to all storm water discharges associated with construction activity, except from those on Tribal Lands, in the Lake Tahoe Hydrologic Unit, and those performed by the California Department of Transportation (Caltrans). Construction on Tribal Lands is regulated by an USEPA permit, the Lahontan Regional Water Control Board adopted a separate NPDES permit for the Lake Tahoe Hydrologic Unit, and the SWRCB adopted a separate NPDES permit for Caltrans projects. This General Permit requires all dischargers where construction activity disturbs five acres or more to:

1. Develop and implement a Storm Water Pollution Prevention Plan (SWPPP) which specifies Best Management Practices (BMPs) that will prevent all construction pollutants from contacting storm water and with the intent of keeping all products of erosion from moving off site into receiving waters.

2. Eliminate or reduce nonstorm water discharges to storm sewer systems and other waters of the nation.

3. Perform inspections of all BMPs.

This General Permit shall be implemented and enforced by the nine California Regional Water Quality Control Boards (RWQCBs).

The General Permit accompanying this fact sheet regulates storm water runoff from construction sites. Regulating many storm water discharges under one permit will greatly reduce the otherwise overwhelming administrative burden associated with permitting individual storm water discharges. Dischargers shall submit a Notice of Intent (NOI) to obtain coverage under this General Permit. It is expected that as the storm water program develops, the RWQCBs may issue

General Permits or individual permits containing more specific permit provisions. When this occurs, those dischargers will no longer be regulated by this General Permit.

TYPES OF CONSTRUCTION ACTIVITY COVERED BY THIS GENERAL PERMIT

Construction activity subject to this General Permit includes clearing, grading, disturbances to the ground such as stockpiling, or excavation that results in soil disturbances of at least five acres of total land area. Construction activity that results in soil disturbances of less than five acres is subject to this General Permit if the construction activity is part of a larger common plan of development that encompasses five or more acres of soil disturbance or if there is significant water quality impairment resulting from the activity. Construction activity does not include routine maintenance to maintain original line and grade, hydraulic capacity, or original purpose of the facility, nor does it include emergency construction activities required to protect public health and safety. Dischargers should confirm with the local RWQCB whether or not a particular routine maintenance activity is subject to this General Permit.

A construction project which includes a dredge and/or fill discharge to any jurisdictional surface water (e.g., wetland, channel, pond, or marine water) will also need a CWA Section 404 permit from the U.S. Army Corps of Engineers and a CWA Section 401 Water Quality Certification from the RWQCB/SWRCB. Storm water discharges from dredge spoil placement which occurs outside of Corps jurisdiction (upland sites) and are part of construction activity which disturbs five or more acres of land are covered by this general permit. Proponents of construction projects which disturb five or more acres of land within the jurisdictional boundaries of a CWA Section 404 permit should contact the local RWQCB to determine the applicability of this permit to the project.

NOTIFICATION REQUIREMENTS

It is the responsibility of the landowner to obtain coverage under this General Permit prior to commencement of construction activities. To obtain coverage, the landowner must file an NOI with a vicinity map and the appropriate fee with the SWRCB. In addition, coverage under this permit shall not occur until the applicant develops an adequate SWPPP for the project. Section A of the General Permit outlines the required contents of a SWPPP. For proposed construction activity on easements or on nearby property by agreement or permission, the entity responsible for the construction activity shall file an NOI and filing fee and shall be responsible for development of the SWPPP, all of which must occur prior to commencement of construction activities.

A separate NOI shall be submitted to the SWRCB for each construction site. Owners of new construction shall file an NOI prior to the commencement of construction. Owners of an ongoing construction site that is covered under the previous General Construction Permit

(WQ Order No.92-08-DWQ) (1) shall continue to implement their existing SWPPP and monitoring program and (2) shall implement any necessary revisions to their SWPPP in a timely manner but in no case later than 90-calender days from adoption of this General Permit in accordance with Section A of this General Permit.

The NOI requirements of the General Permit are intended to establish a mechanism which can be used to clearly identify the responsible parties, locations, and scope of operations of dischargers

the nine RWQCBs.

Effluent Limitations

Permits for storm water discharges associated with construction activity shall meet all applicable provisions of Sections 301 and 402 of the CWA. These provisions require controls of pollutant discharges that utilize best available technology economically achievable (BAT) and best conventional pollutant control technology (BCT) to reduce pollutants and any more stringent controls necessary to meet water quality standards.

It is not feasible at this time for the SWRCB to establish numeric effluent limitations. The reasons why it is not feasible to establish numeric effluent limitations are discussed in detail in SWRCB Order Nos. WQ 91-03 and WQ 91-04. Therefore, the effluent limitations contained in this General Permit are narrative and include the requirement to implement appropriate BMPs. The BMPs shall primarily emphasize source controls such as erosion control and pollution prevention methods. The discharger shall also install structural controls, as necessary, such as sediment control which will constitute BAT and BCT and will achieve compliance with water quality standards. The narrative effluent limitations constitute compliance with the requirements of the CWA.

Elimination or reduction of nonstorm water discharges is a major goal of this General Permit. Nonstorm water discharges include a wide variety of sources, including improper dumping, spills, or leakage from storage tanks or transfer areas. Nonstorm water discharges may contribute a significant pollutant load to receiving waters. Measures to control spills, leakage, and dumping and to prevent illicit connections during construction shall be addressed through structural as well as non-structural BMPs.

This General Permit prohibits the discharge of materials other than storm water and authorized nonstorm water discharges. It is recognized that certain nonstorm water discharges may be necessary for the completion of construction projects. Such discharges include, but are not limited to irrigation of vegetative erosion control measures, pipe flushing and testing, street cleaning, and dewatering. Such discharges are allowed by this General Permit provided they are not relied upon to clean up failed or inadequate construction or post-construction BMPs designed to keep materials onsite. These authorized nonstorm water discharges shall (1) be infeasible to eliminate, (2) comply with BMPs as described in the SWPPP, and (3) not cause or contribute to a violation of water quality standards. Additionally, these discharges may be required to be permitted by the local RWQCB (e.g., some RWQCBs have adopted General Permits for dewatering discharges). This General Permit is performance-based to the extent that it prohibits the discharge of storm water that causes or threatens to cause pollution, contamination, or nuisance; but it also allows the owner/developer to determine the most economical, effective, and possibly innovative BMPs.

The requirements of this General Permit are intended to be implemented on a year-round basis, not just during the part of the year when there is a high probability of a precipitation event which results in storm water runoff. The permit should be implemented at the appropriate level and in a proactive manner during all seasons while construction is ongoing.

Weather and storm predictions or weather information concerning the 10-year, 6-hour storm

Monitoring Program

Another major feature of the General Permit is the development and implementation of a monitoring program. All dischargers are required to conduct inspections of the construction site prior to anticipated storm events and after actual storm events. During extended storm events, inspections must be made during each 24-hour period. The goals of these inspections are (1) to identify areas contributing to a storm water discharge; (2) to evaluate whether measures to reduce pollutant loadings identified in the SWPPP are adequate and properly installed and functioning in accordance with the terms of the General Permit; and (3) whether additional control practices or corrective maintenance activities are needed. Equipment, materials, and workers must be available for rapid response to failures and emergencies. All corrective maintenance to BMPs shall be performed as soon as possible, depending upon worker safety.

Each discharger shall certify annually that the construction activities are in compliance with the requirements of this General Permit. Dischargers who cannot certify annual compliance shall notify the appropriate RWQCB. A well-developed monitoring program will provide a good method for checking the effectiveness of the SWPPP.

Retention of Records

The discharger is required to retain records of all monitoring information, copies of all reports required by this General Permit, and records of all data used to complete the NOI for all construction activities to be covered by the General Permit for a period of at least three years from the date generated. This period may be extended by request of the SWRCB and/or RWQCB. With the exception of reporting noncompliance to the appropriate RWQCB, dischargers are not required to submit the records, except upon specific request by the RWQCB.

STATE WATER RESOURCES CONTROL BOARD (SWRCB)
ORDER NO. 99 - 08 - DWQ

NATIONAL POLLUTANT DISCHARGE ELIMINATION SYSTEM (NPDES) GENERAL PERMIT NO. CAS000002
WASTE DISCHARGE REQUIREMENTS (WDRS) FOR DISCHARGES OF STORM WATER RUNOFF ASSOCIATED WITH CONSTRUCTION ACTIVITY

The State Water Resources Control Board finds that:

1. Federal regulations for controlling pollutants in storm water runoff discharges were promulgated by the U.S. Environmental Protection Agency (USEPA) on November 16, 1990 (40 Code of Federal Regulations (CFR) Parts 122, 123, and 124). The regulations require discharges of storm water to surface waters associated with construction activity including clearing, grading, and excavation activities (except operations that result in disturbance of less than five acres of total land area and which are not part of a larger common plan of development or sale)[1] to obtain an NPDES permit and to implement Best Available Technology Economically Achievable (BAT) and Best Conventional Pollutant Control Technology (BCT) to reduce or eliminate storm water pollution.

2. This General Permit regulates pollutants in discharges of storm water associated with construction activity (storm water discharges) to surface waters, except from those areas on Tribal Lands; Lake Tahoe Hydrologic Unit; construction projects which disturb less than five acres, unless part of a larger common plan of development or sale; and storm water discharges which are determined ineligible for coverage under this General Permit by the California Regional Water Quality Control Boards (RWQCBs). Attachment 1 contains addresses and telephone numbers of each RWQCB office.

3. This General Permit does not preempt or supersede the authority of local storm water management agencies to prohibit, restrict, or control storm water discharges to separate storm sewer systems or other watercourses within their jurisdiction, as allowed by State and Federal law.

4. To obtain authorization for proposed storm water discharges to surface waters, pursuant to this General Permit, the landowner (discharger) must submit a Notice of Intent (NOI) with a vicinity map and the appropriate fee to the SWRCB prior to commencement of construction activities. In addition, coverage under this General Permit shall not occur until the applicant develops a Storm Water Pollution Prevention Plan (SWPPP) in accordance with the requirements of Section A of this permit for the project. For proposed construction activity conducted on easements or on nearby property by agreement or permission, or by an owner or lessee of a mineral estate (oil, gas, geothermal, aggregate, precious metals, and/or industrial minerals) entitled to conduct the activities, the entity responsible for the construction activity must submit the NOI and filing fee and shall be responsible for development of the SWPPP.

5. If an individual NPDES Permit is issued to a discharger otherwise subject to this General Permit or if an alternative General Permit is subsequently adopted which covers storm water

discharges regulated by this General Permit, the applicability of this General Permit to such discharges is automatically terminated on the effective date of the individual permit or the date of approval for coverage under the subsequent General Permit.

6. This action to adopt an NPDES permit is exempt from the provisions of the California Environmental Quality Act (Public Resources Code Section 21100, et seq.) in accordance with section 13389 of the California Water Code.

7. The SWRCB adopted the California Ocean Plan, and the RWQCBs have adopted and the SWRCB has approved Water Quality Control Plans (Basin Plans). Dischargers regulated by this General Permit must comply with the water quality standards in these Basin Plans and subsequent amendments thereto.

8. The SWRCB finds storm water discharges associated with construction activity to be a potential significant sources of pollutants. Furthermore, the SWRCB finds that storm water discharges associated with construction activities have the reasonable potential to cause or contribute to an excursion above water quality standards for sediment in the water bodies listed in Attachment 3 to this permit.

9. It is not feasible at this time to establish numeric effluent limitations for pollutants in storm water discharges from construction activities. Instead, the provisions of this General Permit require implementation of Best Management Practices (BMPs) to control and abate the discharge of pollutants in storm water discharges.

10. Discharges of non-storm water may be necessary for the completion of certain construction projects. Such discharges include, but are not limited to: irrigation of vegetative erosion control measures, pipe flushing and testing, street cleaning, and dewatering. Such discharges are authorized by this General Permit as long as they (a) do comply with Section A.9 of this General Permit, (b) do not cause or contribute to violation of any water quality standard, (c) do not violate any other provision of this General Permit, (d) do not require a non-storm water permit as issued by some RWQCBs, and (e) are not prohibited by a Basin Plan. If a non-storm water discharge is subject to a separate permit adopted by a RWQCB, the discharge must additionally be authorized by the RWQCB permit.

11. Following adoption of this General Permit, the RWQCBs shall enforce the provisions herein including the monitoring and reporting requirements.

12. Following public notice in accordance with State and Federal laws and regulations, the SWRCB in a public meeting on June 8, 1998, heard and considered all comments. The SWRCB has prepared written responses to all significant comments.

13. This Order is an NPDES permit in compliance with section 402 of the Clean Water Act (CWA) and shall take effect upon adoption by the SWRCB provided the Regional Administrator of the USEPA has no objection. If the USEPA Regional Administrator objects to its issuance, the General Permit shall not become effective until such objection is withdrawn.

14. This General Permit does not authorize discharges of fill or dredged material regulated by the U.S. Army Corps of Engineers under CWA section 404 and does not constitute a waiver of water quality certification under CWA section 401.

IT IS HEREBY ORDERED that all dischargers who file an NOI indicating their intention to be regulated under the provisions of this General Permit shall comply with the following:

A. DISCHARGE PROHIBITIONS:

1. Authorization pursuant to this General Permit does not constitute an exemption to applicable discharge prohibitions prescribed in Basin Plans, as implemented by the nine RWQCBs.

2. Discharges of material other than storm water which are not otherwise authorized by an NPDES permit to a separate storm sewer system (MS4) or waters of the nation are prohibited, except as allowed in Special Provisions for Construction Activity, C.3.

3. Storm water discharges shall not cause or threaten to cause pollution, contamination, or nuisance.

4. Storm water discharges regulated by this General Permit shall not contain a hazardous substance equal to or in excess of a reportable quantity listed in 40 CFR Part 117 and/or 40 CFR Part 302.

B. RECEIVING WATER LIMITATIONS:

1. Storm water discharges and authorized nonstorm water discharges to any surface or ground water shall not adversely impact human health or the environment.

2. The SWPPP developed for the construction activity covered by this General Permit shall be designed and implemented such that storm water discharges and authorized nonstorm water discharges shall not cause or contribute to an exceedance of any applicable water quality standards contained in a Statewide Water Quality Control Plan and/or the applicable RWQCB's Basin Plan.

3. Should it be determined by the discharger, SWRCB, or RWQCB that storm water discharges and/or authorized nonstorm water discharges are causing or contributing to an exceedance of an applicable water quality standard, the discharger shall:

a. Implement corrective measures immediately following discovery that water quality standards were exceeded, followed by notification to the RWQCB by telephone as soon as possible but no later than 48 hours after the discharge has been discovered. This notification shall be followed by a report within 14-calender days to the appropriate RWQCB, unless otherwise directed by the RWQCB, describing (1) the nature and cause of the water quality standard exceedance; (2) the BMPs currently being implemented; (3) any additional BMPs which will be implemented to prevent or reduce pollutants that are causing or contributing to the exceedance of water quality standards; and (4) any maintenance or repair of BMPs. This report shall include an implementation schedule for corrective actions and shall describe the actions taken to reduce the pollutants causing or contributing to the exceedance.

b. The discharger shall revise its SWPPP and monitoring program immediately after

the report to the RWQCB to incorporate the additional BMPs that have been and will be implemented, the implementation schedule, and any additional monitoring needed.

c. Nothing in this section shall prevent the appropriate RWQCB from enforcing any provisions of this General Permit while the discharger prepares and implements the above report.

C. SPECIAL PROVISIONS FOR CONSTRUCTION ACTIVITY:

1. All dischargers shall file an NOI and pay the appropriate fee for construction activities conducted at each site as required by Attachment 2: Notice of Intent--General Instructions.

2. All dischargers shall develop and implement a SWPPP in accordance with Section A: Storm Water Pollution Prevention Plan. The discharger shall implement controls to reduce pollutants in storm water discharges from their construction sites to the BAT/BCT performance standard.

3. Discharges of non-storm water are authorized only where they do not cause or contribute to a violation of any water quality standard and are controlled through implementation of appropriate BMPs for elimination or reduction of pollutants. Implementation of appropriate BMPs is a condition for authorization of non-storm water discharges. Non-storm water discharges and the BMPs appropriate for their control must be described in the SWPPP. Wherever feasible, alternatives which do not result in discharge of nonstorm water shall be implemented in accordance with Section A.9. of the SWPPP requirements.

4. All dischargers shall develop and implement a monitoring program and reporting plan in accordance with Section B: Monitoring Program and Reporting Requirements.

5. All dischargers shall comply with the lawful requirements of municipalities, counties, drainage districts, and other local agencies regarding discharges of storm water to separate storm sewer systems or other watercourses under their jurisdiction, including applicable requirements in municipal storm water management programs developed to comply with NPDES permits issued by the RWQCBs to local agencies.

6. All dischargers shall comply with the standard provisions and reporting requirements contained in Section C: Standard Provisions.

7. The discharger may terminate coverage for a portion of the project under this General Permit when ownership of a portion of this project has been transferred or when a phase within this multi-phase project has been completed. When ownership has transferred, the discharger must submit to its RWQCB a Change of Information Form (COI) Attachment 4 with revised site map and the name, address and telephone number of the new owner(s). Upon transfer of title, the discharger should notify the new owner(s) of the need to obtain coverage under this General Permit. The new owner must comply with provisions of Sections A. 2. (c) and B. 2. (b) of this General Permit. To terminate coverage for a portion of the project when a phase has been completed, the discharger must submit to its RWQCB a COI with a revised map that identifies the newly delineated site.

8. The discharger may terminate coverage under this General Permit for a complete project

by submitting to its RWQCB a Notice of Termination Form (NOT), and the post-construction BMPs plan according to Section A.10 of this General Permit. Note that a construction project is considered complete only when all portions of the site have been transferred to a new owner; or the following conditions have been met:

a. There is no potential for construction related storm water pollution,

b. All elements of the SWPPP have been completed,

c. Construction materials and waste have been disposed of properly,

d. The site is in compliance with all local storm water management requirements, and

e. A post-construction storm water management plan is in place as described in the site's SWPPP.

9. This General Permit expires five years from the date of adoption.

D. REGIONAL WATER QUALITY CONTROL BOARD (RWQCB) AUTHORITIES:

1. RWQCBs shall:

a. Implement the provisions of this General Permit. Implementation of this General Permit may include, but is not limited to requesting the submittal of SWPPPS, reviewing SWPPPs, reviewing monitoring reports, conducting compliance inspections, and taking enforcement actions.

b. Issue permits as they deem appropriate to individual dischargers, categories of dischargers, or dischargers in a geographic area. Upon issuance of such permits by a RWQCB, the affected dischargers shall no longer be regulated by this General Permit.

2. RWQCBs may require, on a case-by-case basis, the inclusion of an analysis of potential downstream impacts on receiving waterways due to the permitted construction.

3. RWQCBs may provide information to dischargers on the development and implementation of SWPPPs and monitoring programs and may require revisions to SWPPPs and monitoring programs.

4. RWQCBs may require dischargers to retain records for more than three years.

5. RWQCBs may require additional monitoring and reporting program requirements including sampling and analysis of discharges to water bodies listed in Attachment 3 to this permit. Additional requirements imposed by the RWQCB should be consistent with the overall monitoring effort in the receiving waters.

6. RWQCBs may issue individual NPDES permits for those construction activities found to

be ineligible for coverage under this permit.

CERTIFICATION

The undersigned, Administrative Assistant to the Board, does hereby certify that the foregoing is a full, true, and correct copy of an order duly and regularly adopted at a meeting of the State Water Resources Control Board held on August 19, 1999.

AYE: James M. Stubchaer

Mary Jane Forster

John W. Brown

Arthur G. Baggett, Jr.

NO: None

ABSENT: None

ABSTAIN: None

/s/
Maureen Marché
Administrative Assistant to the Board

SECTION A: STORM WATER POLLUTION PREVENTION PLAN

1. Objectives

A Storm Water Pollution Prevention Plan (SWPPP) shall be developed and implemented to address the specific circumstances for each construction site covered by this General Permit. The SWPPP shall be certified in accordance with the signatory requirements of section C, Standard Provision for Construction Activities (9). The SWPPP shall be developed and amended or revised, when necessary, to meet the following objectives:

a. Identify all pollutant sources including sources of sediment that may affect the quality of storm water discharges associated with construction activity (storm water discharges) from the construction site, and

b. Identify non-storm water discharges, and

c. Identify, construct, implement in accordance with a time schedule, and maintain Best Management Practices (BMPs) to reduce or eliminate pollutants in storm water discharges and authorized nonstorm water discharges from the construction site during construction, and

d. Develop a maintenance schedule for BMPs installed during construction designed to reduce or eliminate pollutants after construction is completed (post-construction BMPs).

2. Implementation Schedule

a. For construction activity commencing on or after adoption of this General Permit, the SWPPP shall be developed prior to the start of soil-disturbing activity in accordance with this Section and shall be implemented concurrently with commencement of soil-disturbing activities.

b. Existing permittees engaging in construction activities covered under the terms of the previous General Construction Permit SWPPP (WQ Order No.92-08-DWQ) shall continue to implement their existing SWPPP and shall implement any necessary revisions to their SWPPP in accordance with this Section of the General Permit in a timely manner, but in no case more than 90-calender days from the date of adoption of this General Permit.

c. For ongoing construction activity involving a change of ownership of property, the new owner shall review the existing SWPPP and amend if necessary, or develop a new SWPPP within 45-calender days.

3. Availability

The SWPPP shall remain on the construction site while the site is under construction during working hours, commencing with the initial construction activity and ending with termination of coverage under the General Permit.

4. Required Changes

a. The discharger shall amend the SWPPP whenever there is a change in construction or operations which may affect the discharge of pollutants to surface waters, ground waters, or a municipal separate storm sewer system (MS4). The SWPPP shall also be amended if the discharger violates any condition of this General Permit or has not achieved the general objective of reducing or eliminating pollutants in storm water discharges. If the RWQCB determines that the discharger is in violation of this General Permit, the SWPPP shall be amended and implemented in a timely manner, but in no case more than 14-calendar days after notification by the RWQCB. All amendments should be dated and directly attached to the SWPPP.

b. The RWQCB or local agency with the concurrence of the RWQCB may require the discharger to amend the SWPPP.

5. Source Identification

The SWPPP shall include: (a) project information and (b) pollutant source identification combined with an itemization of those BMPs specifically chosen to control the pollutants listed.

a. Project Information

(1) The SWPPP shall include a vicinity map locating the project site with respect to easily identifiable major roadways, geographic features, or landmarks. At a minimum, the map must show the construction site perimeter, the geographic features surrounding the site, and the general topography.

(2) The SWPPP shall include a site map(s) which shows the construction project in detail, including the existing and planned paved areas and buildings.

(a) At a minimum, the map must show the construction site perimeter, existing and proposed buildings, lots, roadways, storm water collection and discharge points; general topography both before and after construction; and the anticipated discharge location(s) where the storm water from the construction site discharges to a municipal storm sewer system or other water body.

(b) The drainage patterns across the project area must clearly be shown on the map, and the map must extend as far outside the site perimeter as necessary to illustrate the relevant drainage areas. Where relevant drainage areas are too large to depict on the map, map notes or inserts illustrating the upstream drainage areas are sufficient.

(c) Temporary on-site drainages to carry concentrated flow shall be selected to comply with local ordinances, to control erosion, to return flows to their natural drainage courses, and to prevent damage to downstream properties.

(3) Information presented in the SWPPP may be represented either by narrative or by graphics. Where possible, narrative descriptions should be plan notes. Narrative descriptions which do not lend themselves to plan notes can be contained in a separate document which must be referenced on the plan.

b. Pollutant Source and BMP Identification

The SWPPP shall include a description of potential sources which are likely to add pollutants to storm water discharges or which may result in nonstorm water discharges from the construction site. Discharges originating from off-site which flow across or through areas disturbed by construction that may contain pollutants should be reported to the RWQCB.

The SWPPP shall:

(1) Show drainage patterns and slopes anticipated after major grading activities are completed. Runoff from off-site areas should be prevented from flowing through areas that have been disturbed by construction unless appropriate conveyance systems are in place. The amount of anticipated storm water run-on must be considered to determine the appropriateness of the BMPs chosen. Show all calculations for anticipated storm water run-on, and describe all BMPs implemented to divert off-site drainage described in section A. 5 a. (2) (c) around or through the construction project.

(2) Show the drainage patterns into each on-site storm water inlet point or receiving water. Show or describe the BMPs that will protect operational storm water inlets or

receiving waters from contaminated discharges other than sediment discharges, such as, but not limited to: storm water with elevated pH levels from contact with soil amendments such as lime or gypsum; slurry from sawcutting of concrete or asphalt; washing of exposed aggregate concrete; concrete rinse water; building washing operations; equipment washing operations; minor street washing associated with street delineation; and/or sealing and paving activities occurring during rains.

(3) Show existing site features that, as a result of known past usage, may contribute pollutants to storm water, (e.g., toxic materials that are known to have been treated, stored, disposed, spilled, or leaked onto the construction site). Show or describe the BMPs implemented to minimize the exposure of storm water to contaminated soil or toxic materials.

(4) Show areas designated for the (a) storage of soil or waste, (b) vehicle storage and service areas, (c) construction material loading, unloading, and access areas, (d) equipment storage, cleaning, and maintenance areas.

(5) Describe the BMPs for control of discharges from waste handling and disposal areas and methods of on-site storage and disposal of construction materials and construction waste. Describe the BMPs designed to minimize or eliminate the exposure of storm water to construction materials, equipment, vehicles, waste storage areas, or service areas. The BMPs described shall be in compliance with Federal, State, and local laws, regulations, and ordinances.

(6) Describe all post-construction BMPs for the project, and show the location of each BMP on the map. (Post-construction BMPs consist of permanent features designed to minimize pollutant discharges, including sediment, from the site after construction has been completed.) Also, describe the agency or parties to be the responsible party for long-term maintenance of these BMPs.

c. Additional Information

(1) The SWPPP shall include a narrative description of pollutant sources and BMPs that cannot be adequately communicated or identified on the site map. In addition, a narrative description of preconstruction control practices (if any) to reduce sediment and other pollutants in storm water discharges shall be included.

(2) The SWPPP shall include an inventory of all materials used and activities performed during construction that have the potential to contribute to the discharge of pollutants other than sediment in storm water. Describe the BMPs selected and the basis for their selection to eliminate or reduce these pollutants in the storm water discharges.

(3) The SWPPP shall include the following information regarding the construction site surface area: the size (in acres or square feet), the runoff coefficient before and after construction, and the percentage that is impervious (e.g., paved, roofed, etc.) before and after construction.

(4) The SWPPP shall include a copy of the NOI, and the Waste Discharge Identification (WDID) number. Should a WDID number not be received from the SWRCB at the time

construction commences, the discharger shall include proof of mailing of the NOI, e.g., certified mail receipt, copy of check, express mail receipt, etc.

(5) The SWPPP shall include a construction activity schedule which describes all major activities such as mass grading, paving, lot or parcel improvements at the site and the proposed time frame to conduct those activities.

(6) The SWPPP shall list the name and telephone number of the qualified person(s) who have been assigned responsibility for prestorm, poststorm, and storm event BMP inspections; and the qualified person(s) assigned responsibility to ensure full compliance with the permit and implementation of all elements of the SWPPP, including the preparation of the annual compliance evaluation and the elimination of all unauthorized discharges.

6. Erosion Control

Erosion control, also referred to as "soil stabilization" is the most effective way to retain soil and sediment on the construction site. The most efficient way to address erosion control is to preserve existing vegetation where feasible, to limit disturbance, and to stabilize and revegetate disturbed areas as soon as possible after grading or construction.

Particular attention must be paid to large mass-graded sites where the potential for soil exposure to the erosive effects of rainfall and wind is great. Mass graded construction sites may be exposed for several years while the project is being built out. Thus, there is potential for significant sediment discharge from the site to surface waters.

At a minimum, the discharger/operator must implement an effective combination of erosion and sediment control on all disturbed areas during the rainy season. These disturbed areas include rough graded roadways, slopes, and building pads. Until permanent vegetation is established, soil cover is the most cost-effective and expeditious method to protect soil particles from detachment and transport by rainfall. Temporary soil stabilization can be the single-most important factor in reducing erosion at construction sites. The discharger shall consider measures such as: covering with mulch, temporary seeding, soil stabilizers, binders, fiber rolls or blankets, temporary vegetation, permanent seeding, and a variety of other measures.

The SWPPP shall include a description of the erosion control practices, including a time schedule, to be implemented during construction to minimize erosion on disturbed areas of a construction site. The discharger must consider the full range of erosion control BMPs. The discharger must consider any additional site-specific and seasonal conditions when selecting and implementing appropriate BMPs. The above listed erosion control measures are examples of what should be considered and are not exclusive of new or innovative approaches currently available or being developed.

a. The SWPPP shall include:

(1) An outline of the areas of vegetative soil cover or native vegetation onsite which will remain undisturbed during the construction project.

(2) An outline of all areas of soil disturbance including cut or fill areas which will be stabilized during the rainy season by temporary or permanent erosion control measures, such as seeding, mulch, or blankets, etc.

(3) An outline of the areas of soil disturbance, cut, or fill which will be left exposed during any part of the rainy season, representing areas of potential soil erosion where sediment control BMPs are required to be used during construction.

(4) A proposed schedule for the implementation of erosion control measures.

b. The SWPPP shall include a description of the BMPs and control practices to be used for both temporary and permanent erosion control measures.

c. The SWPPP shall include a description of the BMPs to reduce wind erosion at all times, with particular attention paid to stock-piled materials.

7. Stabilization

(1) All disturbed areas of the construction site must be stabilized. Final stabilization for the purposes of submitting a NOT is satisfied when:

-All soil disturbing activities are completed AND EITHER OF THE TWO FOLLOWING CRITERIA ARE MET:

-A uniform vegetative cover with 70 percent coverage has been established OR:

-equivalent stabilization measures have been employed. These measures include the use of such BMPs as blankets, reinforced channel liners, soil cement, fiber matrices, geotextiles, or other erosion resistant soil coverings or treatments.

(2) Where background native vegetation covers less than 100 percent of the surface, such as in arid areas, the 70 percent coverage criteria is adjusted as follows: If the native vegetation covers 50 percent of the ground surface, 70 percent of 50 percent (.70 X .50=.35) would require 35 percent total uniform surface coverage.

8. <u>Sediment Control</u>

The SWPPP shall include a description or illustration of BMPs which will be implemented to prevent a net increase of sediment load in storm water discharge relative to preconstruction levels. Sediment control BMPs are required at appropriate locations along the site perimeter and at all operational internal inlets to the storm drain system at all times during the rainy season. Sediment control practices may include filtration devices and barriers (such as fiber rolls, silt fence, straw bale barriers, and gravel inlet filters) and/or settling devices (such as sediment traps or basins). Effective filtration devices, barriers, and settling devices shall be selected, installed and maintained properly. A proposed schedule for deployment of sediment control BMPs shall be included in the SWPPP. These are the most basic measures to prevent sediment from leaving

the project site and moving into receiving waters. Limited exemptions may be authorized by the RWQCB when work on active areas precludes the use of sediment control BMPs temporarily. Under these conditions, the SWPPP must describe a plan to establish perimeter controls prior to the onset of rain.

During the nonrainy season, the discharger is responsible for ensuring that adequate sediment control materials are available to control sediment discharges at the downgrade perimeter and operational inlets in the event of a predicted storm. The discharger shall consider a full range of sediment controls, in addition to the controls listed above, such as straw bale dikes, earth dikes, brush barriers, drainage swales, check dams, subsurface drain, sandbag dikes, fiber rolls, or other controls. At a minimum, the discharger/operator must implement an effective combination of erosion and sediment control on all disturbed areas during the rainy season.

If the discharger chooses to rely on sediment basins for treatment purposes, sediment basins shall, at a minimum, be designed and maintained as follows:

Option I: Pursuant to local ordinance for sediment basin design and maintenance, provided that the design efficiency is as protective or more protective of water quality than Option 3.

OR

Option 2: Sediment basin(s), as measured from the bottom of the basin to the principal outlet, shall have at least a capacity equivalent to 3,600 cubic feet of storage per acre draining into the sediment basin. The length of the basin shall be more than twice the width of the basin. The length is determined by measuring the distance between the inlet and the outlet; and the depth must not be less than three feet nor greater than five feet for safety reasons and for maximum efficiency.

OR

Option 3: Sediment basin(s) shall be designed using the standard equation:

$$As=1.2Q/Vs$$

Where: As is the minimum surface area for trapping soil particles of a certain size; Vs is the settling velocity of the design particle size chosen; and Q=C x I x A where Q is the discharge rate measured in cubic feet per second; C is the runoff coefficient; I is the precipitation intensity for the 10-year, 6-hour rain event and A is the area draining into the sediment basin in acres. The design particle size shall be the smallest soil grain size determined by wet sieve analysis, or the fine silt sized (0.01mm) particle, and the Vs used shall be 100 percent of the calculated settling velocity.

The length is determined by measuring the distance between the inlet and the outlet; the length shall be more than twice the dimension as the width; the depth shall not be less than three feet nor greater than five feet for safety reasons and for maximum efficiency (two feet of storage, two feet of capacity). The basin(s) shall be located on the site where it can be maintained on a year-round basis and shall be maintained on a schedule to retain

the two feet of capacity;

OR

Option 4: The use of an equivalent surface area design or equation, provided that the design efficiency is as protective or more protective of water quality than Option 3.

A sediment basin shall have a means for dewatering within 7-calendar days following a storm event. Sediment basins may be fenced if safety (worker or public) is a concern.

The outflow from a sediment basin that discharges into a natural drainage shall be provided with outlet protection to prevent erosion and scour of the embankment and channel.

The discharger must consider any additional site-specific and seasonal conditions when selecting and designing sediment control BMPs. The above listed sediment control measures are examples of what should be considered and are not exclusive of new or innovative approaches currently available or being developed.

The SWPPP shall include a description of the BMPs to reduce the tracking of sediment onto public or private roads at all times. These public and private roads shall be inspected and cleaned as necessary. Road cleaning BMPs shall be discussed in the SWPPP and will not rely on the washing of accumulated sediment or silt into the storm drain system.

9. Non-Storm Water Management

Describe all non-storm water discharges to receiving waters that are proposed for the construction project. Non-storm water discharges should be eliminated or reduced to the extent feasible. Include the locations of such discharges and descriptions of all BMPs designed for the control of pollutants in such discharges. Onetime discharges shall be monitored during the time that such discharges are occurring. A qualified person should be assigned the responsibility for ensuring that no materials other than storm water are discharged in quantities which will have an adverse effect on receiving waters or storm drain systems (consistent with BAT/BCT), and the name and contact number of that person should be included in the SWPPP document.

Discharging sediment-laden water which will cause or contribute to an exceedance of the applicable RWQCB's Basin Plan from a dewatering site or sediment basin into any receiving water or storm drain without filtration or equivalent treatment is prohibited.

10. Post-Construction Storm Water Management

The SWPPP shall include descriptions of the BMPs to reduce pollutants in storm water discharges after all construction phases have been completed at the site (Post-Construction BMPs). Post-Construction BMPs include the minimization of land disturbance, the minimization of impervious surfaces, treatment of storm water runoff using infiltration, detention/retention, biofilter BMPs, use of efficient irrigation systems, ensuring that interior drains are not connected to a storm sewer system, and appropriately designed and constructed energy dissipation devices. These must be consistent with all local post-construction storm water management requirements, policies, and guidelines. The discharger must consider site-specific and seasonal conditions when designing the control practices. Operation and maintenance of control practices after construction

is completed shall be addressed, including short-and long-term funding sources and the responsible party.

11. Maintenance, Inspection, and Repair

The SWPPP shall include a discussion of the program to inspect and maintain all BMPs as identified in the site plan or other narrative documents throughout the entire duration of the project. A qualified person will be assigned the responsibility to conduct inspections. The name and telephone number of that person shall be listed in the SWPPP document. Inspections will be performed before and after storm events and once each

24-hour period during extended storm events to identify BMP effectiveness and implement repairs or design changes as soon as feasible depending upon field conditions. Equipment, materials, and workers must be available for rapid response to failures and emergencies. All corrective maintenance to BMPs shall be performed as soon as possible after the conclusion of each storm depending upon worker safety.

For each inspection required above, the discharger shall complete an inspection checklist. At a minimum, an inspection checklist shall include:

a. Inspection date.

b. Weather information: best estimate of beginning of storm event, duration of event, time elapsed since last storm, and approximate amount of rainfall (inches).

c. A description of any inadequate BMPs.

d. If it is possible to safely access during inclement weather, list observations of all BMPs: erosion controls, sediment controls, chemical and waste controls, and non-storm water controls. Otherwise, list result of visual inspection at relevant outfall, discharge point, or downstream location and projected required maintenance activities.

e. Corrective actions required, including any changes to SWPPP necessary and implementation dates.

f. Inspectors name, title, and signature.

The dischargers shall prepare their inspection checklists using the inspection checklist form provided by the SWRCB or RWQCB or on forms that contain the equivalent information.

12. Training

Individuals responsible for SWPPP preparation, implementation, and permit compliance shall be appropriately trained, and the SWPPP shall document all training. This includes those personnel responsible for installation, inspection, maintenance, and repair of BMPs. Those responsible for overseeing, revising, and amending the SWPPP shall also document their training. Training should be both formal and informal, occur on an ongoing basis when it is appropriate and convenient, and should include training/workshops offered by the SWRCB, RWQCB, or other locally recognized agencies or professional organizations.

13. List of Contractors/Subcontractors

The SWPPP shall include a list of names of all contractors, (or subcontractors) and individuals responsible for implementation of the SWPPP. This list should include telephone numbers and addresses. Specific areas of responsibility of each subcontractor and emergency contact numbers should also be included.

14. Other Plans

This SWPPP may incorporate by reference the appropriate elements of other plans required by local, State, or Federal agencies. A copy of any requirements incorporated by reference shall be kept at the construction site.

15. Public Access

The SWPPP shall be provided, upon request, to the RWQCB. The SWPPP is considered a report that shall be available to the public by the RWQCB under section 308(b) of the Clean Water Act.

16. Preparer Certification

The SWPPP and each amendment shall be signed by the landowner (discharger) or his representative and include the date of initial preparation and the date of each amendment.

SECTION B: MONITORING PROGRAM AND REPORTING REQUIREMENTS

1. Required Changes

The RWQCB may require the discharger to conduct additional site inspections, to submit reports and certifications, or perform sampling and analysis.

2. Implementation

a. The requirements of this Section shall be implemented at the time of commencement of construction activity (see also Section A. 2. Implementation Schedule). The discharger is responsible for implementing these requirements until construction activity is complete and the site is stabilized.

b. For ongoing construction activity involving a change in ownership of property covered by this General Permit, the new owner must complete a NOI and implement the requirements of this Section concurrent with the change of ownership. For changes of information, the owner must follow instructions in

C. 7. Special Provisions for Construction Activity of the General Permit.

3. Site Inspections

Qualified personnel shall conduct inspections of the construction site prior to anticipated storm events, during extended storm events, and after actual storm events to identify areas contributing to a discharge of storm water associated with construction activity. The name(s) and contact number(s) of the assigned inspection personnel shall be listed in the SWPPP. Pre-storm inspections are to ensure that BMPs are properly installed and maintained; post-storm

inspections are to assure that the BMPs have functioned adequately. During extended storm events, inspections shall be required each 24-hour period. Best Management Practices (BMPs) shall be evaluated for adequacy and proper implementation and whether additional BMPs are required in accordance with the terms of the General Permit (see language in Section A. 11. Maintenance, Inspection, and Repair). Implementation of nonstorm water discharge BMPs shall be verified and their effectiveness evaluated. One time discharges of non-storm water shall be inspected when such discharges occur.

4. Compliance Certification

Each discharger or qualified assigned personnel listed by name and contact number in the SWPPP must certify annually that construction activities are in compliance with the requirements of this General Permit and the SWPPP. This Certification shall be based upon the site inspections required in Item 3 of this Section. The certification must be completed by July 1 of each year.

5. Noncompliance Reporting

Dischargers who cannot certify compliance, in accordance with Item 4 of this Section and/or who have had other instances of noncompliance excluding exceedances of water quality standards as defined in section B. 3. Receiving Water Limitations Language, shall notify the appropriate RWQCB within 30 days. Corrective measures should be implemented immediately following discovery that water quality standards were exceeded. The notifications shall identify the noncompliance event, including an initial assessment of any impact caused by the event; describe the actions necessary to achieve compliance; and include a time schedule subject to the modifications by the RWQCB indicating when compliance will be achieved. Noncompliance notifications must be submitted within 30-calendar days of identification of noncompliance.

6. Monitoring Records

Records of all inspections, compliance certifications, and noncompliance reporting must be retained for a period of at least three years from the date generated. With the exception of noncompliance reporting, dischargers are not required to submit these records.

SECTION C: STANDARD PROVISIONS FOR CONSTRUCTION ACTIVITY

1. Duty to Comply

The discharger must comply with all of the conditions of this General Permit. Any permit noncompliance constitutes a violation of the Clean Water Act (CWA) and the Porter-Cologne Water Quality Control Act and is grounds for enforcement action and/or removal from General Permit coverage.

The discharger shall comply with effluent standards or prohibitions established under Section 307(a) of the CWA for toxic pollutants within the time provided in the regulations that establish these standards or prohibitions, even if this General Permit has not yet been modified to incorporate the requirement.

2. General Permit Actions

This General Permit may be modified, revoked and reissued, or terminated for cause. The filing of a request by the discharger for a General Permit modification, revocation and reissuance, or termination, or a notification of planned changes or anticipated noncompliance does not annul any General Permit condition.

If any toxic effluent standard or prohibition (including any schedule of compliance specified in such effluent standard or prohibition) is promulgated under Section 307(a) of the CWA for a toxic pollutant which is present in the discharge and that standard or prohibition is more stringent than any limitation on the pollutant in this General Permit, this General Permit shall be modified or revoked and reissued to conform to the toxic effluent standard or prohibition and the dischargers so notified.

3. Need to Halt or Reduce Activity Not a Defense

It shall not be a defense for a discharger in an enforcement action that it would have been necessary to halt or reduce the permitted activity in order to maintain compliance with the conditions of this General Permit.

4. Duty to Mitigate

The discharger shall take all responsible steps to minimize or prevent any discharge in violation of this General Permit, which has a reasonable likelihood of adversely affecting human health or the environment.

5. Proper Operation and Maintenance

The discharger shall at all times properly operate and maintain any facilities and systems of treatment and control (and related appurtenances) which are installed or used by the discharger to achieve compliance with the conditions of this General Permit and with the requirements of Storm Water Pollution Prevention Plans (SWPPP). Proper operation and maintenance also includes adequate laboratory controls and appropriate quality assurance procedures. Proper operation and maintenance may require the operation of backup or auxiliary facilities or similar systems installed by a discharger when necessary to achieve compliance with the conditions of this General Permit.

6. Property Rights

This General Permit does not convey any property rights of any sort or any exclusive privileges, nor does it authorize any injury to private property or any invasion of personal rights, nor does it authorize any infringement of Federal, State, or local laws or regulations.

7. Duty to Provide Information

The discharger shall furnish the RWQCB, State Water Resources Control Board, or USEPA, within a reasonable time, any requested information to determine compliance with this General Permit. The discharger shall also furnish, upon request, copies of records required to be kept by this General Permit.

8. Inspection and Entry

The discharger shall allow the RWQCB, SWRCB, USEPA, and/or, in the case of construction sites which discharge through a municipal separate storm sewer, an authorized representative of the municipal operator of the separate storm sewer system receiving the discharge, upon the presentation of credentials and other documents as may be required by law, to:

a. Enter upon the discharger's premises at reasonable times where a regulated construction activity is being conducted or where records must be kept under the conditions of this General Permit;

b. Access and copy at reasonable times any records that must be kept under the conditions of this General Permit;

c. Inspect at reasonable times the complete construction site, including any off-site staging areas or material storage areas, and the erosion/sediment controls; and

d. Sample or monitor at reasonable times for the purpose of ensuring General Permit compliance.

9. Signatory Requirements

a. All Notice of Intents (NOIs), Notice of Terminations (NOTs), SWPPPs, certifications, and reports prepared in accordance with this Order submitted to the SWRCB shall be signed as follows:

(1) For a corporation: by a responsible corporate officer. For the purpose of this Section, a responsible corporate officer means: (a) a president, secretary, treasurer, or vice president of the corporation in charge of a principal business function, or any other person who performs similar policy or decision-making functions for the corporation, or (b) the manager of the construction activity if authority to sign documents has been assigned or delegated to the manager in accordance with corporate procedures;

(2) For a partnership or sole proprietorship: by a general partner or the proprietor, respectively; or

(3) For a municipality, State, Federal, or other public agency: by either a principal executive officer, ranking elected official, or duly authorized representative. The principal executive officer of a Federal agency includes the chief executive officer of the agency or the senior executive officer having responsibility for the overall operations of a principal geographic unit of the agency (e.g., Regional Administrator of USEPA).

b. All SWPPPs, reports, certifications, or other information required by the General Permit and/or requested by the RWQCB, SWRCB, USEPA, or the local storm water management agency shall be signed by a person described above or by a duly authorized

representative. A person is a duly authorized representative if:

(1) The authorization is made in writing by a person described above and retained as part of the SWPPP; or

(2) The authorization specifies either an individual or a position having responsibility for the overall operation of the construction activity, such as the position of manager, operator, superintendent, or position of equivalent responsibility, or an individual or position having overall responsibility for environmental matters for the company. (A duly authorized representative may thus be either a named individual or any individual occupying a named position.)

c. If an authorization is no longer accurate because a different individual or position has responsibility for the overall operation of the construction activity, a new authorization must be attached to the SWPPP prior to submittal of any reports, information, or certifications to be signed by the authorized representative.

10. Certification

Any person signing documents under Section C, Provision 9 above, shall make the following certification:

"I certify under penalty of law that this document and all attachments were prepared under my direction or supervision in accordance with a system designed to assure that qualified personnel properly gather and evaluate the information submitted. Based on my inquiry of the person or persons who manage the system or those persons directly responsible for gathering the information, to the best of my knowledge and belief, the information submitted is, true, accurate, and complete.

I am aware that there are significant penalties for submitting false information, including the possibility of fine and imprisonment for knowing violations."

11. Anticipated Noncompliance

The discharger will give advance notice to the RWQCB and local storm water management agency of any planned changes in the construction activity which may result in noncompliance with General Permit requirements.

12. Penalties for Falsification of Reports

Section 309(c)(4) of the CWA provides that any person who knowingly makes any false material statement, representation, or certification in any record or other document submitted or required to be maintained under this General Permit, including reports of compliance or noncompliance shall upon conviction, be punished by a fine of not more than $10,000 or by imprisonment for not more than two years or by both.

13. Oil and Hazardous Substance Liability

Nothing in this General Permit shall be construed to preclude the institution of any legal action or relieve the discharger from any responsibilities, liabilities, or penalties to which the discharger is or may be subject to under Section 311 of the CWA.

14. Severability

The provisions of this General Permit are severable; and, if any provision of this General Permit or the application of any provision of this General Permit to any circumstance is held invalid, the application of such provision to other circumstances and the remainder of this General Permit shall not be affected thereby.

15. Reopener Clause

This General Permit may be modified, revoked and reissued, or terminated for cause due to promulgation of amended regulations, receipt of USEPA guidance concerning regulated activities, judicial decision, or in accordance with 40 Code of Federal Regulations (CFR) 122.62, 122.63, 122.64, and 124.5.

16. Penalties for Violations of Permit Conditions

a. Section 309 of the CWA provides significant penalties for any person who violates a permit condition implementing Sections 301, 302, 306, 307, 308, 318, or 405 of the CWA or any permit condition or limitation implementing any such section in a permit issued under Section 402. Any person who violates any permit condition of this General Permit is subject to a civil penalty not to exceed $27,500 per calendar day of such violation, as well as any other appropriate sanction provided by Section 309 of the CWA.

b. The Porter-Cologne Water Quality Control Act also provides for civil and criminal penalties which in some cases are greater than those under the CWA.

17. Availability

A copy of this General Permit shall be maintained at the construction site during construction activity and be available to operating personnel.

18. Transfers

This General Permit is not transferable. A new owner of an ongoing construction activity must submit a NOI in accordance with the requirements of this General Permit to be authorized to discharge under this General Permit. An owner who sells property covered by this General Permit shall inform the new owner of the duty to file a NOI and shall provide the new owner with a copy of this General Permit.

19. Continuation of Expired Permit

This General Permit continues in force and effect until a new General Permit is issued or the SWRCB rescinds this General Permit. Only those dischargers authorized to discharge under the expiring General Permit are covered by the continued General Permit.

SWRCB AND RWQCB

CONTACT LIST

STATE WATER RESOURCES CONTROL BOARD

Division of Water Quality

Attention: Storm Water Permit Unit

P.O. Box 1977

Sacramento, CA 95812-1977

(916) 657-1146 FAX:(916) 657-1011

Contact: Bruce Fujimoto

1) NORTH COAST REGION

5550 Skylane Boulevard, Suite A

Santa Rosa, CA 95403

Contact: Nathan Quarles

(707) 576-2220 FAX: (707) 523-0135

Email: quarn@rb1.swrcb.ca.gov

5S) CENTRAL VALLEY REGION

Sacramento Office

3443 Routier road, Suite A

Sacramento, CA 95827-3098

Contact: Leo Sarmiento

(916) 255-3049 FAX: (916) 255-3015

Email: sarmienl@rb5s.swrcb.ca.gov

6V) LAHONTAN REGION

Victorville Office

15428 Civic Drive, Suite 100

Victorville, CA 92392

Contact: Jehiel Cass

(760) 241-7377 FAX: (760) 241-7308

Email: jcass@rb6v.swrcb.ca.gov

2) SAN FRANCISCO BAY REGION

1515 Clay Street, Suite

5F) CENTRAL VALLEY REGION

Fresno Branch Office

7) COLORADO RIVER BASIN REGION

73-720 Fred Waring Drive,

1400

Oakland, CA 94612

Contact: Gayleen Perriera

(510) 622-2407 FAX: (510) 622-2460

Email: gp@rb2.swrcb.ca.gov

3614 East Ashlan Avenue

Fresno, CA 93726

Contact: Jarma Bennett *(Tulare & Kern Counties)*

(559) 445-5919 FAX: (559) 445-5910

Email: bennettj@rb5f.swrcb.ca.gov

Contact: Greg Kelly (Madera, Mariposa, Merced, Fresno, & Kings Counties)

(559) 445-5500 FAX: (559) 445-5910

Email: kellyg@rb5f.swrcb.ca.gov

Suite 100

Palm Desert, CA 92260

Contact: Abdi Haile

(760) 776-8935 FAX: (760) 341-6820

Email: haila@rb7.swrcb.ca.gov

Contact: Rosalyn Fleming

(760) 241-7364 FAX: (760) 341-6820

Email: flemr@rb7.swrcb.ca.gov

3) CENTRAL COAST REGION

81 Higuera Street, Suite 200

San Luis Obispo, CA 93401-5427

Contact: Jennifer Bitting

(805) 549-3147 FAX: (805) 543-0397

Email: jbitting@rb3.swrcb.ca.gov

5R) CENTRAL VALLEY REGION

Redding Branch Office

415 Knollcrest Drive

Redding, CA 96002

Contact: Carole Crowe

(530) 224-4849 FAX: (530) 224-4857

Email: crowec@rb5r.swrcb.ca.gov

8) SANTA ANA REGION

3737 Main Street, Suite 500

Riverside, CA 92501-3339

Contact: Michael Roth *(Riverside County)*

(909) 320-2027 FAX: (909) 781-6288

Email: mroth@rb8.swrcb.ca.gov

Contact: Mark Smythe *(Orange County)*

(909) 782-4998 FAX: (909) 781-6288

Email: msmythe@rb8.swrcb.ca.gov

Contact: Bob Whitaker

(San Bernardino County)

(909) 782-4993 FAX: (909) 781-6288

Email:
bwhitake@rb8.swrcb.ca.gov

4) LOS ANGELES REGION

320 W. 4th Street, Suite 200

Los Angeles, CA 90013

Contact: Wayne Chiou ***(Inland Los Angeles)***

(213) 576-6664 FAX: (213) 576-6686

Email:
wchiou@rb4.swrcb.ca.gov

Contact: **Mark Pumford** ***(Ventura County)***

(213) 576-6657 FAX: (213) 576-6686

Email:
mpumford@rb4.swrcb.ca.gov

Contact: Carlos Urrunaga ***(Coastal)***

(213) 576-6655 FAX (213) 576-6686

Email:
currunag@rb4.swrcb.ca.gov

6SLT) LAHONTAN REGION

South Lake Tahoe Office

2501 Lake Tahoe Boulevard

South Lake Tahoe, CA 96150

Contact: Chris Adair

(530) 542-5433 FAX: (530) 544-2271

Email:
adaic@rb6s.swrcb.ca.gov

9) SAN DIEGO REGION

9771 Clairemont Mesa Boulevard, Suite A

San Diego, CA 92124

Contact: Jane Ledford

(619) 467-3272 FAX: (619) 571-6972

Email:
ledfj@rb9.swrcb.ca.gov

Nothing in this General Permit shall be construed to preclude the institution of any legal action or relieve the discharger from any responsibilities, liabilities, or penalties to which the discharger is or may be subject to under Section 311 of the CWA.

14. Severability

The provisions of this General Permit are severable; and, if any provision of this General Permit or the application of any provision of this General Permit to any circumstance is held invalid, the application of such provision to other circumstances and the remainder of this General Permit shall not be affected thereby.

15. Reopener Clause

This General Permit may be modified, revoked and reissued, or terminated for cause due to promulgation of amended regulations, receipt of USEPA guidance concerning regulated activities, judicial decision, or in accordance with 40 Code of Federal Regulations (CFR) 122.62, 122.63, 122.64, and 124.5.

16. Penalties for Violations of Permit Conditions

a. Section 309 of the CWA provides significant penalties for any person who violates a permit condition implementing Sections 301, 302, 306, 307, 308, 318, or 405 of the CWA or any permit condition or limitation implementing any such section in a permit issued under Section 402. Any person who violates any permit condition of this General Permit is subject to a civil penalty not to exceed $27,500 per calendar day of such violation, as well as any other appropriate sanction provided by Section 309 of the CWA.

b. The Porter-Cologne Water Quality Control Act also provides for civil and criminal penalties which in some cases are greater than those under the CWA.

17. Availability

A copy of this General Permit shall be maintained at the construction site during construction activity and be available to operating personnel.

18. Transfers

This General Permit is not transferable. A new owner of an ongoing construction activity must submit a NOI in accordance with the requirements of this General Permit to be authorized to discharge under this General Permit. An owner who sells property covered by this General Permit shall inform the new owner of the duty to file a NOI and shall provide the new owner with a copy of this General Permit.

19. Continuation of Expired Permit

This General Permit continues in force and effect until a new General Permit is issued or the SWRCB rescinds this General Permit. Only those dischargers authorized to discharge under the expiring General Permit are covered by the continued General Permit.

1400

Oakland, CA 94612

Contact: Gayleen Perriera

(510) 622-2407 FAX: (510) 622-2460

Email: gp@rb2.swrcb.ca.gov

3614 East Ashlan Avenue

Fresno, CA 93726

Contact: Jarma Bennett *(Tulare & Kern Counties)*

(559) 445-5919 FAX: (559) 445-5910

Email: bennettj@rb5f.swrcb.ca.gov

Contact: Greg Kelly (Madera, Mariposa, Merced, Fresno, & Kings Counties)

(559) 445-5500 FAX: (559) 445-5910

Email: kellyg@rb5f.swrcb.ca.gov

Suite 100

Palm Desert, CA 92260

Contact: Abdi Haile

(760) 776-8935 FAX: (760) 341-6820

Email: haila@rb7.swrcb.ca.gov

Contact: Rosalyn Fleming

(760) 241-7364 FAX: (760) 341-6820

Email: flemr@rb7.swrcb.ca.gov

3) CENTRAL COAST REGION

81 Higuera Street, Suite 200

San Luis Obispo, CA 93401-5427

Contact: Jennifer Bitting

(805) 549-3147 FAX: (805) 543-0397

Email: jbitting@rb3.swrcb.ca.gov

5R) CENTRAL VALLEY REGION

Redding Branch Office

415 Knollcrest Drive

Redding, CA 96002

Contact: Carole Crowe

(530) 224-4849 FAX: (530) 224-4857

Email: crowec@rb5r.swrcb.ca.gov

8) SANTA ANA REGION

3737 Main Street, Suite 500

Riverside, CA 92501-3339

Contact: Michael Roth *(Riverside County)*

(909) 320-2027 FAX: (909) 781-6288

Email: mroth@rb8.swrcb.ca.gov

Contact: Mark Smythe *(Orange County)*

(909) 782-4998 FAX: (909) 781-6288

Email: msmythe@rb8.swrcb.ca.gov

Contact: Bob Whitaker

NOTICE OF INTENT (NOI) TO COMPLY WITH THE TERMS OF THE GENERAL PERMIT TO DISCHARGE STORM WATER ASSOCIATED WITH CONSTRUCTION ACTIVITY GENERAL INSTRUCTIONS

Who Must Submit

Discharges of storm water associated with construction that results in the disturbance of five acres or more of land must apply for coverage under the General Construction Activities Storm Water Permit (General Permit). Construction activity which is a part of a larger common area of development or sale must also be permitted. (For example, if 4 acres of a 20-acre subdivision is disturbed by construction activities, and the remaining 16 acres is to be developed at a future date, the property owner must obtain a General Storm Water Permit for the 4-acre project). Construction activity includes, but is not limited to: clearing, grading, demolition, excavation, construction of new structures, and reconstruction of existing facilities involving removal and replacement that results in soil disturbance. This includes construction access roads, staging areas, storage areas, stockpiles, and any off-site areas which receive run-off from the construction project such as discharge points into a receiving water. Construction activity does not include routine maintenance to maintain original line and grade, hydraulic capacity, or original purpose of the facility.

The owner of the land where the construction activity is occurring is responsible for obtaining a permit. Owners may obtain coverage under the General Permit by filing a NOI in accordance with the following instructions. Coverage for construction activity conducted on easements (e.g., pipeline construction) or on nearby properties by agreement or permission, or by an owner or lessee of a mineral estate (oil, gas, geothermal, aggregate, precious metals, and/or industrial minerals) entitled to conduct the activities, shall be obtained by the entity responsible for the construction activity. Linear construction projects which will have construction activity occurring in one or more than one Region should contact the State Water Resources Control Board at the number listed below prior to submitting an NOI application for specific information related to the use of the NOI form.

Construction Activity Not Covered By This General Permit

Storm water discharges in the Lake Tahoe Hydrologic Unit will be regulated by a separate permit(s) adopted by the California Regional Water Quality Control Board, Lahontan Region, and will not be covered under the State Water Resources Control Board's (SWRCB) General Permit. Storm water discharges on Indian Lands will be regulated by the U.S. Environmental Protection Agency.

Where to Apply

The NOI form, vicinity map, and appropriate fee must be mailed to the SWRCB at the following address:

State Water Resources Control Board
Division of Water Quality
Attn: Storm Water Permit Unit
P.O. Box 1977
Sacramento, CA 95812-1977

When to Apply

Property owners proposing to conduct construction activities subject to this General Permit must file a Notice of Intent prior to the commencement of construction activity.

Fees

The annual fee is either $250 or $500 depending on the construction site location. See Enclosure 1 of the Permit to determine your fee. Checks should be made payable to: SWRCB.

Completing the Notice of Intent (NOI)

The submittal to obtain coverage under the General Permit must include a completed NOI Form (Notice of Intent, attached), a vicinity map, and the appropriate annual fee. The NOI must be completely and accurately filled out; the vicinity map and annual fee must be included with the NOI or the submittal is considered incomplete and will be rejected. A construction site is considered to be covered by the General Permit upon filing a complete NOI submittal, and implementation of a defensible Storm Water Pollution Prevention Plan (SWPPP). Upon receipt of a complete NOI submittal, each discharger will be sent a receipt letter containing the waste discharger's identification (WDID) number.

Questions?

If you have any questions on completing the NOI please call the SWRCB at (916) 657-1146.

NOI-LINE-BY-LINE INSTRUCTIONS

Please type or print when completing the NOI Form and vicinity map.

SECTION I--NOI STATUS

Mark one of the two boxes at the top portion of the NOI. Check box 1 if the NOI is being completed for new construction. Check box 2 if the NOI is being submitted to report changes for a construction site already covered by the General Permit. An example of a change that warrants a resubmittal of the NOI is a change of total area of the construction site. The permit is non-transferable, a change of ownership requires a Notice of Termination (NOT) submittal and a new NOI. Complete only those portions of the NOI that apply to the changes (the NOI must always be signed). If box 2 is checked, the WDID number must be included.

SECTION II--PROPERTY OWNER

Enter the construction site owner's official or legal name and address; contact person (if other than owner), title, and telephone number.

covered by the General Permit and to document the discharger's knowledge of the requirements for a SWPPP.

The NOI must be sent to the following address:

State Water Resources Control Board
Division of Water Quality
Storm Water Permit Unit
P.O. Box 1977
Sacramento, CA 95812-1977

The current annual fee for this General Permit is either $500 or $250 depending on the location of the project.

When construction is complete or ownership has been transferred, dischargers shall file a Notice of Termination with the RWQCB certifying that all State and local requirements have been met in accordance with Special Provisions for Construction Activity, C.7, of the General Permit.

Dischargers who fail to obtain coverage under this General Permit for storm water discharges to surface waters will be in violation of the CWA and the California Water Code.

CONSTRUCTION ACTIVITY NOT COVERED BY THIS GENERAL PERMIT

This General Permit does not apply to storm water discharges from (1) those areas on Tribal Lands; (2) the Lake Tahoe Hydrologic Unit; (3) construction by municipal entities with a population under 100,000; (4) construction under five acres, unless part of a larger common plan of development or sale; (5) projects covered by an individual NPDES Permit for storm water discharges associated with construction activity; and (6) landfill construction that is subject to the general industrial permit.

Storm water discharges in the Lake Tahoe Hydrologic Unit are regulated by a separate permit(s) adopted by the California Regional Water Quality Control Board, Lahontan Region (LRWQCB). USEPA regulates storm water discharges on Tribal Lands. Permit applications for storm water discharges that will be conducted in the Lake Tahoe Hydrologic Unit must be submitted directly to the LRWQCB.

DESCRIPTION OF GENERAL PERMIT CONDITIONS

The following is a brief description of the major provisions of the General Permit and the basis for the General Permit.

Prohibitions

This General Permit authorizes the discharge of storm water to surface waters from construction activities that result in the disturbance of five or more acres of land. It prohibits the discharge of materials other than storm water and authorized storm water discharges and all discharges which contain a hazardous substance in excess of reportable quantities established at 40 Code of Federal Regulations (CFR) 117.3 or 40 CFR 302.4 unless a separate NPDES Permit has been issued to regulate those discharges. In addition, this General Permit contains provisions that uphold discharge prohibitions contained in water quality control plans, as implemented through

event and mean annual rainfall can be obtained by calling the Western Regional Climate Center at 702- 677-3106 or via the internet at www.wrcc.dri.edu/precip.html and/or www.wrcc.dri.edu/pcpnfreq.html. Other rainfall information is available at www.cdec.water.ca.gov.

Receiving Water Limitations Language

The receiving water limitations language is fundamentally different from the language adopted in the SWRCB General Industrial Activities Storm Water Permit on April 17, 1997. Construction related activities which cause or contribute to an exceedance of water quality standards must be corrected immediately and cannot wait for the RWQCB to approve a plan of action to correct. The dynamic nature of construction activity allows the discharger the ability to more quickly identify and correct the source of the exceedances. Therefore, the owner is required to take immediate corrective action and to provide a report to the appropriate RWQCB within 14-calendar days of the violation describing the corrective action.

Storm Water Pollution Prevention Plan (SWPPP)

This General Permit requires development and implementation of a SWPPP. This document emphasizes the use of appropriately selected, correctly installed and maintained pollution reduction BMPs. This approach provides the flexibility necessary to establish BMPs which can effectively address source control of pollutants during changing construction activities.

All dischargers shall prepare and implement a SWPPP prior to disturbing a site. The SWPPP must be implemented at the appropriate level to protect water quality at all times throughout the life of the project. Nonstorm water BMPs must be implemented year round. The SWPPP shall remain on the site while the site is under construction, commencing with the initial mobilization and ending with the termination of coverage under the permit.

The SWPPP has two major objectives: (1) to help identify the sources of sediment and other pollutants that affect the quality of storm water discharges and (2) to describe and ensure the implementation of BMPs to reduce or eliminate sediment and other pollutants in storm water as well as nonstorm water discharges. The SWPPP shall include BMPs which address source control and, if necessary, shall also include BMPs which address pollutant control.

Required elements of a SWPPP include: (1) site description addressing the elements and characteristics specific to the site, (2) descriptions of BMPs for erosion and sediment controls, (3) BMPs for construction waste handling and disposal, (4) implementation of approved local plans, (5) proposed post-construction controls, including description of local post-construction erosion and sediment control requirements, and (6) nonstorm water management.

To ensure that the preparation, implementation, and oversight of the SWPPP is sufficient for effective pollution prevention, individuals responsible for creating, revising, overseeing, and implementing the SWPPP should participate in applicable training programs and document such training in the SWPPP.

SWPPPs are reports that are available to the public under Section 308(b) of the CWA and will be made available by the RWQCB upon request.

SECTION III--DEVELOPER / CONTRACTOR INFORMATION

Enter the name of the developer's (or general contractor's) official or legal name, address, contact person, title, and telephone number. The contact person should be someone who is familiar with the construction site and is responsible for compliance and oversight of the general permit.

SECTION IV-CONSTRUCTION PROJECT INFORMATION

Enter the project name, site address, county, city, (or nearest city if construction is occurring in an unincorporated area), zip code, and telephone number (if any) of the construction site. Include an emergency contact telephone or pager number. Construction site information should include latitude and longitude designations, tract numbers, and/or mile post markers, if applicable. The site contact person should be someone who is familiar with the project, site plans, SWPPP, and monitoring program. All NOIs must be accompanied by a vicinity map.
Part A: Enter the total size in acres of all areas associated with construction activity, including all access roads.

Part B: Enter the total size in acres of the area to be disturbed by construction activity and the percentage of the area listed in Part A above that this represents.

Part C: Enter the percentage of the site that is impervious (areas where water cannot soak into the ground, such as concrete, asphalt, rooftops, etc.) before and after construction.

Part D: Include tract numbers, if available.

Part E: Enter the mile post marker number at the project site location.

Part F: Indicate whether the construction site is part of a larger common plan of development or sale. For example, if the construction activity is occurring on a two-acre site which is within a development that is five acres or greater, answer yes.

Part G: Enter the name of the development (e.g. "Quail Ridge Subdivision", "Orange Valley Estates", etc.).

Part H: Indicate when construction will begin (month, day, year). When a NOI is being submitted due to a change in ownership, the commencement date should be the date the new ownership took effect.

Part I: Indicate the percentage of the total project area to be mass graded.

Part J: Enter the estimated completion dates for the mass grading activities and for the project completion.

Part K: Indicate the type(s) of construction taking place. For example, "Transportation" should be checked for the construction of roads; "Utility" should be checked for installation of sewer, electric, or telephone systems. Include a description of the major construction activities, (e.g., 20 single family homes, a supermarket, an office building, a factory, etc.)

SECTION V--BILLING ADDRESS

To continue coverage under the General Permit, the annual fee must be paid. Indicate where the annual fee invoice should be mailed by checking one of the following boxes:

Owner: sent to the owners address as it appears in Section II.

Developer/Contractor: sent to the developer's address as it appears in Section III.

Other: sent to a different address and enter that address in the spaces provided.

SECTION VI--REGULATORY STATUS

Indicate whether or not the site is subject to local erosion/sediment control ordinances. Indicate whether the erosion/sediment control plan designed to comply with the ordinance addresses the construction of infrastructure and structures in addition to grading. Identify the name and telephone number of the local agency, if applicable.

SECTION VII--RECEIVING WATER INFORMATION

Part A: Indicate whether the storm water runoff from the construction site discharges indirectly to waters of the United States, directly to waters of the United States, or to a separate storm drain system.

Indirect discharges include discharges that may flow overland across adjacent properties or rights-of-way prior to discharging into waters of the United States.

Enter the name of the owner/operator of the relevant storm drain system, if applicable.

Storm water discharges directly to waters of the United States will typically have an outfall structure directly from the facility to a river, lake, creek, stream, bay, ocean, etc. Discharges to separate storm sewer systems are those that discharge to a collection system operated by municipalities, flood control districts, utilities, or similar entities.

Part B: Enter the name of the receiving water. Regardless of point of discharge, the owner must determine the receiving water for the construction site's storm water discharge. Enter the name of the receiving water.

SECTION VIII--IMPLEMENTATION OF NPDES PERMIT REQUIREMENTS

Part A: Indicate the status of the SWPPP, date prepared, or availability for review. Also indicate if a tentative construction schedule has been included in the SWPPP (the inclusion of a construction activity schedule is a mandatory SWPPP requirement).

Part B: Provide information concerning the status of the development of a monitoring program, a component of the SWPPP which outlines an inspection and maintenance schedule for the proposed Best Management Practices (BMPs). Provide name and phone number of program preparer.

Part C: Provide the name and phone numbers of the responsible party or parties designated to insure compliance with all elements of the General Permit and SWPPP.

SECTION IX--VICINITY MAP AND FEE

Provide a "to scale" or "to approximate scale" drawing of the construction site and the immediate surrounding area. Whenever possible, limit the map to an 8.5" x 11' or 11" x 17" sheet of paper. At a minimum, the map must show the site perimeter, the geographic features surrounding the site, and general topography, and a north arrow. The map must also include the location of the construction project in relation to named streets, roads, intersections, or landmarks. A NOI containing a map which does not clearly indicate the location of the construction project will be rejected. Do not submit blueprints unless they meet the above referenced size limits.

SECTION X--CERTIFICATIONS

This section must be completed by the owner or signatory agent of the construction site*. The certification provides assurances that the NOI and vicinity map were completed in an accurate and complete fashion and with the knowledge that penalties exist for providing false information. Certification also requires the owner to comply with the provisions in the General Permit.

* For a corporation: a responsible corporate officer (or authorized individual). For a partnership or sole proprietorship: a general partner or the proprietor, respectively. For a municipality, State, Federal, or other public agency: either a principal executive officer, ranking elected official, or duly authorized representative.

303d Listed Water Bodies for Sedimentation

REGION	WATER BODY NAME	CODE	POLLUTANT
1	MATTOLE RIVER	1100	Sedimentation/Siltation
1	TRINITY RIVER, SOUTH FORK	1100	Sedimentation/Siltation
1	REDWOOD CREEK	1100	Sedimentation/Siltation
1	MAD RIVER	1100	Sedimentation/Siltation
1	ELK RIVER	1100	Sedimentation/Siltation
1	EEL RIVER, SOUTH FORK	1100	Sedimentation/Siltation
1	EEL RIVER, NORTH FORK	1100	Sedimentation/Siltation
1	TRINITY RIVER	1100	Sedimentation/Siltation
1	EEL RIVER, MIDDLE FORK	1100	Sedimentation/Siltation
1	MAD RIVER	2500	Turbidity
1	TEN MILE RIVER	1100	Sedimentation/Siltation
1	NOYO RIVER	1100	Sedimentation/Siltation
1	BIG RIVER	1100	Sedimentation/Siltation
1	ALBION RIVER	1100	Sedimentation/Siltation
1	NAVARRO RIVER	1100	Sedimentation/Siltation
1	GARCIA RIVER	1100	Sedimentation/Siltation
1	GUALALA RIVER	1100	Sedimentation/Siltation
1	RUSSIAN RIVER	1100	Sedimentation/Siltation
1	TOMKI CREEK	1100	Sedimentation/Siltation
1	VAN DUZEN RIVER	1100	Sedimentation/Siltation
1	EEL RIVER DELTA	1100	Sedimentation/Siltation
1	EEL RIVER, MIDDLE MAIN FORK	1100	Sedimentation/Siltation
1	ESTERO AMERICANO	1100	Sedimentation/Siltation
1	NAVARRO RIVER DELTA	1100	Sedimentation/Siltation

1	EEL RIVER, UPPER MAIN FORK	1100	Sedimentation/Siltation
1	FRESHWATER CREEK	1100	Sedimentation/Siltation
1	SCOTT RIVER	1100	Sedimentation/Siltation
2	TOMALES BAY	1100	Sedimentation/Siltation
2	NAPA RIVER	1100	Sedimentation/Siltation
2	SONOMA CREEK	1100	Sedimentation/Siltation
2	PETALUMA RIVER	1100	Sedimentation/Siltation
2	LAGUNITAS CREEK	1100	Sedimentation/Siltation
2	WALKER CREEK	1100	Sedimentation/Siltation
2	SAN GREGORIO CREEK	1100	Sedimentation/Siltation
2	SAN FRANCISQUITO CREEK	1100	Sedimentation/Siltation
2	PESCADERO CREEK (REG 2)	1100	Sedimentation/Siltation
2	BUTANO CREEK	1100	Sedimentation/Siltation
3	MORRO BAY	1100	Sedimentation/Siltation
3	SAN LORENZO RIVER ESTUARY	1100	Sedimentation/Siltation
3	SHINGLE MILL CREEK	1100	Sedimentation/Siltation
3	MOSS LANDING HARBOR	1100	Sedimentation/Siltation
3	WATSONVILLE SLOUGH	1100	Sedimentation/Siltation
3	SAN LORENZO RIVER	1100	Sedimentation/Siltation
3	ELKHORN SLOUGH	1100	Sedimentation/Siltation
3	SALINAS RIVER LAGOON (NORTH)	1100	Sedimentation/Siltation
3	GOLETA SLOUGH/ESTUARY	1100	Sedimentation/Siltation
3	CARPINTERIA MARSH (EL ESTERO MARSH)	1100	Sedimentation/Siltation
3	LOMPICO CREEK	1100	Sedimentation/Siltation
3	MORO COJO SLOUGH	1100	Sedimentation/Siltation
3	VALENCIA CREEK	1100	Sedimentation/Siltation
3	PAJARO RIVER	1100	Sedimentation/Siltation

3	RIDER GULCH CREEK	1100	Sedimentation/Siltation
3	LLAGAS CREEK	1100	Sedimentation/Siltation
3	SAN BENITO RIVER	1100	Sedimentation/Siltation
3	SALINAS RIVER	1100	Sedimentation/Siltation
3	CHORRO CREEK	1100	Sedimentation/Siltation
3	LOS OSOS CREEK	1100	Sedimentation/Siltation
3	SANTA YNEZ RIVER	1100	Sedimentation/Siltation
3	SAN ANTONIO CREEK (SANTA BARBARA COUNTY)	1100	Sedimentation/Siltation
3	CARBONERA CREEK	1100	Sedimentation/Siltation
3	SOQUEL LAGOON	1100	Sedimentation/Siltation
3	APTOS CREEK	1100	Sedimentation/Siltation
4	MUGU LAGOON	1100	Sedimentation/Siltation
5	HUMBUG CREEK	1100	Sedimentation/Siltation
5	PANOCHE CREEK	1100	Sedimentation/Siltation
5	FALL RIVER (PIT)	1100	Sedimentation/Siltation
6	BEAR CREEK (R6)	1100	Sedimentation/Siltation
6	MILL CREEK (3)	1100	Sedimentation/Siltation
6	HORSESHOE LAKE (2)	1100	Sedimentation/Siltation
6	BRIDGEPORT RES	1100	Sedimentation/Siltation
6	TOPAZ LAKE	1100	Sedimentation/Siltation
6	LAKE TAHOE	1100	Sedimentation/Siltation
6	PINE CREEK (2)	1100	Sedimentation/Siltation
6	TRUCKEE RIVER	1100	Sedimentation/Siltation
6	CLEARWATER CREEK	1100	Sedimentation/Siltation
6	GRAY CREEK (R6)	1100	Sedimentation/Siltation
6	WARD CREEK	1100	Sedimentation/Siltation
6	BLACKWOOD CREEK	1100	Sedimentation/Siltation

6	GOODALE CREEK	1100	Sedimentation/Siltation
6	EAST WALKER RIVER	1100	Sedimentation/Siltation
6	HEAVENLY VALLEY CREEK	1100	Sedimentation/Siltation
6	WOLF CREEK (1)	1100	Sedimentation/Siltation
6	WEST WALKER RIVER	1100	Sedimentation/Siltation
6	HOT SPRINGS CANYON CREEK	1100	Sedimentation/Siltation
6	BRONCO CREEK	1100	Sedimentation/Siltation
6	SQUAW CREEK	1100	Sedimentation/Siltation
7	IMPERIAL VALLEY DRAINS	1100	Sedimentation/Siltation
7	NEW RIVER (R7)	1100	Sedimentation/Siltation
7	ALAMO RIVER	1100	Sedimentation/Siltation
8	SAN DIEGO CREEK, REACH 1	1100	Sedimentation/Siltation
8	RATHBONE (RATHBUN) CREEK	1100	Sedimentation/Siltation
8	SAN DIEGO CREEK, REACH 2	1100	Sedimentation/Siltation
8	UPPER NEWPORT BAY ECOLOGICAL RESERVE	1100	Sedimentation/Siltation
8	BIG BEAR LAKE	1100	Sedimentation/Siltation
8	ELSINORE, LAKE	1100	Sedimentation/Siltation
9	SAN ELIJO LAGOON	1100	Sedimentation/Siltation
9	LOS PENASQUITOS LAGOON	1100	Sedimentation/Siltation
9	AGUA HEDIONDA LAGOON	1100	Sedimentation/Siltation
9	BUENA VISTA LAGOON	1100	Sedimentation/Siltation

ATTACHMENT P

Notice of Termination

CALIFORNIA REGIONAL WATER QUALITY CONTROL BOARDS

NORTH COAST REGION (1)
5550 Skylane Blvd, Ste. A
Santa Rose, CA 95403
(707) 576-2220 FAX: (707)523-0135
http://www.waterboards.ca.gov/rwqcb1

SAN FRANCISCO BAY REGION (2)
1515 Clay Street, Ste. 1400
Oakland, CA 94612
(510) 622-2300 FAX: (510) 622-2640
http://www.waterboards.ca.gov/rwqcb2

CENTRAL COAST REGION (3)
895 Aerovista Place, Ste 101
San Luis Obispo, CA 93401
(805) 549-3147 FAX: (805) 543-0397
http://www.waterboards.ca.gov/rwqcb3

LOS ANGELES REGION (4)
320 W. 4th Street, Ste. 200
Los Angeles, CA 90013
(213) 576-6600 FAX: (213) 576-6640
http://www.waterboards.ca.gov/rwqcb4

CENTRAL VALLEY REGION (5S)
11020 Sun Center Dr., #200
Rancho Cordova, CA 95670-6114
(916) 464-3291 FAX: (916) 464-4645
http:www.waterboards.ca.gov/rwqcb5

FRESNO BRANCH OFFICE (5F)
1685 E St.
Fresno, CA 93706
(559) 445-5116 FAX: (559) 445-5910
http://www.waterboards.ca.gov/rwqcb5

REDDING BRANCH OFFICE (5R)
415 Knollcrest Drive, Ste. 100
Redding, CA 96002
(530) 224-4845 FAX: (530) 224-4857
http://www.waterboards.ca.gov/rwqcb5

LAHONTAN REGION (6 SLT)
2501 Lake Tahoe Blvd.
South Lake Tahoe, CA 96150
(530) 542-5400 FAX: (530) 544-2271
http://www.waterboards.ca.gov/rwqcb6

VICTORVILLE OFFICE (6V)
14440 Civic Drive, Ste. 200
Victorville, CA 92392
(760) 241-6583 FAX: (760) 241-7308
http://www.waterboards.ca.gov/rwqcb6

COLORADO RIVER BASIN REGION (7)
73-720 Fred Waring Dr., Ste. 100
Palm Desert, CA 92260
(760) 346-7491 FAX: (760) 341-6820
http://www.waterboards.ca.gov/rwqcb7

SANTA ANA REGION (8)
California Tower
3737 Main Street, Ste. 500
Riverside, CA 92501-3339
http://www.waterboards.ca.gov/rwqcb8

SAN DIEGO REGION (9)
9174 Sky Park Court, Ste. 100
San Diego, CA 92123-4340
(858) 467-2952 FAX: (858) 571-6972
http://www.waterboards.ca.gov/rwqcb9

STATE OF CALIFORNIA
Arnold Schwarzenegger, Governor

CALIFORNIA ENVIRONMENTAL
PROTECTION AGENCY
Terry Tamminen, Secretary

STATE WATER RESOURCES
CONTROL BOARD
Arthur Baggett Jr., Chairman

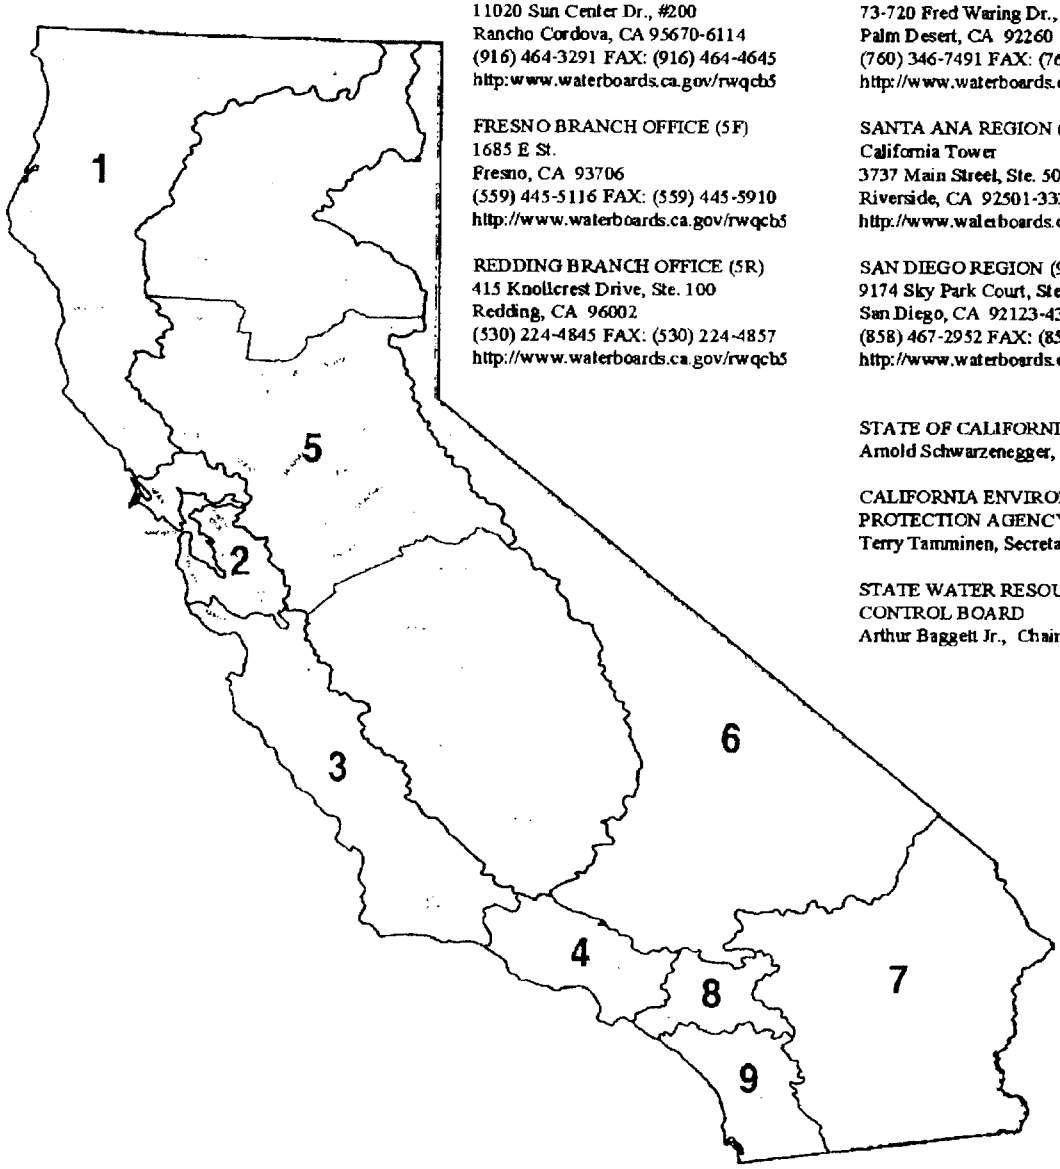

Linda S. Adams
Secretary for Environmental Protection

State Water Resources Control Board

Division of Water Quality
1001 I Street • Sacramento, California 95814 • (916) 341-5537
Mailing Address: P.O. Box 1977 • Sacramento, California • 95812-1977
FAX (916) 341-5543 • Internet Address: http://www.waterboards.ca.gov/stormwtr/index.html

Arnold Schwarzenegger
Governor

To: Storm Water Permit Holder

RE: NOTICE OF TERMINATION OF COVERAGE UNDER THE GENERAL **CONSTRUCTION** STORM WATER PERMIT (GENERAL PERMIT)

In order for us to terminate your coverage under the General Permit, please complete and submit the enclosed Notice of Termination (NOT) your local Regional Water Quality Control Board (RWQCB). Refer to the last page of the NOT packet for RWQCB locations.

Submittal of a NOT does not guarantee termination and outstanding invoices are still valid. If your NOT is denied, you will be required to continue complying with the requirements of the General Permit and all outstanding invoice(s) are due. You will be notified of your NOT status by the RWQCB or State Water Resources Control Board. Approval of your Notice of Termination does not relieve you from paying any applicable outstanding invoices.

Should you have any questions regarding this matter, please contact your local RWQCB at the number listed on the back page of the NOT package, or the Storm Water Unit at (916) 341-5537.

Sincerely,

Storm Water Unit
Division of Water Quality

Enclosure

SEND TO YOUR LOCAL RWQCB FOR APPROVAL

State of California
State Water Resources Control Board

NOTICE OF TERMINATION

OF COVERAGE UNDER THE NPDES GENERAL PERMIT NO. CAS000002
FOR DISCHARGES OF STORM WATER
ASSOCIATED WITH CONSTRUCTION ACTIVITY

Submission of this Notice of Termination constitutes notice that the owner (and his/her agent) of the site identified on this form is no longer authorized to discharge storm water associated with construction activity by NPDES General Permit No. CAS000002.

I. WDID NO.

II. OWNER

COMPANY NAME _____ CONTACT PERSON

STREET ADDRESS _____ TITLE

CITY _____ STATE _____ ZIP _____ PHONE

III. CONSTRUCTION SITE INFORMATION

A. DEVELOPER NAME _____ CONTACT PERSON

STREET ADDRESS _____ TITLE

CITY _____ CA ZIP _____ PHONE

B. SITE ADDRESS _____ COUNTY _____

CITY _____ CA ZIP _____ PHONE

IV. BASIS OF TERMINATION

_____ 1. The construction project is complete and the following conditions have been met.

- All elements of the Storm Water Pollution Prevention Plan have been completed.
- Construction materials and waste have been disposed of properly.
- The site is in compliance with all local storm water management requirements.
- A post-construction storm water operation and management plan is in place.

Date of project completion _____

_____ 2. Construction activities have been suspended, either temporarily _____ or indefinitely _____ and the following conditions have been met.

- All elements of the Storm Water Pollution Prevention Plan have been completed.
- Construction materials and waste have been disposed of properly.
- All denuded areas and other areas of potential erosion are stabilized.
- An operation and maintenance plan for erosion and sediment control is in place.
- The site is in compliance with all local storm water management requirements.

Date of suspension _____ Expected start up date _____

_____ 3. Site can not discharge storm water to waters of the United States (check one).

SEND TO YOUR LOCAL RWQCB FOR APPROVAL

_____ All storm water is retained on site.

_____ All storm water is discharged to evaporation or percolation ponds offsite.

_____ 4. Discharge of storm water from the site is now subject to another NPDES general permit or an individual NPDES permit.

NPDES Permit No._____ Date coverage began _____

_____ 5. There is a new owner of the identified site. Date of owner transfer _____

Was the new owner notified of the General Permit requirements? YES ____ NO ____

NEW OWNER INFORMATION

COMPANY NAME _____ CONTACT PERSON

STREET ADDRESS _____ TITLE

CITY _____ STATE _____ ZIP _____ PHONE

V. **EXPLANATION OF BASIS OF TERMINATION** (Attach site photographs - see instructions).

VI. **CERTIFICATION:**

I certify under penalty of law that all storm water discharges associated with construction activity from the identified site that are authorized by NPDES General Permit No. CAS000002 have been eliminated or that I am no longer the owner of the site. I understand that by submitting this Notice of Termination, I am no longer authorized to discharge storm water associated with construction activity under the general permit, and that discharging pollutants in storm water associated with construction activity to waters of the United States is unlawful under the Clean Water Act where the discharge is not authorized by a NPDES permit. I also understand that the submittal of this Notice of Termination does not release an owner from liability for any violations of the general permit or the Clean Water Act.

PRINTED NAME _____ TITLE

SIGNATURE: _____ DATE _____

REGIONAL WATER BOARD USE ONLY

This Notice of Termination has been reviewed, and I recommend termination of coverage under the subject NPDES general permit.

Printed Name _____ Region No. _____

Signature _____ Date ____/____/____

NOT effective date:

Date: ____/____/____

State of California
State Water Resources Control Board

INSTRUCTIONS FOR COMPLETING NOTICE OF TERMINATION FOR CONSTRUCTION ACTIVITY

Who May File

Dischargers who are presently covered under NPDES General Permit No. CAS000002 for discharge of storm water associated with construction activity may submit a Notice of Termination when they meet one of the following criteria.

1. The construction project has been completed and the following conditions have been met: all elements of the Stormwater Pollution Prevention Plan have been completed; construction materials and equipment maintenance waste have been disposed of properly; the site is in compliance with all local storm water management requirements including erosion/sediment control requirements and the appropriate use permits have been obtained; and a post-construction storm water operation and management plan is in place.

2. Construction activities have been suspended, either temporarily or indefinitely and the following conditions have been: all elements of the Stormwater Pollution Prevention Plan have been completed; construction materials and equipment maintenance waste have been disposed of properly; all denuded areas and other areas of potential erosion are stabilized; an operation and maintenance plan for erosion and sediment control is in place; and the site is in compliance with all local storm water management requirements including erosion/sediment control requirements.
   The date construction activities were suspended, and the expected date construction activities will start up again should be provided.

3. Construction site can not discharge storm water to waters of the United States. Please indicate if all storm water is retained on site or if storm water is collected offsite.

4. Discharge of construction storm water from the site is now subject to another NPDES general permit or an individual NPDES permit. The general permit or individual permit NPDES number and date coverage began should be provided.

5. There is a new owner of the identified site. If ownership or operation of the facility has been transferred then the previous owner must submit a Notice of Termination and the new owner must submit a Notice of Intent for coverage under the general permit. The date of transfer and information on the new owner should be provided. Note that the previous owner may be liable for discharge from the site until the new owner files a Notice of Intent for coverage under the general permit.

Where to File

Submit the Notice of Termination to the Executive Officer of the Regional Water Quality Control Board responsible for the area in which the facility is located. See attached. Submittal of a NOT does not guarantee termination and outstanding invoices are still valid. If the Executive Officer, or his designated staff, agrees with the basis of termination, the Notice of Termination will be transmitted to the State Water Board for processing at which time it will be determined if any outstanding invoices are still valid. Approval of your Notice of Termination does not relieve you from paying any applicable outstanding invoices. If the Executive Officer, or his designated staff, does not agree with the basis of termination, the Notice of Termination will be returned. The Regional Water Board may also inspect your site prior to accepting the basis of termination.

LINE-BY-LINE INSTRUCTIONS

All necessary information must be provided on the form. Type or print in the appropriate areas only. Submit additional information, if necessary, on a separate sheet of paper.

SECTION I--WDID NO.

The WDID No. is a number assigned to each discharger covered under the General Permit. If you do not know your WDID No., please call the State Water Board or Regional Water Board and request it prior to submittal of the Notice of Termination.

SECTION II--OWNER

Enter the owner of the construction site's official or legal name (This should correspond with the name on the Notice of Intent submitted for the site), address of the owner, contact person, and contact person's title and telephone number.

SECTION III--CONSTRUCTION SITE INFORMATION

In Part A, enter the name of the developer (or general contractor), address, contact person, and contact person's title and telephone number. The contact person should be the construction site manager completely familiar with the construction site and charged with compliance and oversight of the general permit. This information should correspond with information on the Notice of Intent submitted for the site.

In Part B, enter the address, county, and telephone number (if any) of the construction site. Construction sites that do not have a street address must attach a legal description of the site.

SECTION IV--BASIS OF TERMINATION

Check the category which best defines the basis of your termination request. See the discussion of the criteria in the Who May File section of these instructions. Provide dates and other information requested. Use the space under Explanation of Basis of Termination heading.

SECTION V--EXPLANATION OF BASIS OF TERMINATION

Please explain the basis or reasons why you believe your construction site is not required to comply with the General Permit. To support your explanation, provide a site map and photograph of your site.

SECTION VI--CERTIFICATION

This section must be completed by the owner of the site.

The Notice of Termination must be signed by:

For a Corporation: a responsible corporate officer

For a Partnership or Sole Proprietorship: a general partner or the proprietor, respectively.

For a Municipality, State, or other Non-Federal Public Agency: either a principal executive officer or ranking elected official.

For a Federal Agency: either the chief or senior executive officer of the agency.

ATTACHMENT Q

BMPs Selected for the Project

EC-1 – Scheduling

EC-2 – Preservation of Existing Vegetation

EC-5 – Soil Binders

SE-2 – Sediment Basin

SE-5 – Fiber Rolls

SE-6 – Gravel Bag Berm

SE-7 – Street Sweeping and Vacuuming

SE-10 – Storm Drain Inlet Protection

NS-1 – Water Conservation Practices

NS-3 – Paving and Grinding Operations

NS-6 – Illicit Connection/Discharge

NS-7 – Potable Water/Irrigation

NS-12 – Concrete Curing

NS-13 – Concrete Finishing

TC-1 – Stabilized Construction Entrance

TC-3 – Entrance/Outlet Tire Wash

WE-1 – Wind Erosion Control

WM-1 – Material Delivery and Storage

WM-2 – Material Use

WM-3 – Stockpile Management

WM-4 – Spill Prevention and Control

WM-5 – Solid Waste Management

WM-8 – Concrete Waste Management

WM-9 – Sanitary/Septic Waste Management

Scheduling EC-1

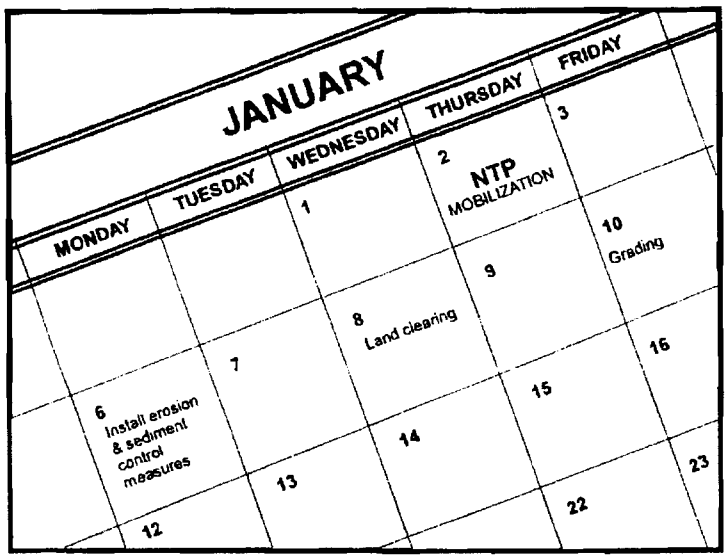

Objectives

EC	Erosion Control	✓
SE	Sediment Control	✓
TC	Tracking Control	✓
WE	Wind Erosion Control	✓
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:

✓ **Primary Objective**

✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

None

Description and Purpose

Scheduling is the development of a written plan that includes sequencing of construction activities and the implementation of BMPs such as erosion control and sediment control while taking local climate (rainfall, wind, etc.) into consideration. The purpose is to reduce the amount and duration of soil exposed to erosion by wind, rain, runoff, and vehicle tracking, and to perform the construction activities and control practices in accordance with the planned schedule.

Suitable Applications

Proper sequencing of construction activities to reduce erosion potential should be incorporated into the schedule of every construction project especially during rainy season. Use of other, more costly yet less effective, erosion and sediment control BMPs may often be reduced through proper construction sequencing.

Limitations

- Environmental constraints such as nesting season prohibitions reduce the full capabilities of this BMP.

Implementation

- Avoid rainy periods. Schedule major grading operations during dry months when practical. Allow enough time before rainfall begins to stabilize the soil with vegetation or physical means or to install sediment trapping devices.
- Plan the project and develop a schedule showing each phase of construction. Clearly show how the rainy season relates to soil

disturbing and re-stabilization activities. Incorporate the construction schedule into the SWPPP.

- Include on the schedule, details on the rainy season implementation and deployment of:
  - Erosion control BMPs
  - Sediment control BMPs
  - Tracking control BMPs
  - Wind erosion control BMPs
  - Non-stormwater BMPs
  - Waste management and materials pollution control BMPs
- Include dates for activities that may require non-stormwater discharges such as dewatering, sawcutting, grinding, drilling, boring, crushing, blasting, painting, hydro-demolition, mortar mixing, pavement cleaning, etc.
- Work out the sequencing and timetable for the start and completion of each item such as site clearing and grubbing, grading, excavation, paving, foundation pouring utilities installation, etc., to minimize the active construction area during the rainy season.
  - Sequence trenching activities so that most open portions are closed before new trenching begins.
  - Incorporate staged seeding and re-vegetation of graded slopes as work progresses.
  - Schedule establishment of permanent vegetation during appropriate planting time for specified vegetation.
- Non-active areas should be stabilized as soon as practical after the cessation of soil disturbing activities or one day prior to the onset of precipitation.
- Monitor the weather forecast for rainfall.
- When rainfall is predicted, adjust the construction schedule to allow the implementation of soil stabilization and sediment treatment controls on all disturbed areas prior to the onset of rain.
- Be prepared year round to deploy erosion control and sediment control BMPs. Erosion may be caused during dry seasons by un-seasonal rainfall, wind, and vehicle tracking. Keep the site stabilized year round, and retain and maintain rainy season sediment trapping devices in operational condition.
- Apply permanent erosion control to areas deemed substantially complete during the project's defined seeding window.

Costs

Construction scheduling to reduce erosion may increase other construction costs due to reduced economies of scale in performing site grading. The cost effectiveness of scheduling techniques should be compared with the other less effective erosion and sedimentation controls to achieve a cost effective balance.

Inspection and Maintenance

- Verify that work is progressing in accordance with the schedule. If progress deviates, take corrective actions.
- Amend the schedule when changes are warranted.
- Amend the schedule prior to the rainy season to show updated information on the deployment and implementation of construction site BMPs.

References

Stormwater Quality Handbooks Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities Developing Pollution Prevention Plans and Best Management Practices (EPA 832-R-92-005), U.S. Environmental Protection Agency, Office of Water, September 1992.

Preservation Of Existing Vegetation EC-2

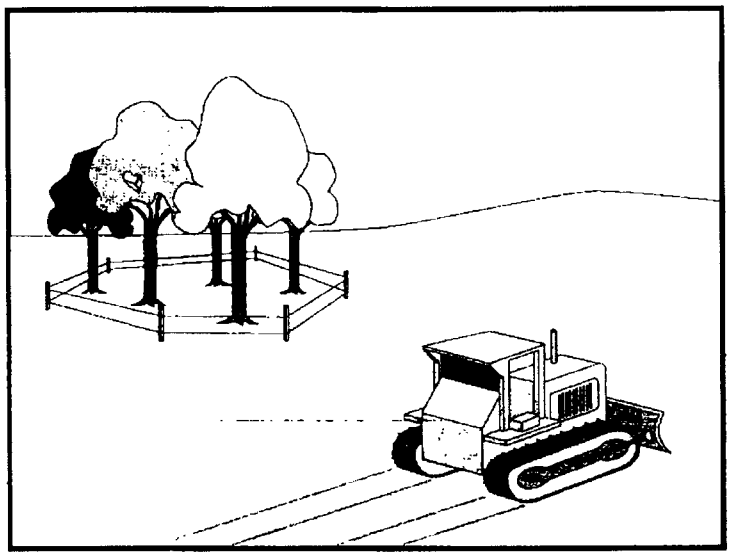

Objectives

EC	Erosion Control	✓
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:

✓ **Primary Objective**

✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

None

Description and Purpose

Carefully planned preservation of existing vegetation minimizes the potential of removing or injuring existing trees, vines, shrubs, and grasses that protect soil from erosion.

Suitable Applications

Preservation of existing vegetation is suitable for use on most projects. Large project sites often provide the greatest opportunity for use of this BMP. Suitable applications include the following:

- Areas within the site where no construction activity occurs, or occurs at a later date. This BMP is especially suitable to multi year projects where grading can be phased.
- Areas where natural vegetation exists and is designated for preservation. Such areas often include steep slopes, watercourse, and building sites in wooded areas.
- Areas where local, state, and federal government require preservation, such as vernal pools, wetlands, marshes, certain oak trees, etc. These areas are usually designated on the plans, or in the specifications, permits, or environmental documents.
- Where vegetation designated for ultimate removal can be temporarily preserved and be utilized for erosion control and sediment control.

EC-2 Preservation Of Existing Vegetation

Limitations

- Requires forward planning by the owner/developer, contractor, and design staff.
- Limited opportunities for use when project plans do not incorporate existing vegetation into the site design.
- For sites with diverse topography, it is often difficult and expensive to save existing trees while grading the site satisfactory for the planned development.

Implementation

The best way to prevent erosion is to not disturh the land. In order to reduce the impacts of new development and redevelopment, projects may be designed to avoid disturbing land in sensitive areas of the site (e.g., natural watercourses, steep slopes), and to incorporate unique or desirable existing vegetation into the site's landscaping plan. Clearly marking and leaving a buffer area around these unique areas during construction will help to preserve these areas as well as take advantage of natural erosion prevention and sediment trapping.

Existing vegetation to be preserved on the site must be protected from mechanical and other injury while the land is being developed. The purpose of protecting existing vegetation is to ensure the survival of desirable vegetation for shade, beautification, and erosion control. Mature vegetation has extensive root systems that help to hold soil in place, thus reducing erosion. In addition, vegetation helps keep soil from drying rapidly and becoming susceptible to erosion. To effectively save existing vegetation, no disturbances of any kind should be allowed within a defined area around the vegetation. For trees, no construction activity should occur within the drip line of the tree.

Timing

- Provide for preservation of existing vegetation prior to the commencement of clearing and grubbing operations or other soil disturbing activities in areas where no construction activity is planned or will occur at a later date.

Design and Layout

- Mark areas to be preserved witb temporary fencing. Include sufficient setback to protect roots.
  - Orange colored plastic mesh fencing works well.
  - Use appropriate fence posts and adequate post spacing and depth to completely support the fence in an upright position.
- Locate temporary roadways, stockpiles, and layout areas to avoid stands of trees, sbrubs, and grass.
- Consider the impact of grade changes to existing vegetation and the root zone.
- Maintain existing irrigation systems where feasible. Temporary irrigation may be required.
- Instruct employees and subcontractors to honor protective devices. Prohibit beavy equipment, vehicular traffic, or storage of construction materials within the protected area.

Preservation Of Existing Vegetation EC-2

Costs

There is little cost associated with preserving existing vegetation if properly planned during the project design, and these costs may be offset by aesthetic benefits that enhance property values. During construction, the cost for preserving existing vegetation will likely be less than the cost of applying erosion and sediment controls to the disturbed area. Replacing vegetation inadvertently destroyed during construction can be extremely expensive, sometimes in excess of $10,000 per tree.

Inspection and Maintenance

During construction, the limits of disturbance should remain clearly marked at all times. Irrigation or maintenance of existing vegetation should be described in the landscaping plan. If damage to protected trees still occurs, maintenance guidelines described below should be followed:

- Verify that protective measures remain in place. Restore damaged protection measures immediately.
- Serious tree injuries shall be attended to by an arborist.
- Damage to the crown, trunk, or root system of a retained tree shall be repaired immediately.
- Trench as far from tree trunks as possible, usually outside of the tree drip line or canopy. Curve trenches around trees to avoid large roots or root concentrations. If roots are encountered, consider tunneling under them. When trenching or tunneling near or under trees to be retained, place tunnels at least 18 in. below the ground surface, and not below the tree center to minimize impact on the roots.
- Do not leave tree roots exposed to air. Cover exposed roots with soil as soon as possible. If soil covering is not practical, protect exposed roots with wet burlap or peat moss until the tunnel or trench is ready for backfill.
- Cleanly remove the ends of damaged roots with a smooth cut.
- Fill trenches and tunnels as soon as possible. Careful filling and tamping will eliminate air spaces in the soil, which can damage roots.
- If bark damage occurs, cut back all loosened bark into the undamaged area, with the cut tapered at the top and bottom and drainage provided at the base of the wood. Limit cutting the undamaged area as much as possible.
- Aerate soil that has been compacted over a trees root zone by punching holes 12 in. deep with an iron bar, and moving the bar back and forth until the soil is loosened. Place holes 18 in. apart throughout the area of compacted soil under the tree crown.
- Fertilization
  - Fertilize stressed or damaged broadleaf trees to aid recovery.
  - Fertilize trees in the late fall or early spring.

- Apply fertilizer to the soil over the feeder roots and in accordance with label instructions, but never closer than 3 ft to the trunk. Increase the fertilized area by one-fourth of the crown area for conifers that have extended root systems.

- Retain protective measures until all other construction activity is complete to avoid damage during site cleanup and stabilization.

References

County of Sacramento Tree Preservation Ordinance, September 1981.

Stormwater Quality Handbooks Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management of the Puget Sound Basin, Technical Manual, Publication #91-75, Washington State Department of Ecology, February 1992.

Water Quality Management Plan for The Lake Tahoe Region, Volume II, Handbook of Management Practices, Tahoe Regional Planning Agency, November 1988.

Soil Binders

EC-5

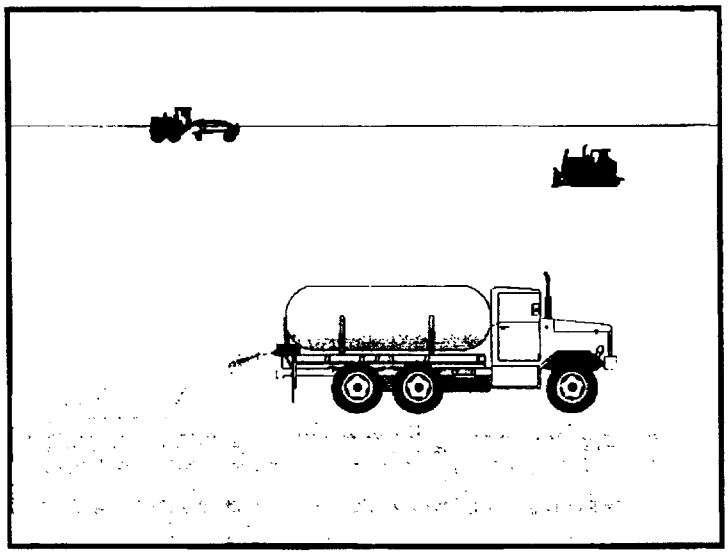

Objectives

EC	Erosion Control	✓
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	✓
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:

✓ **Primary Objective**

✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

EC-3 Hydraulic Mulch

EC-4 Hydroseeding

EC-6 Straw Mulch

EC-7 Geotextiles and Mats

EC-8 Wood Mulching

Description and Purpose

Soil binders consist of applying and maintaining a soil stabilizer to exposed soil surfaces. Soil binders are materials applied to the soil surface to temporarily prevent water induced erosion of exposed soils on construction sites. Soil binders also prevent wind erosion.

Suitable Applications

Soil binders are typically applied to disturbed areas requiring short term temporary protection. Because soil binders can often be incorporated into the work, they are a good alternative to mulches in areas where grading activities will soon resume. Soil binders are also suitable for use on stockpiles.

Limitations

- Soil binders are temporary in nature and may need reapplication.
- Soil binders require a minimum curing time until fully effective, as prescribed by the manufacturer. Curing time may he 24 hours or longer. Soil binders may need reapplication after a storm event.
- Soil binders will generally experience spot failures during heavy rainfall events. If runoff penetrates the soil at the top of a slope treated with a soil binder, it is likely that the runoff will undercut the stabilized soil layer and discharge at a point further down slope.

- Soil binders do not hold up to pedestrian or vehicular traffic across treated areas.
- Soil binders may not penetrate soil surfaces made up primarily of silt and clay, particularly when compacted.
- Some soil binders may not perform well with low relative humidity. Under rainy conditions, some agents may become slippery or leach out of the soil.
- Soil binders may not cure if low temperatures occur within 24 hours of application.
- The water quality impacts of soil binders are relatively unknown and some may have water quality impacts due to their chemical makeup.
- A sampling and analysis plan must be incorporated into the SWPPP as soil binders could be a source of non-visible pollutants.

Implementation

General Considerations

- Regional soil types will dictate appropriate soil binders to be used.
- A soil binder must be environmentally benign (non-toxic to plant and animal life), easy to apply, easy to maintain, economical, and should not stain paved or painted surfaces. Soil binders should not pollute stormwater.
- Some soil binders may not be compatible with existing vegetation.
- Performance of soil binders depends on temperature, humidity, and traffic across treated areas.
- Avoid over spray onto roads, sidewalks, drainage channels, existing vegetation, etc.

Selecting a Soil Binder

Properties of common soil binders used for erosion control are provided on Table 1 at the end of this BMP. Use Table 1 to select an appropriate soil binder. Refer to WE-1, Wind Erosion Control, for dust control soil binders.

Factors to consider when selecting a soil binder include the following:

- Suitability to situation - Consider where the soil binder will be applied, if it needs a high resistance to leaching or abrasion, and whether it needs to be compatible with any existing vegetation. Determine the length of time soil stabilization will be needed, and if the soil binder will be placed in an area where it will degrade rapidly. In general, slope steepness is not a discriminating factor for the listed soil binders.
- Soil types and surface materials - Fines and moisture content are key properties of surface materials. Consider a soil binder's ability to penetrate, likelihood of leaching, and ability to form a surface crust on the surface materials.
- Frequency of application - The frequency of application can be affected by subgrade conditions, surface type, climate, and maintenance schedule. Frequent applications could

lead to high costs. Application frequency may be minimized if the soil binder has good penetration, low evaporation, and good longevity. Consider also that frequent application will require frequent equipment clean up.

Plant-Material Based (Short Lived) Binders

Guar: Guar is a non-toxic, biodegradable, natural galactomannan based hydrocolloid treated with dispersant agents for easy field mixing. It should be mixed with water at the rate of 11 to 15 lb per 1,000 gallons. Recommended minimum application rates are as follows:

Application Rates for Guar Soil Stabilizer

Slope (H:V):	Flat	4:1	3:1	2:1	1:1
lb/acre:	40	45	50	60	70

Psyllium: Psyllium is composed of the finely ground muciloid coating of plantago seeds that is applied as a dry powder or in a wet slurry to the surface of the soil. It dries to form a firm but rewettable membrane that binds soil particles together but permits germination and growth of seed. Psyllium requires 12 to 18 hours drying time. Application rates should be from 80 to 200 lb/acre, with enough water in solution to allow for a uniform slurry flow.

Starch: Starch is non-ionic, cold water soluble (pre-gelatinized) granular cornstarch. The material is mixed with water and applied at the rate of 150 lb/acre. Approximate drying time is 9 to 12 hours.

Plant-Material Based (Long Lived) Binders

Pitch and Rosin Emulsion: Generally, a non-ionic pitch and rosin emulsion has a minimum solids content of 48%. The rosin should be a minimum of 26% of the total solids content. The soil stabilizer should be non-corrosive, water dilutable emulsion that upon application cures to a water insoluble binding and cementing agent. For soil erosion control applications, the emulsion is diluted and should be applied as follows:

- For clayey soil: 5 parts water to 1 part emulsion
- For sandy soil: 10 parts water to 1 part emulsion

Application can be by water truck or hydraulic seeder with the emulsion and product mixture applied at the rate specified by the manufacturer.

Polymeric Emulsion Blend Binders

Acrylic Copolymers and Polymers: Polymerie soil stabilizers should consist of a liquid or solid polymer or copolymer with an acrylic base that contains a minimum of 55% solids. The polymeric compound should be handled and mixed in a manner that will not cause foaming or should contain an anti-foaming agent. The polymeric emulsion should not exceed its shelf life or expiration date; manufacturers should provide the expiration date. Polymeric soil stabilizer should be readily miscible in water, non-injurious to seed or animal life, non-flammable, should provide surface soil stabilization for various soil types without totally inhibiting water infiltration, and should not re-emulsify when cured. The applied compound should air cure within a maximum of 36 to 48 hours. Liquid copolymer should be diluted at a rate of 10 parts water to 1 part polymer and the mixture applied to soil at a rate of 1,175 gallons/acre.

Liquid Polymers of Methacrylates and Acrylates: This material consists of a tackifier/sealer that is a liquid polymer of methacrylates and acrylates. It is an aqueous 100% acrylic emulsion blend of 40% solids by volume that is free from styrene, acetate, vinyl, ethoxylated surfactants or silicates. For soil stabilization applications, it is diluted with water in accordance with manufacturer's recommendations, and applied with a hydraulic seeder at the rate of 20 gallons/acre. Drying time is 12 to 18 hours after application.

Copolymers of Sodium Acrylates and Acrylamides: These materials are non-toxic, dry powders that are copolymers of sodium acrylate and acrylamide. They are mixed with water and applied to the soil surface for erosion control at rates that are determined by slope gradient:

Slope Gradient (H:V)	lb/acre
Flat to 5:1	3.0 – 5.0
5:1 to 3:1	5.0 – 10.0
2:2 to 1:1	10.0 – 20.0

Poly-Acrylamide and Copolymer of Acrylamide: Linear copolymer polyacrylamide is packaged as a dry flowable solid. When used as a stand alone stabilizer, it is diluted at a rate of 11lb/1,000 gal of water and applied at the rate of 5.0 lb/acre.

Hydro-Colloid Polymers: Hydro-Colloid Polymers are various combinations of dry flowable poly-acrylamides, copolymers and hydro-colloid polymers that are mixed with water and applied to the soil surface at rates of 55 to 60 lb/acre. Drying times are 0 to 4 hours.

Cementitious-Based Binders

Gypsum: This is a formulated gypsum based product that readily mixes with water and mulch to form a thin protective crust on the soil surface. It is composed of high purity gypsum that is ground, calcined and processed into calcium sulfate hemihydrate with a minimum purity of 86%. It is mixed in a hydraulic seeder and applied at rates 4,000 to 12,000 lb/acre. Drying time is 4 to 8 hours.

Applying Soil Binders

After selecting an appropriate soil binder, the untreated soil surface must be prepared before applying the soil binder. The untreated soil surface must contain sufficient moisture to assist the agent in achieving uniform distribution. In general, the following steps should be followed:

- Follow manufacturer's written recommendations for application rates, pre-wetting of application area, and cleaning of equipment after use.
- Prior to application, roughen embankment and fill areas.
- Consider the drying time for the selected soil binder and apply with sufficient time before anticipated rainfall. Soil binders should not be applied during or immediately before rainfall.
- Avoid over spray onto roads, sidewalks, drainage channels, sound walls, existing vegetation, etc.

- Soil binders should not be applied to frozen soil, areas with standing water, under freezing or rainy conditions, or when the temperature is below 40°F during the curing period.
- More than one treatment is often necessary, although the second treatment may be diluted or have a lower application rate.
- Generally, soil binders require a minimum curing time of 24 hours before they are fully effective. Refer to manufacturer's instructions for specific cure time.
- For liquid agents:
  - Crown or slope ground to avoid ponding.
  - Uniformly pre-wet ground at 0.03 to 0.3 gal/yd² or according to manufacturer's recommendations.
  - Apply solution under pressure. Overlap solution 6 to 12 in.
  - Allow treated area to cure for the time recommended by the manufacturer; typically at least 24 hours.
  - Apply second treatment before first treatment becomes ineffective, using 50% application rate.
  - In low humidities, reactivate chemicals by re-wetting with water at 0.1 to 0.2 gal/yd².

Costs

Costs vary according to the soil stabilizer selected for implementation. The following are approximate costs:

Soil Binder	Cost per Acre
Plant-Material Based (Short Lived) Binders	$400
Plant-Material Based (Long Lived) Binders	$1,200
Polymeric Emulsion Blend Binders	$400 (1)
Cementitious-Based Binders	$800

(1) $1,200 for Acrylic polymers and copolymers

Source: Caltrans Guidance for Soil Stabilization for Temporary Slopes, Nov. 1999

Inspection and Maintenance

- Inspect BMPs prior to forecast rain, daily during extended rain events, after rain events, weekly during the rainy season, and at two-week intervals during the non-rainy season.
- Areas where erosion is evident shall be repaired and BMPs re-applied as soon as possible. Care should be exercised to minimize the damage to protected areas while making repairs, as any area damaged will require re-application of BMPs.
- Reapply the selected soil binder as needed to maintain effectiveness.

References

Manual of Standards of Erosion and Sediment Control Measures, Association of Bay Area Governments, May 1995.

Sedimentation and Erosion Control, An Inventory of Current Practices Draft, US EPA, April 1990.

Stormwater Quality Handbooks Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Guidance Document: Soil Stabilization for Temporary Slopes, State of California Department of Transportation (Caltrans), November 1999.

Stormwater Management for Construction Activities, Developing Pollution Prevention Plans and Best Management Practices, EPA 832-R-92005; USEPA, April 1992.

Table 1 Properties of Soil Binders for Erosion Control

Evaluation Criteria	Binder Type			
	Plant Material Based (Short Lived)	Plant Material Based (Long Lived)	Polymeric Emulsion Blends	Cementitious-Based Binders
Relative Cost	Low	Low	Low	Low
Resistance to Leaching	High	High	Low to Moderate	Moderate
Resistance to Abrasion	Moderate	Low	Moderate to High	Moderate to High
Longevity	Short to Medium	Medium	Medium to Long	Medium
Minimum Curing Time before Rain	9 to 18 hours	19 to 24 hours	0 to 24 hours	4 to 8 hours
Compatibility with Existing Vegetation	Good	Poor	Poor	Poor
Mode of Degradation	Biodegradable	Biodegradable	Photodegradable/ Chemically Degradable	Photodegradable/ Chemically Degradable
Labor Intensive	No	No	No	No
Specialized Application Equipment	Water Truck or Hydraulic Mulcher	Water Truck or Hydraulic Mulcher	Water Truck or Hydraulic Mulcher	Water Truck or Hydraulic Mulcher
Liquid/Powder	Powder	Liquid	Liquid/Powder	Powder
Surface Crusting	Yes, but dissolves on rewetting	Yes	Yes, but dissolves on rewetting	Yes
Clean Up	Water	Water	Water	Water
Erosion Control Application Rate	Varies (1)	Varies (1)	Varies (1)	4,000 to 12,000 lbs/acre

(1) See Implementation for specific rates.

Sediment Basin SE-2

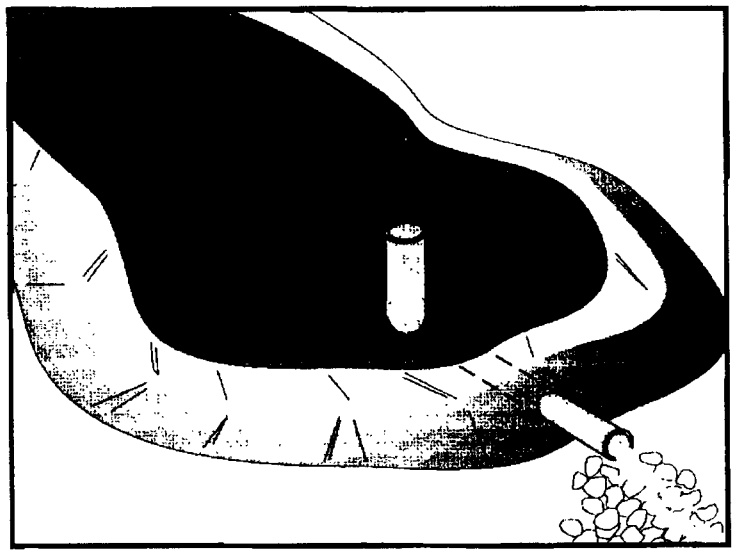

Objectives

EC	Erosion Control	
SE	Sediment Control	✓
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:

✓ **Primary Objective**

✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	
Trash	✓
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

SE-3 Sediment Trap (for smaller areas)

Description and Purpose

A sediment basin is a temporary basin formed by excavation or by constructing an embankment so that sediment-laden runoff is temporarily detained under quiescent conditions, allowing sediment to settle out before the runoff is discharged.

Suitable Applications

Sediment basins may be suitable for use on larger projects with sufficient space for constructing the basin. Sediment basins should be considered for use:

- Where sediment-laden water may enter the drainage system or watercourses
- On construction projects with disturbed areas during the rainy season
- At the outlet of disturbed watersheds between 5 acres and 75 acres
- At the outlet of large disturbed watersheds, as necessary
- Where post construction detention basins are required
- In association with dikes, temporary channels, and pipes used to convey runoff from disturbed areas

Limitations

Sediment basins must be installed only within the property limits and where failure of the structure will not result in loss of life, damage to homes or buildings, or interruption of use or service of

CASQA California Stormwater Quality Association

public roads or utilities. In addition, sediment basins are attractive to children and can be very dangerous. Local ordinances regarding health and safety must be adhered to. If fencing of the basin is required, the type of fence and its location should be shown in the SWPPP and in the construction specifications.

- Generally, sediment basins are limited to drainage areas of 5 acres or more, but not appropriate for drainage areas greater than 75 acres.
- Sediment basins may become an "attractive nuisance" and care must be taken to adhere to all safety practices. If safety is a concern, basin may require protective fencing.
- Sediment basins designed according to this handbook are only practically effective in removing sediment down to about the medium silt size fraction. Sediment-laden runoff with smaller size fractions (fine silt and clay) may not be adequately treated unless chemical treatment is used in addition to the sediment basin.
- Sites with very fine sediments (fine silt and clay) may require longer detention times for effective sediment removal.
- Basins with a height of 25 ft or more or an impounding capacity of 50 ac-ft or more must obtain approval from Division of Safety of Dams.
- Standing water may cause mosquitoes or other pests to breed.
- Basins require large surface areas to permit settling of sediment. Size may be limited by the available area.

Implementation

General

A sediment basin is a controlled stormwater release structure formed by excavation or by construction of an embankment of compacted soil across a drainage way, or other suitable location. It is intended to trap sediment before it leaves the construction site. The basin is a temporary measure with a design life of 12 to 28 months in most cases and is to be maintained until the site area is permanently protected against erosion or a permanent detention basin is constructed.

Sediment basins are suitable for nearly all types of construction projects. Whenever possible, construct the sediment basins before clearing and grading work begins. Basins should be located at the stormwater outlet from the site but not in any natural or undisturbed stream. A typical application would include temporary dikes, pipes, and/or channels to divert runoff to the basin inlet.

Many development projects in California will be required by local ordinances to provide a stormwater detention basin for post-construction flood control, desilting, or stormwater pollution control. A temporary sediment basin may be constructed by rough grading the post-construction control basins early in the project.

Sediment basins trap 70-80 % of the sediment that flows into them if designed according to this handbook. Therefore, they should be used in conjunction with erosion control practices such as

temporary seeding, mulching, diversion dikes, etc., to reduce the amount of sediment flowing into the basin.

Planning

To improve the effectiveness of the basin, it should be located to intercept runoff from the largest possible amount of disturbed area. The best locations are generally low areas. Drainage into the basin can be improved by the use of earth dikes and drainage swales (see BMP EC-9). The basin must not be located in a stream but it should be located to trap sediment-laden runoff before it enters the stream. The basin should not be located where its failure would result in the loss of life or interruption of the use or service of public utilities or roads.

- Construct before clearing and grading work begins when feasible.
- Do not locate in a stream.
- Basin sites should be located where failure of the structure will not cause loss of life, damage to homes or buildings, or interruption of use or service of public roads or utilities.
- Large basins are subject to state and local dam safety requirements.
- Limit the contributing area to the sediment basin to only the runoff from the disturbed soil areas. Use temporary concentrated flow conveyance controls to divert runoff from undisturbed areas away from the sediment basin.
- The basin should be located: (1) by excavating a suitable area or where a low embankment can be constructed across a swale, (2) where post-construction (permanent) detention basins will be constructed, and (3) where the basins can be maintained on a year-round basis to provide access for maintenance, including sediment removal and sediment stockpiling in a protected area, and to maintain the basin to provide the required capacity.

Design

Sediment basins must be designed in accordance with Section A of the State of California NPDES General Permit for Stormwater Discharges Associated with Construction Activities (General Permit) where sediment basins are the only control measure proposed for the site. If there is insufficient area to construct a sediment basin in accordance with the General Permit requirements, then the alternate design standards specified herein may be used.

Sediment basins designed per the General Permit shall be designed as follows:

Option 1:

Pursuant to local ordinance for sediment basin design and maintenance, provided that the design efficiency is as protective or more protective of water quality than Option 3.

OR

Option 2:

Sediment basin(s), as measured from the bottom of the basin to the principal outlet, shall have at least a capacity equivalent to 3,600 cubic feet (133 yd^3) of storage per acre draining into the sediment basin. The length of the basin shall be more than twice the width of the basin. The

length is determined by measuring the distance between the inlet and the outlet; and the depth must not be less than 3 ft nor greater than 5 ft for safety reasons and for maximum efficiency.

OR

Option 3:
Sediment basin(s) shall be designed using the standard equation:

$$As=1.2Q/Vs \quad \text{(Eq. 1)}$$

Where:

As = Minimum surface area for trapping soil particles of a certain size

Vs = Settling velocity of the design particle size chosen

Q = C I A

Where

Q = Discharge rate measured in cubic feet per second

C = Runoff coefficient

I = Precipitation intensity for the 10-year, 6-hour rain event

A = Area draining into the sediment basin in acres

The design particle size shall be the smallest soil grain size determined by wet sieve analysis, or the fine silt sized (0.01 mm [or 0.0004 in.]) particle, and the *Vs* used shall be 100 percent of the calculated settling velocity.

The length is determined by measuring the distance between the inlet and the outlet; the length shall be more than twice the dimension as the width; the depth shall not be less than 3 ft nor greater than 5 ft for safety reasons and for maximum efficiency (2 ft of sediment storage, 2 ft of capacity). The basin(s) shall be located on the site where it can be maintained on a year-round basis and shall be maintained on a schedule to retain the 2 ft of capacity.

OR

Option 4:
The use of an equivalent surface area design or equation, provided that the design efficiency is as protective or more protective of water quality than Option 3.

Other design considerations are:

- The volume of the settling zone should be sized to capture runoff from a 2-year storm or other appropriate design storms specified by the local agency. A detention time of 24 to 40 hours should allow 70 to 80 % of sediment to settle.
- The basin volume consists of two zones:
  - A sediment storage zone at least 1 ft deep.
  - A settling zone at least 2 ft deep.
- The length to settling depth ratio (L/SD) should be less than 200.
- Sediment basins are best used in conjunction with erosion controls. Sediment basins that will be used as the only means of treatment, without upstream erosion and sediment controls, must be designed according to the four options required by the General Permit (see Options 1-4 above). Sediment basins that are used in conjunction with upstream erosion and sediment controls should be designed to have a capacity equivalent to 67 yd^3 of sediment storage per acre of contributory area.
- The length of the basin should be more than twice the width of the basin; the length should be determined by measuring the distance between the inlet and the outlet.
- The depth must be no less than 3 ft.
- Basins with an impounding levee greater than 4.5 ft tall, measured from the lowest point to the impounding area to the highest point of the levee, and basins capable of impounding more than 35,000 ft^3, should be designed by a Registered Civil Engineer. The design should include maintenance requirements, including sediment and vegetation removal, to ensure continuous function of the basin outlet and bypass structures.
- Basins should be designed to drain within 72 hours following storm events. If a basin fails to drain within 72 hours, it must be pumped dry.
- Sediment basins, regardless of size and storage volume, should include features to accommodate overflow or bypass flows that exceed the design storm event.
  - Include an emergency spillway to accommodate flows not carried by the principal spillway. The spillway should consist of an open channel (earthen or vegetated) over undisturbed material (not fill) or constructed of a non-erodible riprap.
  - The spillway control section, which is a level portion of the spillway channel at the highest elevation in the channel, should be a minimum of 20 ft in length.
- Rock or vegetation should be used to protect the basin inlet and slopes against erosion.
- A forebay, constructed upstream of the basin may be provided to remove debris and larger particles.

- The outflow from the sediment basin should be provided with velocity dissipation devices (see BMP EC-10) to prevent erosion and scouring of the embankment and channel.
- Basin inlets should be located to maximize travel distance to the basin outlet.
- The principal outlet should consist of a corrugated metal, high density polyethylene (HDPE), or reinforced concrete riser pipe with dewatering holes and an anti-vortex device and trash rack attached to the top of the riser, to prevent floating debris from flowing out of the basin or obstructing the system. This principal structure should be designed to accommodate the inflow design storm.
- A rock pile or rock-filled gabions can serve as alternatives to the debris screen, although the designer should be aware of the potential for extra maintenance involved should the pore spaces in the rock pile clog.
- The outlet structure should be placed on a firm, smooth foundation with the base securely anchored with concrete or other means to prevent floatation.
- Attach riser pipe (watertight connection) to a horizontal pipe (barrel). Provide anti-seep collars on the barrel.
- Cleanout level should be clearly marked on the riser pipe.
- Proper hydraulic design of the outlet is critical to achieving the desired performance of the basin. The outlet should be designed to drain the basin within 24 to 72 hours (also referred to as "drawdown time"). The 24-hour limit is specified to provide adequate settling time; the 72-hour limit is specified to mitigate vector control concerns.
- The two most common outlet problems that occur are: (1) the capacity of the outlet is too great resulting in only partial filling of the basin and drawdown time less than designed for; and (2) the outlet clogs because it is not adequately protected against trash and debris. To avoid these problems, the following outlet types are recommended for use: (1) a single orifice outlet with or without the protection of a riser pipe, and (2) perforated riser. Design guidance for single orifice and perforated riser outlets follow:
  - *Flow Control Using a Single Orifice At The Bottom Of The Basin (Figure 1)*: The outlet control orifice should be sized using the following equation:

$$a = \frac{2A(H - Ho)^{0.5}}{3600CT(2g)^{0.5}} = \frac{(7x10^{-5})A(H - Ho)^{0.5}}{CT} \qquad \text{(Eq. 2)}$$

where:

a = area of orifice (ft^2)

A = surface area of the basin at mid elevation (ft^2)

C = orifice coefficient

T = drawdown time of full basin (hrs)

g = gravity (32.2 ft/s²)

H = elevation when the basin is full (ft)

Ho = final elevation when basin is empty (ft)

With a drawdown time of 40 hours, the equation becomes:

$$a = \frac{(1.75x10^{-6})A(H - Ho)^{0.5}}{C} \qquad \text{(Eq. 3)}$$

- *Flow Control Using Multiple Orifices (see Figure2):*

$$a_t = \frac{2A(h_{max})}{CT(2g[h_{max} - h_{centroid\ of\ orifices}])^{0.5}} \qquad \text{(Eq. 4)}$$

With terms as described above except:

a_t = total area of orifices

h_{max} = maximum height from lowest orifice to the maximum water surface (ft)

$h_{centroid\ of\ orifices}$ = height from the lowest orifice to the centroid of the orifice configuration (ft)

Allocate the orifices evenly on two rows; separate the holes by 3x hole diameter vertically, and by 120 degrees horizontally (refer to Figure 2).

Because basins are not maintained for infiltration, water loss by infiltration should be disregarded when designing the hydraulic capacity of the outlet structure.

Care must be taken in the selection of "C"; 0.60 is most often recommended and used. However, based on actual tests, GKY (1989), "Outlet Hydraulics of Extended Detention Facilities for Northern Virginia Planning District Commission", recommends the following:

C = 0.66 for thin materials; where the thickness is equal to or less than the orifice diameter, or

C = 0.80 when the material is thicker than the orifice diameter

Installation

- Securely anchor and install an anti-seep collar on the outlet pipe/riser and provide an emergency spillway for passing major floods (see local flood control agency).
- Areas under embankments must be cleared and stripped of vegetation.
- Chain link fencing should be provided around each sediment basin to prevent unauthorized entry to the basin or if safety is a concern.

Costs

Average annual costs for installation and maintenance (2 year useful life) are:

- Basin less than 50,000 ft^3: Range, \$0.24 - \$1.58/ft^3. Average, \$0.73 per ft^3. \$400 - \$2,400, \$1,200 average per drainage acre.
- Basin size greater than 50,000 ft^3: Range, \$0.12 – \$0.48/ft^3. Average, \$0.36 per ft^3. \$200 - \$800, \$600 average per drainage acre.

Inspection and Maintenance

- Inspect BMPs prior to forecast rain, daily during extended rain events, after rain events, weekly during the rainy season, and at two-week intervals during the non-rainy season.
- Examine basin banks for seepage and structural soundness.
- Check inlet and outlet structures and spillway for any damage or obstructions. Repair damage and remove obstructions as needed.
- Check inlet and outlet area for erosion and stabilize if required.
- Check fencing for damage and repair as needed.
- Sediment that accumulates in the BMP must be periodically removed in order to maintain BMP effectiveness. Sediment should be removed when sediment accumulation reaches one-half the designated sediment storage volume. Sediment removed during maintenance may be incorporated into earthwork on the site or disposed of at appropriate locations.
- Remove standing water from basin within 72 hours after accumulation.
- BMPs that require dewatering shall be continuously attended while dewatering takes place. Dewatering BMPs shall be implemented at all times during dewatering activities.
- To minimize vector production:
  - Remove accumulation of live and dead floating vegetation in basins during every inspection.
  - Remove excessive emergent and perimeter vegetation as needed or as advised by local or state vector control agencies.

References

A Current Assessment of Urban Best Management Practices: Techniques for Reducing Nonpoint Source Pollution in the Coastal Zones, Metropolitan Washington Council of Governments, March 1992.

Draft-Sedimentation and Erosion Control, an Inventory of Current Practices, USEPA. April 1990.

Guidelines for the Design and Construction of Small Embankment Dams, Division of Safety of Dams, California Department of Water Resources, March 1986.

Manual of Standards of Erosion and Sediment Control Measures, Association of Bay Area Governments, May 1995.

McLean, J., 2000. Mosquitoes in Constructed Wetlands: A Management Bugaboo? In T.R. Schueler and H.K. Holland [eds.], The Practice of Watershed Protection. pp. 29-33. Center for Watershed Protection, Ellicott City, MD, 2000.

Metzger, M.E., D. F. Messer, C. L. Beitia, C. M. Myers, and V. L. Kramer. The dark site of stormwater runoff management: disease vectors associated with structural BMPs, 2002.

National Management Measures to Control Nonpoint Source Pollution from Urban Areas, United States Environmental Protection Agency, 2002.

Proposed Guidance Specifying Management Measures for Sources of Nonpoint Pollution in Coastal Water, Work Group-Working Paper, USEPA, April 1992.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management of the Puget Sound Basin, Technical Manual, Publication #91-75, Washington State Department of Ecology, February 1992.

U.S. Environmental Protection Agency (USEPA). Guidance Specifying Management Measures for Nonpoint Pollution in Coastal Waters. EPA 840-B-9-002. U.S. Environmental Protection Agency, Office of Water, Washington, DC, 1993

Water Quality Management Plan for the Lake Tahoe Region, Volume II Handbook of Management Practices, Tahoe Regional Planning Agency, November 1988.

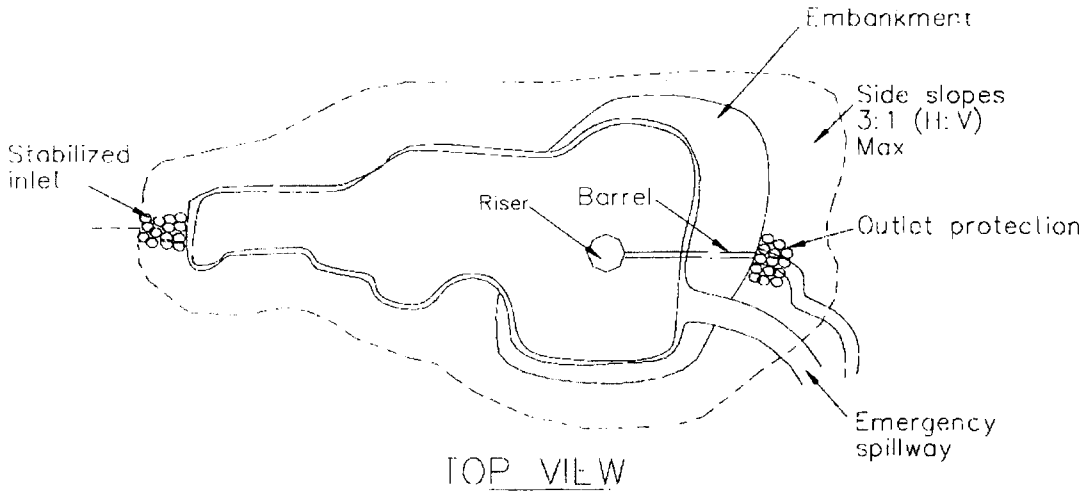

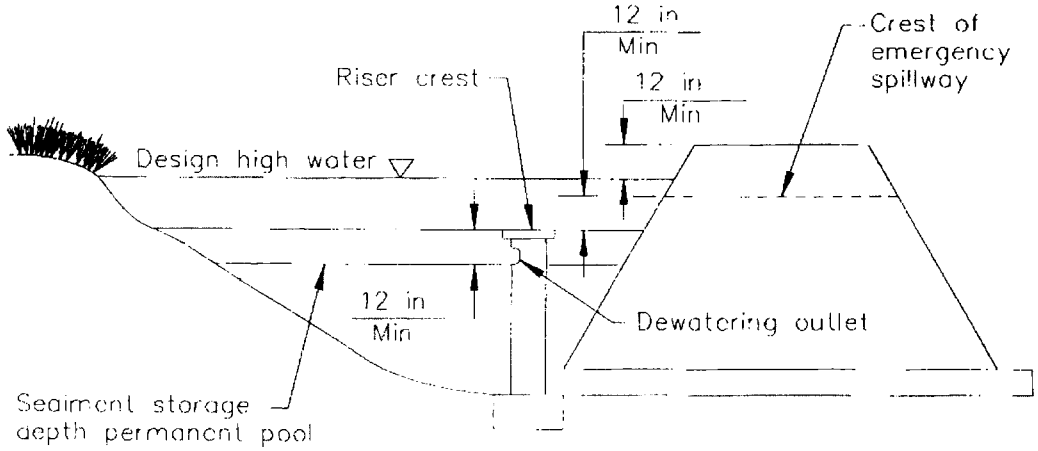

NOTE:
This outlet provides no drainage for permanent pool.

FIGURE 1: TYPICAL TEMPORARY SEDIMENT BASIN
SINGLE ORIFICE DESIGN
NOT TO SCALE

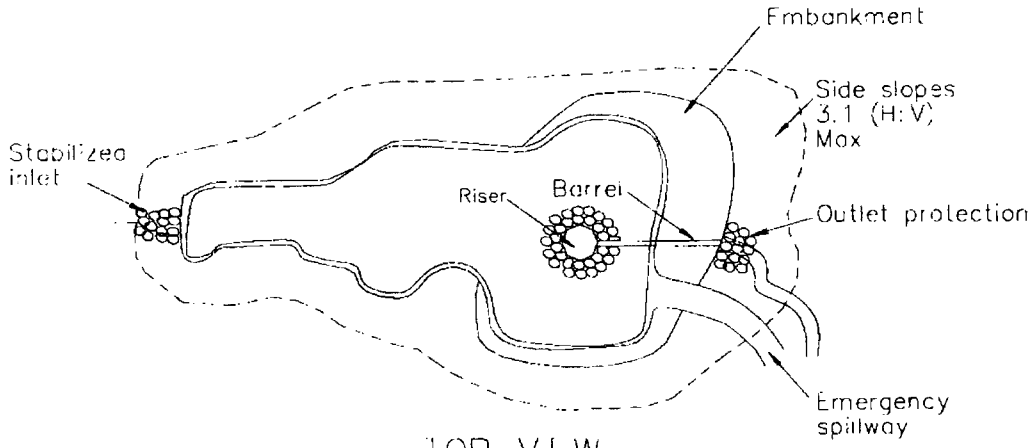

TOP VIEW

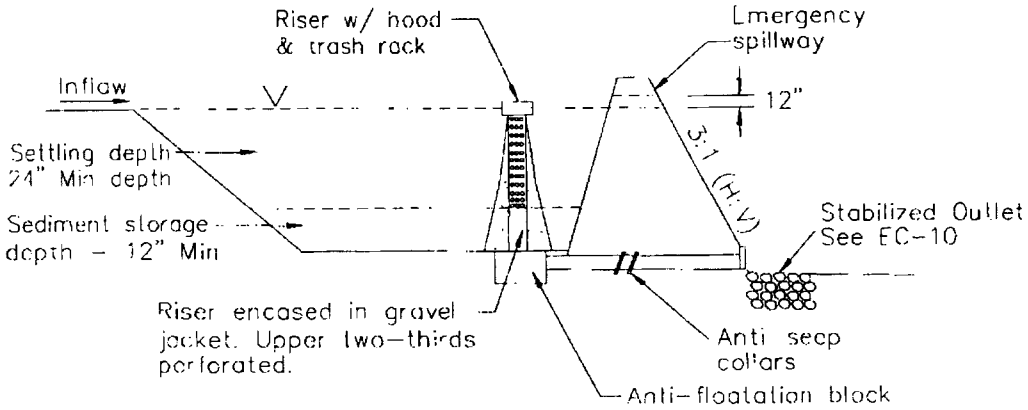

SIDE VIEW

FIGURE 2: TYPICAL TEMPORARY SEDIMENT BASIN
MULTIPLE ORIFICE DESIGN
NOT TO SCALE

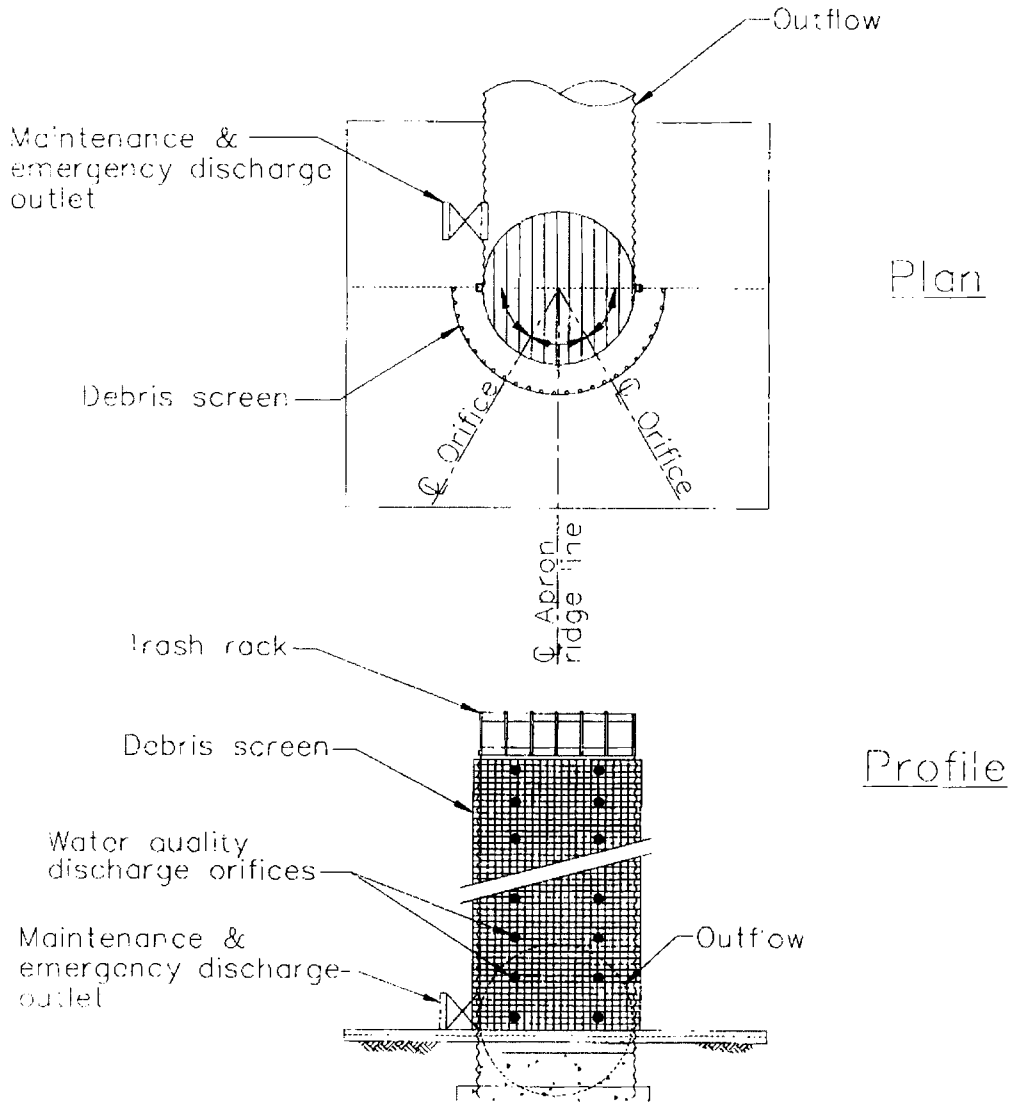

FIGURE 3: MULTIPLE ORIFICE OUTLET RISER
NOT TO SCALE

Fiber Rolls

SE-5

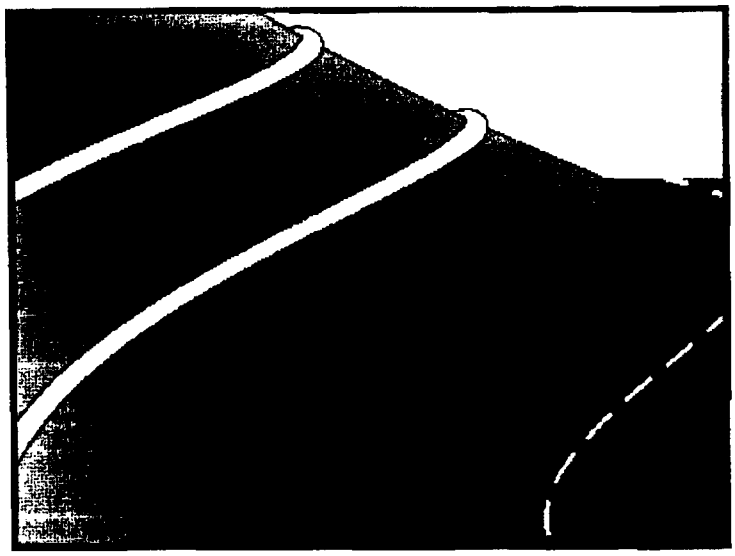

Objectives

EC	Erosion Control	✓
SE	Sediment Control	✓
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:

✓ **Primary Objective**

✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

SE-1 Silt Fence

SE-6 Gravel Bag Berm

SE-8 Sandbag Barrier

SE-9 Straw Bale Barrier

Description and Purpose

A fiber roll consists of straw, flax, or other similar materials bound into a tight tubular roll. When fiber rolls are placed at the toe and on the face of slopes, they intercept runoff, reduce its flow velocity, release the runoff as sheet flow, and provide removal of sediment from the runoff. By interrupting the length of a slope, fiber rolls can also reduce erosion.

Suitable Applications

Fiber rolls may be suitable:

- Along the toe, top, face, and at grade breaks of exposed and erodible slopes to shorten slope length and spread runoff as sheet flow
- At the end of a downward slope where it transitions to a steeper slope
- Along the perimeter of a project
- As check dams in unlined ditches
- Down-slope of exposed soil areas
- Around temporary stockpiles

Limitations

- Fiber rolls are not effective unless trenched

CASQA
California Stormwater Quality Association

- Fiber rolls at the toe of slopes greater than 5:1 (H:V) should be a minimum of 20 in. diameter or installations achieving the same protection (i.e. stacked smaller diameter fiber rolls, etc.).
- Difficult to move once saturated.
- If not properly staked and trenched in, fiber rolls could be transported by high flows.
- Fiber rolls have a very limited sediment capture zone.
- Fiber rolls should not be used on slopes subject to creep, slumping, or landslide.

Implementation

Fiber Roll Materials

- Fiber rolls should be either prefabricated rolls or rolled tubes of erosion control blanket.

Assembly of Field Rolled Fiber Roll

- Roll length of erosion control blanket into a tube of minimum 8 in. diameter.
- Bind roll at each end and every 4 ft along length of roll with jute-type twine.

Installation

- Locate fiber rolls on level contours spaced as follows:
  - Slope inclination of 4:1 (H:V) or flatter: Fiber rolls should be placed at a maximum interval of 20 ft.
  - Slope inclination between 4:1 and 2:1 (H:V): Fiber Rolls should be placed at a maximum interval of 15 ft. (a closer spacing is more effective).
  - Slope inclination 2:1 (H:V) or greater: Fiber Rolls should be placed at a maximum interval of 10 ft. (a closer spacing is more effective).
- Turn the ends of the fiber roll up slope to prevent runoff from going around the roll.
- Stake fiber rolls into a 2 to 4 in. deep trench with a width equal to the diameter of the fiber roll.
  - Drive stakes at the end of each fiber roll and spaced 4 ft maximum on center.
  - Use wood stakes with a nominal classification of 0.75 by 0.75 in. and minimum length of 24 in.
- If more than one fiber roll is placed in a row, the rolls should be overlapped, not abutted.

Removal

- Fiber rolls are typically left in place.

- If fiber rolls are removed, collect and dispose of sediment accumulation, and fill and compact holes, trenches, depressions or any other ground disturbance to blend with adjacent ground.

Costs

Material costs for fiber rolls range from $20 - $30 per 25 ft roll.

Inspection and Maintenance

- Inspect BMPs prior to forecast rain, daily during extended rain events, after rain events, weekly during the rainy season, and at two-week intervals during the non-rainy season.
- Repair or replace split, torn, unraveling, or slumping fiber rolls.
- If the fiber roll is used as a sediment capture device, or as an erosion control device to maintain sheet flows, sediment that accumulates in the BMP must be periodically removed in order to maintain BMP effectiveness. Sediment should be removed when sediment accumulation reaches one-half the designated sediment storage depth, usually one-half the distance between the top of the fiber roll and the adjacent ground surface. Sediment removed during maintenance may be incorporated into earthwork on the site of disposed at an appropriate location.
- If fiber rolls are used for erosion control, such as in a mini check dam, sediment removal should not be required as long as the system continues to control the grade. Sediment control BMPs will likely be required in conjunction with this type of application.

References

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

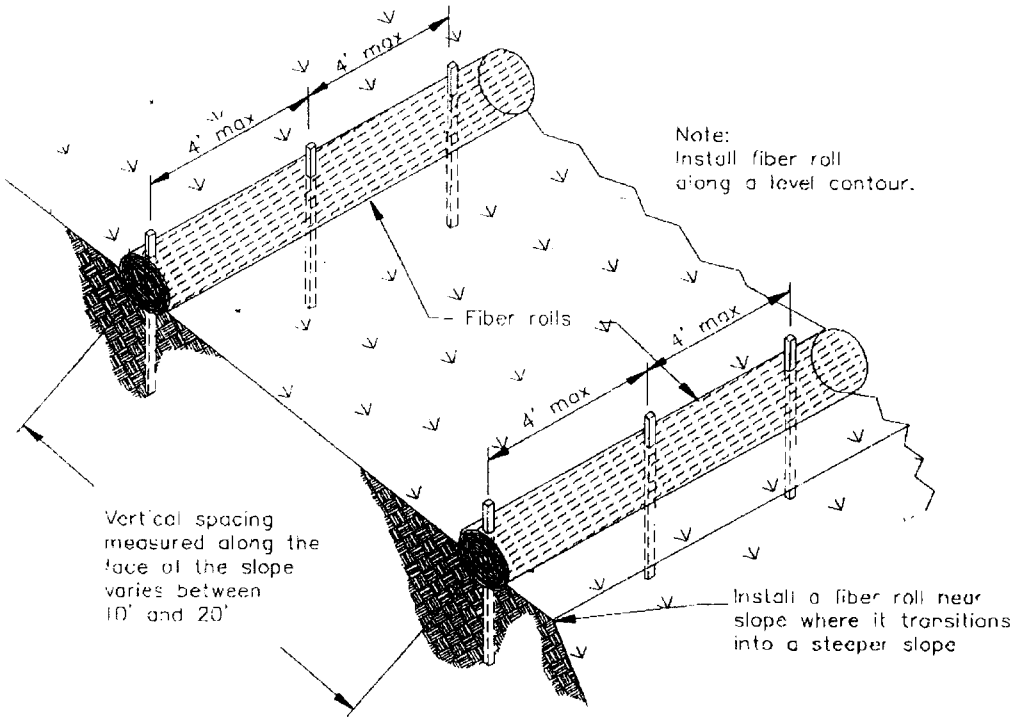

TYPICAL FIBER ROLL INSTALLATION
N.T.S.

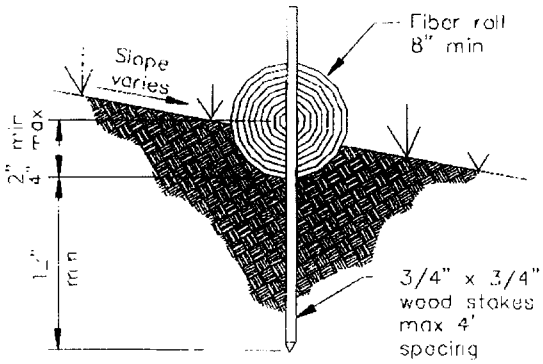

ENTRENCHMENT DETAIL
N.T.S.

Gravel Bag Berm SE-6

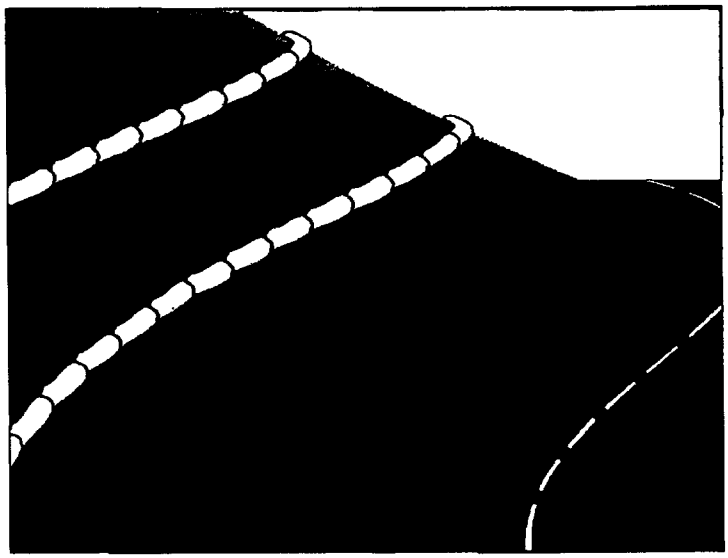

Objectives		
EC	Erosion Control	✓
SE	Sediment Control	✓
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

SE-1 Silt Fence
SE-5 Fiber Roll
SE-8 Sandbag Barrier
SE-9 Straw Bale Barrier

Description and Purpose

A gravel bag berm is a series of gravel-filled bags placed on a level contour to intercept sheet flows. Gravel bags pond sheet flow runoff, allowing sediment to settle out, and release runoff slowly as sheet flows, preventing erosion.

Suitable Applications

Gravel bag berms may be suitable:

- As a linear sediment control measure:
  - Below the toe of slopes and erodible slopes
  - As sediment traps at culvert/pipe outlets
  - Below other small cleared areas
  - Along the perimeter of a site
  - Down slope of exposed soil areas
  - Around temporary stockpiles and spoil areas
  - Parallel to a roadway to keep sediment off paved areas
  - Along streams and channels
- As linear erosion control measure:

- Along the face and at grade breaks of exposed and erodible slopes to shorten slope length and spread runoff as sheet flow
- At the top of slopes to divert runoff away from disturbed slopes
- As check dams across mildly sloped construction roads

Limitations

- Gravel berms may be difficult to remove.
- Removal problems limit their usefulness in landscaped areas.
- Gravel bag berm may not be appropriate for drainage areas greater than 5 acres.
- Runoff will pond upstream of the filter, possibly causing flooding if sufficient space does not exist.
- Degraded gravel bags may rupture when removed, spilling contents.
- Installation can be labor intensive.
- Berms may have limited durability for long-term projects.
- When used to detain concentrated flows, maintenance requirements increase.

Implementation

General

A gravel bag berm consists of a row of open graded gravel–filled bags placed on a level contour. When appropriately placed, a gravel bag berm intercepts and slows sheet flow runoff, causing temporary ponding. The temporary ponding provides quiescent conditions allowing sediment to settle. The open graded gravel in the bags is porous, which allows the ponded runoff to flow slowly through the bags, releasing the runoff as sheet flows. Gravel bag berms also interrupt the slope length and thereby reduce erosion by reducing the tendency of sheet flows to concentrate into rivulets, which erode rills, and ultimately gullies, into disturbed, sloped soils. Gravel bag berms are similar to sand bag barriers, but are more porous.

Design and Layout

- Locate gravel bag berms on level contours.
  - Slopes between 20:1 and 2:1 (H:V): Gravel bags should be placed at a maximum interval of 50 ft (a closer spacing is more effective), with the first row near the slope toe.
  - Slopes 2:1 (H:V) or steeper: Gravel bags should be placed at a maximum interval of 25 ft (a closer spacing is more effective), with the first row placed the slope toe.
- Turn the ends of the gravel bag barriers up slope to prevent runoff from going around the berm.
- Allow sufficient space up slope from the gravel bag berm to allow pouding, and to provide room for sediment storage.

- For installation near the toe of the slope, consider moving the gravel bag barriers away from the slope toe to facilitate cleaning. To prevent flows behind the barrier, bags can be placed perpendicular to a berm to serve as cross barriers.
- Drainage area should not exceed 5 acres.
- In Non-Traffic Areas:
  - Height = 18 in. maximum
  - Top width = 24 in. minimum for three or more layer construction
  - Top width = 12 in. minimum for one or two layer construction
  - Side slopes = 2:1 or flatter
- In Construction Traffic Areas:
  - Height = 12 in. maximum
  - Top width = 24 in. minimum for three or more layer construction.
  - Top width = 12 in. minimum for one or two layer construction.
  - Side slopes = 2:1 or flatter.
- Butt ends of bags tightly
- On multiple row, or multiple layer construction, overlapp butt joints of adjacent row and row beneath.
- Use a pyramid approach when stacking bags.

Materials

- ***Bag Material:*** Bags should be woven polypropylene, polyethylene or polyamide fabric or burlap, minimum unit weight of 4 ounces/yd^2, Mullen burst strength exceeding 300 lb/in^2 in conformance with the requirements in ASTM designation D3786, and ultraviolet stability exceeding 70% in conformance with the requirements in ASTM designation D4355.
- ***Bag Size:*** Each gravel-filled bag should have a length of 18 in., width of 12 in., thickness of 3 in., and mass of approximately 33 lbs. Bag dimensions are nominal, and may vary based on locally available materials.
- ***Fill Material:*** Fill material should he 0.5 to 1 in. Class 2 aggregate base, clean and free from clay, organic matter, and other deleterious material, or other suitable open graded, non-cohesive, porous gravel.

Costs

Gravel filter: Expensive, since off-site materials, hand construction, and demolition/removal are usually required. Material costs for gravel bags are average of $2.50 per empty gravel bag. Gravel costs range from $20-$35 per yd^3.

Inspection and Maintenance

- Inspect BMPs prior to forecast rain, daily during extended rain events, after rain events, weekly during the rainy season, and at two-week intervals during the non-rainy season.
- Gravel bags exposed to sunlight will need to be replaced every two to three months due to degrading of the bags.
- Reshape or replace gravel bags as needed.
- Repair washouts or other damage as needed.
- Sediment that accumulates in the BMP must be periodically removed in order to maintain BMP effectiveness. Sediment should be removed when the sediment accumulation reaches one-third of the barrier height. Sediment removed during maintenance may be incorporated into earthwork on the site or disposed at an appropriate location.
- Remove gravel bag berms when no longer needed. Remove sediment accumulation and clean, re-grade, and stabilize the area. Removed sediment should be incorporated in the project or disposed of.

References

Handbook of Steel Drainage and Highway Construction, American Iron and Steel Institute, 1983.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Pollution Plan Handbook, First Edition, State of California, Department of Transportation Division of New Technology, Materials and Research, October 1992.

Street Sweeping and Vacuuming SE-7

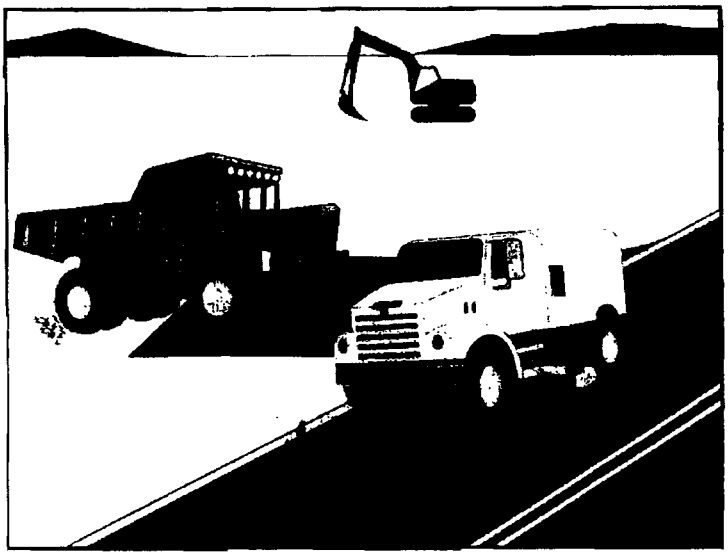

Objectives		
EC	Erosion Control	
SE	Sediment Control	✓
TC	Tracking Control	✓
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	✓
Metals	
Bacteria	
Oil and Grease	✓
Organics	

Potential Alternatives

None

Description and Purpose

Street sweeping and vacuuming includes use of self-propelled and walk-behind equipment to remove sediment from streets and roadways, and to clean paved surfaces in preparation for final paving. Sweeping and vacuuming prevents sediment from the project site from entering storm drains or receiving waters.

Suitable Applications

Sweeping and vacuuming are suitable anywhere sediment is tracked from the project site onto public or private paved streets and roads, typically at points of egress. Sweeping and vacuuming are also applicable during preparation of paved surfaces for final paving.

Limitations

Sweeping and vacuuming may not be effective when sediment is wet or when tracked soil is caked (caked soil may need to be scraped loose).

Implementation

- Controlling the number of points where vehicles can leave the site will allow sweeping and vacuuming efforts to be focused, and perhaps save money.
- Inspect potential sediment tracking locations daily.
- Visible sediment tracking should be swept or vacuumed on a daily basis.

CASQA California Stormwater Quality Association

- Do not use kick brooms or sweeper attachments. These tend to spread the dirt rather than remove it.
- If not mixed with debris or trash, consider incorporating the removed sediment back into the project

Costs

Rental rates for self-propelled sweepers vary depending on hopper size and duration of rental. Expect rental rates from $58/hour (3 yd^3 hopper) to $88/hour (9 yd^3 hopper), plus operator costs. Hourly production rates vary with the amount of area to be swept and amount of sediment. Match the hopper size to the area and expect sediment load to minimize time spent dumping.

Inspection and Maintenance

- Inspect BMPs prior to forecast rain, daily during extended rain events, after rain events, weekly during the rainy season, and at two-week intervals during the non-rainy season.
- When actively in use, points of ingress and egress must be inspected daily.
- When tracked or spilled sediment is observed outside the construction limits, it must be removed at least daily. More frequent removal, even continuous removal, may be required in some jurisdictions.
- Be careful not to sweep up any unknown substance or any object that may be potentially hazardous.
- Adjust brooms frequently; maximize efficiency of sweeping operations.
- After sweeping is finished, properly dispose of sweeper wastes at an approved dumpsite.

References

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Labor Surcharge and Equipment Rental Rates, State of California Department of Transportation (Caltrans), April 1, 2002 – March 31, 2003.

Storm Drain Inlet Protection SE-10

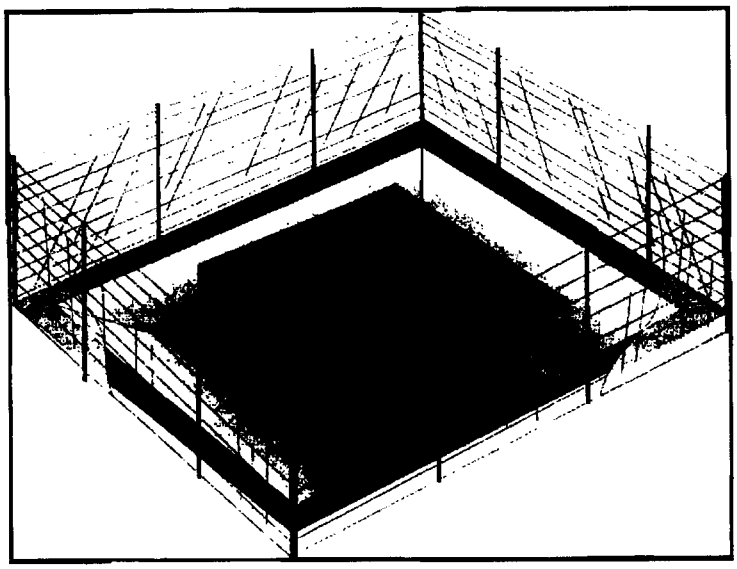

Objectives

EC	Erosion Control	
SE	Sediment Control	✓
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	
Trash	✓
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

SE-1 Silt Fence
SE-5 Fiber Rolls
SE-6 Gravel Bag Berm
SE-8 Sandbag Barrier
SE-9 Straw Bale Barrier

Description and Purpose

Storm drain inlet protection consists of a sediment filter or an impounding area around or upstream of a storm drain, drop inlet, or curb inlet. Storm drain inlet protection measures temporarily pond runoff before it enters the storm drain, allowing sediment to settle. Some filter configurations also remove sediment by filtering, but usually the ponding action results in the greatest sediment reduction.

Suitable Applications

Every storm drain inlet receiving sediment-laden runoff should be protected.

Limitations

- Drainage area should not exceed 1 acre.
- Straw bales, while potentially effective, have not produced in practice satisfactory results, primarily due to improper installation.
- Requires an adequate area for water to pond without encroaching into portions of the roadway subject to traffic.
- Inlet protection usually requires other methods of temporary protection to prevent sediment-laden stormwater and non-stormwater discharges from entering the storm drain system.
- Sediment removal may be difficult in high flow conditions or if runoff is heavily sediment laden. If high flow conditions are

CASQA California Stormwater Quality Association

expected, use other onsite sediment trapping techniques in conjunction with inlet protection.

- Frequent maintenance is required.
- For drainage areas larger than 1 acre, runoff should be routed to a sediment-trapping device designed for larger flows. See BMPs SE-2, Sediment Basin, and SE-3, Sediment Traps.
- Excavated drop inlet sediment traps are appropriate where relatively heavy flows are expected, and overflow capability is needed.

Implementation

General

Large amounts of sediment may enter the storm drain system when storm drains are installed before the upslope drainage area is stabilized, or where construction is adjacent to an existing storm drain. In cases of extreme sediment loading, the storm drain itself may clog and lose a major portion of its capacity. To avoid these problems, it is necessary to prevent sediment from entering the system at the inlets.

Inlet control measures presented in this handbook should not be used for inlets draining more than one acre. Runoff from larger disturbed areas should be first routed through SE-2, Sediment Basin or SE-3, Sediment Trap. Different types of inlet protection are appropriate for different applications depending on site conditions and the type of inlet. Inlet protection methods not presented in this handbook should be approved by the local stormwater management agency.

Design and Layout

Identify existing and planned storm drain inlets that have the potential to receive sediment-laden surface runoff. Determine if storm drain inlet protection is needed and which method to use.

- Limit upstream drainage area to 1 acre maximum. For larger drainage areas, use SE-2, Sedimeut Basin, or SE-3, Sediment Trap, upstream of the inlet protection device.
- The key to successful and safe use of storm drain inlet protection devices is to know wbere runoff will pond or be diverted.
  - Determine the acceptable location and extent of ponding in the vicinity of the drain inlet. The acceptable location and extent of ponding will influence the type and design of the storm drain inlet protection device.
  - Determine the extent of potential runoff diversion caused by the storm drain inlet protection device. Runoff ponded by inlet protection devices may flow around the device and towards the next downstream inlet. In some cases, this is acceptable; in other cases, serious erosion or downstream property damage can be caused by these diversions. The possibility of runoff diversions will influence whether or not storm draiu inlet protection is suitable; and, if suitable, the type and design of the device.
- The location and extent of ponding, and the extent of diversion, can usually be controlled through appropriate placement of the inlet protection device. In some cases, moving the

inlet protection device a short distance upstream of the actual inlet can provide more efficient sediment control, limit ponding to desired areas, and prevent or control diversions.

- Four types of inlet protection are presented below. However, it is recognized that other effective methods and proprietary devices exist and may be selected.
  - Filter Fabric Fence: Appropriate for drainage basins with less than a 5% slope, sheet flows, and flows under 0.5 cfs.
  - Excavated Drop Inlet Sediment Trap: An excavated area around the inlet to trap sediment (SE-3).
  - Gravel bag barrier: Used to create a small sediment trap upstream of inlets on sloped, paved streets. Appropriate for sheet flow or when concentrated flow may exceed 0.5 cfs, and where overtopping is required to prevent flooding.
  - Block and Gravel Filter: Appropriate for flows greater than 0.5 cfs.
- Select the appropriate type of inlet protection and design as referred to or as described in this fact sheet.
- Provide area around the inlet for water to pond without flooding structures and property.
- Grates and spaces around all inlets should be sealed to prevent seepage of sediment-laden water.
- Excavate sediment sumps (where needed) 1 to 2 ft with 2:1 side slopes around the inlet.

Installation

- ***DI Protection Type 1 - Filter Fabric Fence*** - The filter fabric fence (Type 1) protection is shown in the attached figure. Similar to constructing a silt fence; see BMP SE-1, Silt Fence. Do not place filter fabric underneath the inlet grate since the collected sediment may fall into the drain inlet when the fabric is removed or replaced.
  1. Excavate a trench approximately 6 in. wide and 6 in. deep along the line of the silt fence inlet protection device.
  2. Place 2 in. by 2 in. wooden stakes around the perimeter of the inlet a maximum of 3 ft apart and drive them at least 18 in. into the ground or 12 in. below the bottom of the trench. The stakes must be at least 48 in.
  3. Lay fabric along bottom of trench, up side of trench, and then up stakes. See SE-1, Silt Fence, for details. The maximum silt fence height around the inlet is 24 in.
  4. Staple the filter fabric (for materials and specifications, see SE-1, Silt Fence) to wooden stakes. Use heavy-duty wire staples at least 1 in. in length.
  5. Backfill the trench witb gravel or compacted earth all the way around.
- ***DI Protection Type 2 - Excavated Drop Inlet Sediment Trap*** - The excavated drop inlet sediment trap (Type 2) is shown in the attached figures. Install filter fabric fence in

accordance with DI Protection Type 1. Size excavated trap to provide a minimum storage capacity calculated at the rate 67 yd^3/acre of drainage area.

- ***DI Protection Type 3 - Gravel bag*** - The gravel bag barrier (Type 3) is shown in the figures. Flow from a severe storm should not overtop the curb. In areas of high clay and silts, use filter fabric and gravel as additional filter media. Construct gravel bags in accordance with SE-6, Gravel Bag Berm. Gravel bags should be used due to their high permeability.

  1. Use sand bag made of geotextile fabric (not burlap) and fill with 0.75 in. rock or 0.25 in. pea gravel.
  2. Construct on gently sloping street.
  3. Leave room upstream of barrier for water to pond and sediment to settle.
  4. Place several layers of sand bags – overlapping the bags and packing them tightly together.
  5. Leave gap of one bag on the top row to serve as a spillway. Flow from a severe storm (e.g., 10 year storm) should not overtop the curb.

- ***DI Protection Type 4 – Block and Gravel Filter*** - The block and gravel filter (Type 4) is shown in the figures. Block and gravel filters are suitable for curb inlets commonly used in residential, commercial, and industrial construction.

  1. Place hardware cloth or comparable wire mesh with 0.5 in. openings over the drop inlet so that the wire extends a minimum of 1 ft beyond each side of the inlet structure. If more than one strip is necessary, overlap the strips. Place filter fabric over the wire mesh.
  2. Place concrete blocks lengthwise on their sides in a single row around the perimeter of the inlet, so that the open ends face outward, not upward. The ends of adjacent blocks should abut. The height of the barrier can be varied, depending on design needs, by stacking combinations of blocks that are 4 in., 8 in., and 12 in. wide. The row of blocks should be at least 12 in. but no greater than 24 in. high.
  3. Place wire mesh over the outside vertical face (open end) of the concrete blocks to prevent stone from being washed through the blocks. Use hardware cloth or comparable wire mesh with 0.5 in. opening.
  4. Pile washed stone against the wire mesh to the top of the blocks. Use 0.75 to 3 in.

Costs

- Average annual cost for installation and maintenance (one year useful life) is $200 per inlet.

Inspection and Maintenance

- Inspect BMPs prior to forecast rain, daily during extended rain events, after rain events, weekly during the rainy season, and at two-week intervals during the non-rainy season.

- Filter Fabric Fences. If the fabric becomes clogged, torn, or degrades, it should be replaced. Make sure the stakes are securely driven in the ground and are in good shape (i.e., not bent, cracked, or splintered, and are reasonably perpendicular to the ground). Replace damaged stakes.

- Gravel Filters. If the gravel becomes clogged with sediment, it must be carefully removed from the inlet and either cleaned or replaced. Since cleaning gravel at a construction site may be difficult, consider using the sediment-laden stone as fill material and put fresh stone around the inlet. Inspect bags for holes, gashes, and snags, and replace bags as needed. Check gravel bags for proper arrangement and displacement.

- Sediment that accumulates in the BMP must be periodically removed in order to maintain BMP effectiveness. Sediment should be removed when the sediment accumulation reaches one-third of the barrier height. Sediment removed during maintenance may be incorporated into earthwork on the site ore disposed at an appropriate location.

- Remove storm drain inlet protection once the drainage area is stabilized.

  - Clean and regrade area around the inlet and clean the inside of the storm drain inlet as it must be free of sediment and debris at the time of final inspection.

References

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management Manual for The Puget Sound Basin, Washington State Department of Ecology, Public Review Draft, 1991.

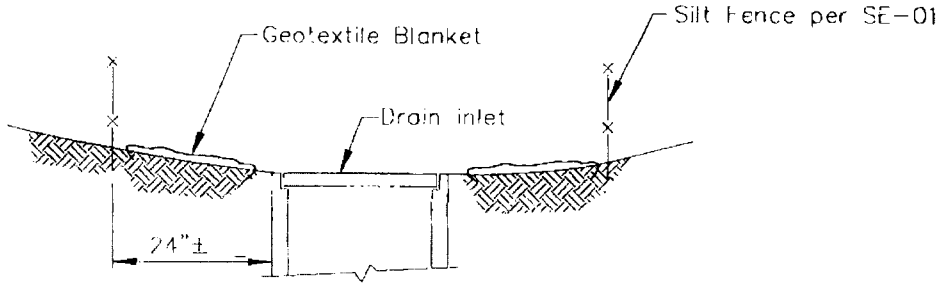

SECTION A-A

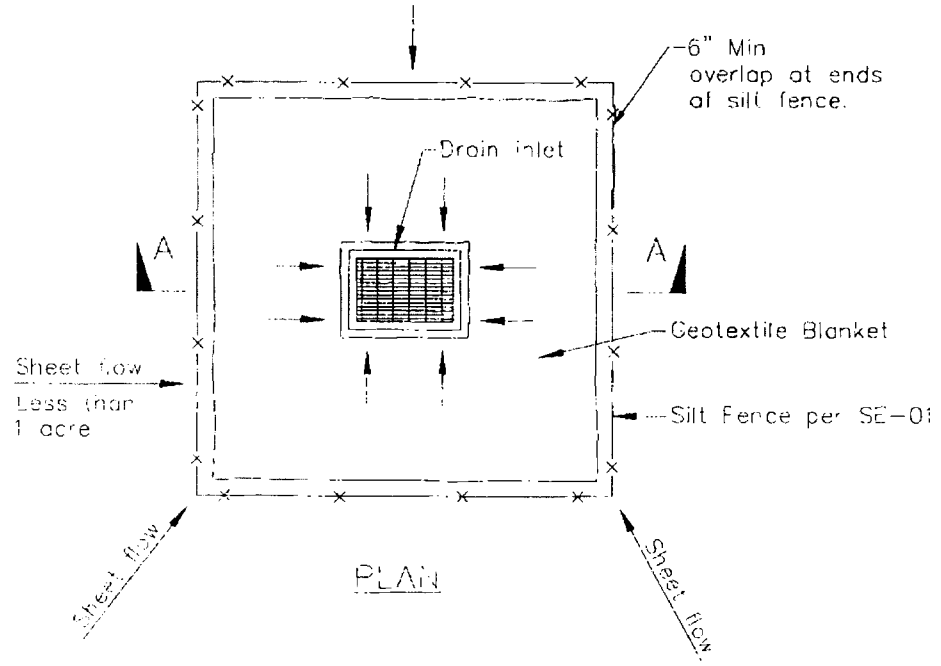

PLAN

D. PROTECTION TYPE 1
NOT TO SCALE

NOTES:

1. For use in areas where grading has been completed and final soil stabilization and seeding are pending.
2. Not applicable in paved areas.
3. Not applicable with concentrated flows

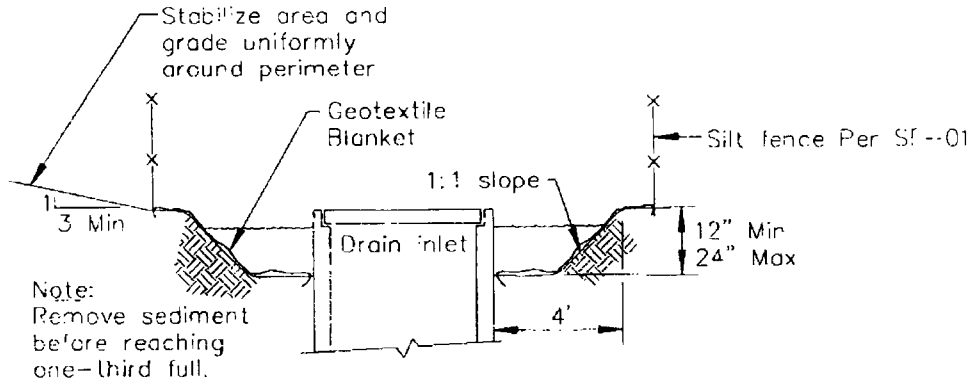

Section A–A

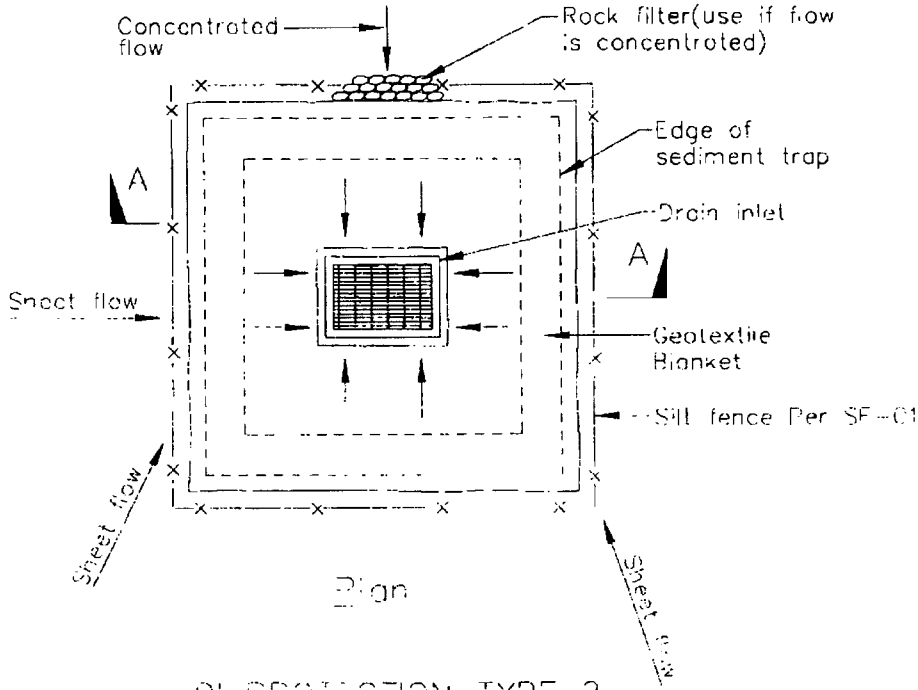

Plan

DI PROTECTION TYPE 2
NOT TO SCALE

Notes
1. For use in cleared and grubbed and in graded areas.
2. Shape basin so that longest inflow area faces longest length of trap.
3. For concentrated flows, shape basin in 2:1 ratio with length oriented towards direction of flow.

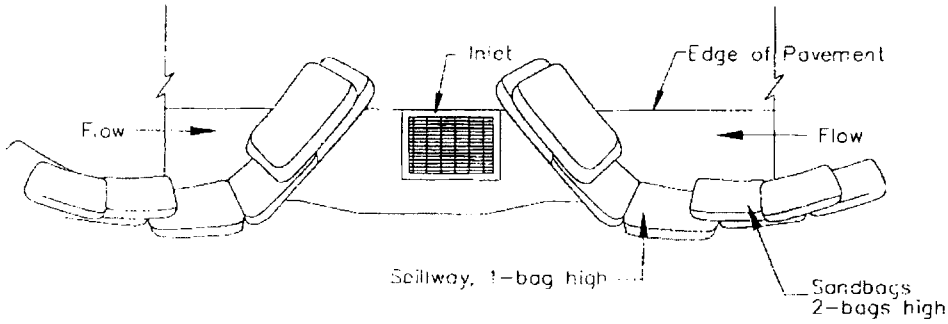

TYPICAL PROTECTION FOR INLET ON SUMP

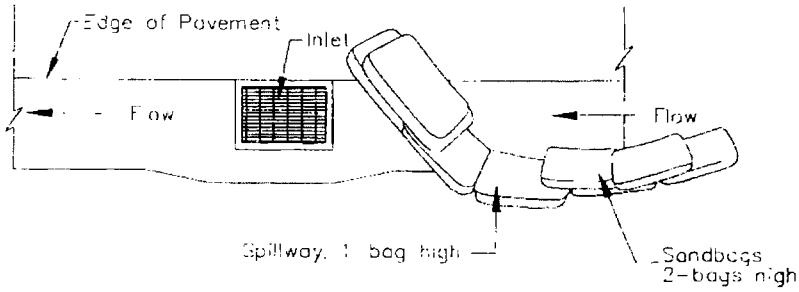

TYPICAL PROTECTION FOR INLET ON GRADE

NOTES:

1. Intended for short-term use
2. Use to inhibit non-storm water flow.
3. Allow for proper maintenance and cleanup
4. Bags must be removed after adjacent operation is completed
5. Not applicable in areas with high silts and clays without filter fabric

DI PROTECTION TYPE 3
NOT TO SCALE

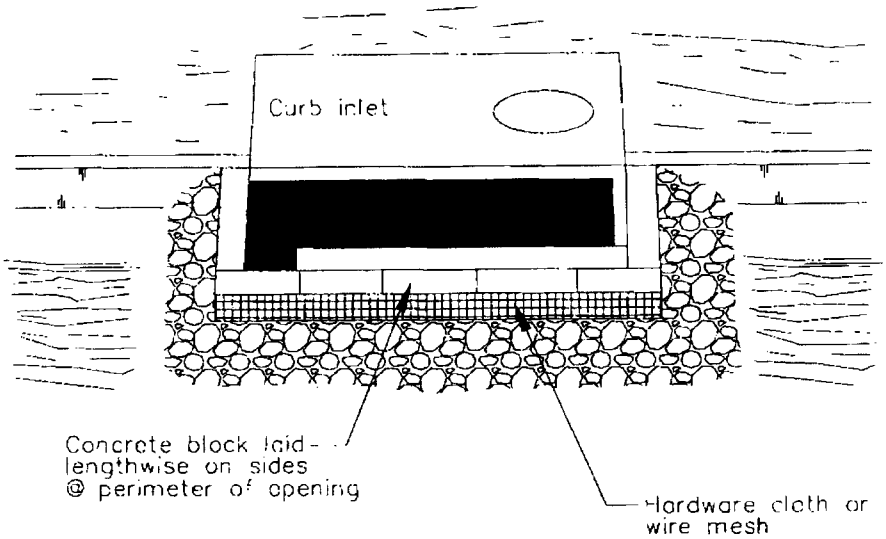

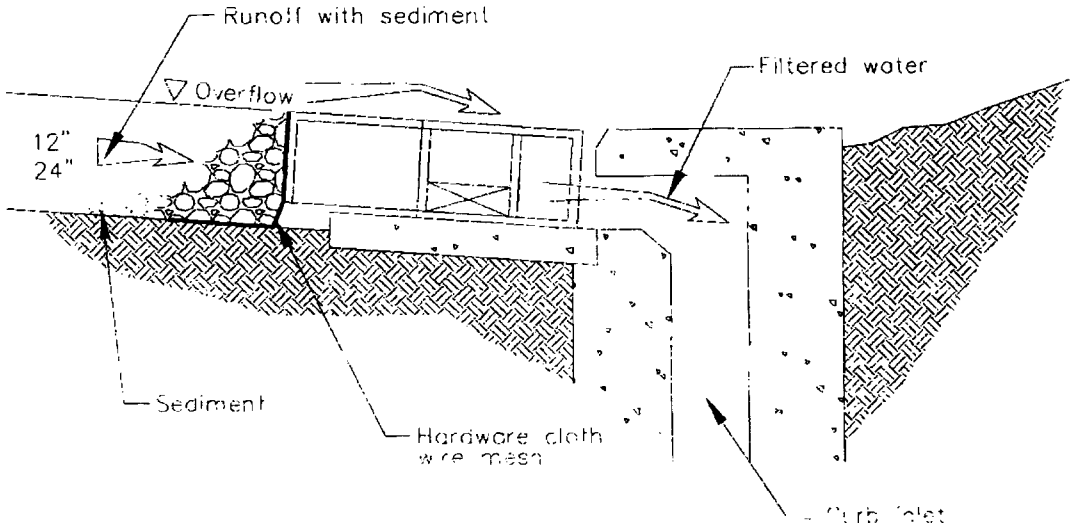

DI PROTECTION - TYPE 4
NOT TO SCALE

Stabilized Construction Entrance/Exit TC-1

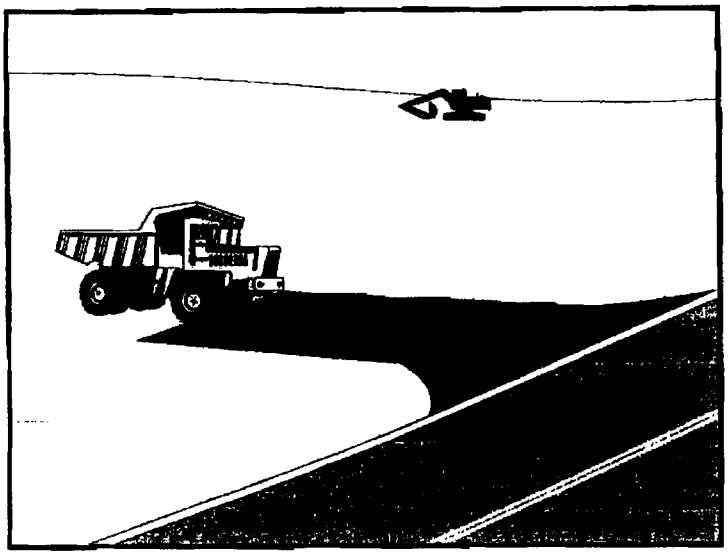

Objectives		
EC	Erosion Control	✓
SE	Sediment Control	✓
TC	Tracking Control	✓
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

None

Description and Purpose

A stabilized construction access is defined by a point of entrance/exit to a construction site that is stabilized to reduce the tracking of mud and dirt onto public roads by construction vehicles.

Suitable Applications

Use at construction sites:

- Where dirt or mud can be tracked onto public roads.
- Adjacent to water bodies.
- Where poor soils are encountered.
- Where dust is a problem during dry weather conditions.

Limitations

- Entrances and exits require periodic top dressing with additional stones.
- This BMP should be used in conjunction with street sweeping on adjacent public right of way.
- Entrances and exits should be constructed on level ground only.
- Stabilized construction entrances are rather expensive to construct and when a wash rack is included, a sediment trap of some kind must also be provided to collect wash water runoff.

CASQA California Stormwater Quality Association

Stabilized Construction Entrance/Exit TC-1

Implementation

General

A stabilized construction entrance is a pad of aggregate underlain with filter cloth located at any point where traffic will be entering or leaving a construction site to or from a public right of way, street, alley, sidewalk, or parking area. The purpose of a stabilized construction entrance is to reduce or eliminate the tracking of sediment onto public rights of way or streets. Reducing tracking of sediments and other pollutants onto paved roads helps prevent deposition of sediments into local storm drains and production of airborne dust.

Where traffic will be entering or leaving the construction site, a stabilized construction entrance should be used. NPDES permits require that appropriate measures be implemented to prevent tracking of sediments onto paved roadways, where a significant source of sediments is derived from mud and dirt carried out from unpaved roads and construction sites.

Stabilized construction entrances are moderately effective in removing sediment from equipment leaving a construction site. The entrance should be built on level ground. Advantages of the Stabilized Construction Entrance/Exit is that it does remove some sediment from equipment and serves to channel construction traffic in and out of the site at specified locations. Efficiency is greatly increased when a washing rack is included as part of a stabilized construction entrance/exit.

Design and Layout

- Construct on level ground where possible.
- Select 3 to 6 in. diameter stones.
- Use minimum depth of stones of 12 in. or as recommended by soils engineer.
- Construct length of 50 ft minimum, and 30 ft minimum width.
- Rumble racks constructed of steel panels with ridges and installed in the stabilized entrance/exit will help remove additional sediment and to keep adjacent streets clean.
- Provide ample turning radii as part of the entrance.
- Limit the points of entrance/exit to the construction site.
- Limit speed of vehicles to control dust.
- Properly grade each construction entrance/exit to prevent runoff from leaving the construction site.
- Route runoff from stabilized entrances/exits through a sediment trapping device before discharge.
- Design stabilized entrance/exit to support heaviest vehicles and equipment that will use it.
- Select construction access stabilization (aggregate, asphaltic concrete, concrete) based on longevity, required performance, and site conditions. Do not use asphalt concrete (AC) grindings for stabilized construction access/roadway.

- If aggregate is selected, place crushed aggregate over geotextile fabric to at least 12 in. depth, or place aggregate to a depth recommended by a geotechnical engineer. A crushed aggregate greater than 3 in. but smaller than 6 in. should be used.
- Designate combination or single purpose entrances and exits to the construction site.
- Require that all employees, subcontractors, and suppliers utilize the stabilized construction access.
- Implement SE-7, Street Sweeping and Vacuuming, as needed.
- All exit locations intended to be used for more than a two-week period should have stabilized construction entrance/exit BMPs.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMPs are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect local roads adjacent to the site daily. Sweep or vacuum to remove visible accumulated sediment.
- Remove aggregate, separate and dispose of sediment if construction entrance/exit is clogged with sediment.
- Keep all temporary roadway ditches clear.
- Check for damage and repair as needed.
- Replace gravel material when surface voids are visible.
- Remove all sediment deposited on paved roadways within 24 hours.
- Remove gravel and filter fabric at completion of construction

Costs

Average annual cost for installation and maintenance may vary from $1,200 to $4,800 each, averaging $2,400 per entrance. Costs will increase with addition of washing rack, and sediment trap. With wash rack, costs range from $1,200 - $6,000 each, averaging $3,600 per entrance.

References

Manual of Standards of Erosion and Sediment Control Measures, Association of Bay Area Governments, May 1995.

National Management Measures to Control Nonpoint Source Pollution from Urban Areas, USEPA Agency, 2002.

Proposed Guidance Specifying Management Measures for Sources of Nonpoint Pollution in Coastal Waters, Work Group Working Paper, USEPA, April 1992.

Stabilized Construction Entrance/Exit TC-1

Stormwater Quality Handbooks Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management of the Puget Sound Basin, Technical Manual, Publication #91-75, Washington State Department of Ecology, February 1992.

Virginia Erosion and Sedimentation Control Handbook, Virginia Department of Conservation and Recreation, Division of Soil and Water Conservation, 1991.

Guidance Specifying Management Measures for Nonpoint Pollution in Coastal Waters, EPA 840-B-9-002, USEPA, Office of Water, Washington, DC, 1993.

Water Quality Management Plan for the Lake Tahoe Region, Volume II, Handbook of Management Practices, Tahoe Regional Planning Agency, November 1988.

Stabilized Construction Entrance/Exit TC-1

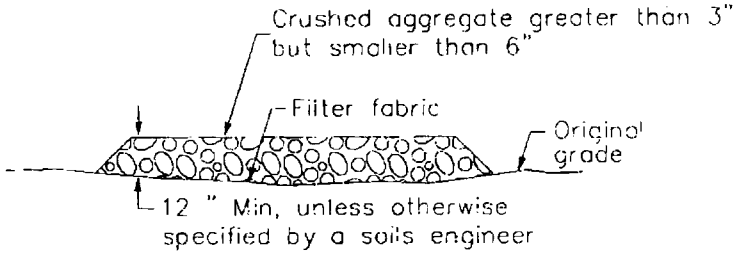

SECTION B-B
NTS

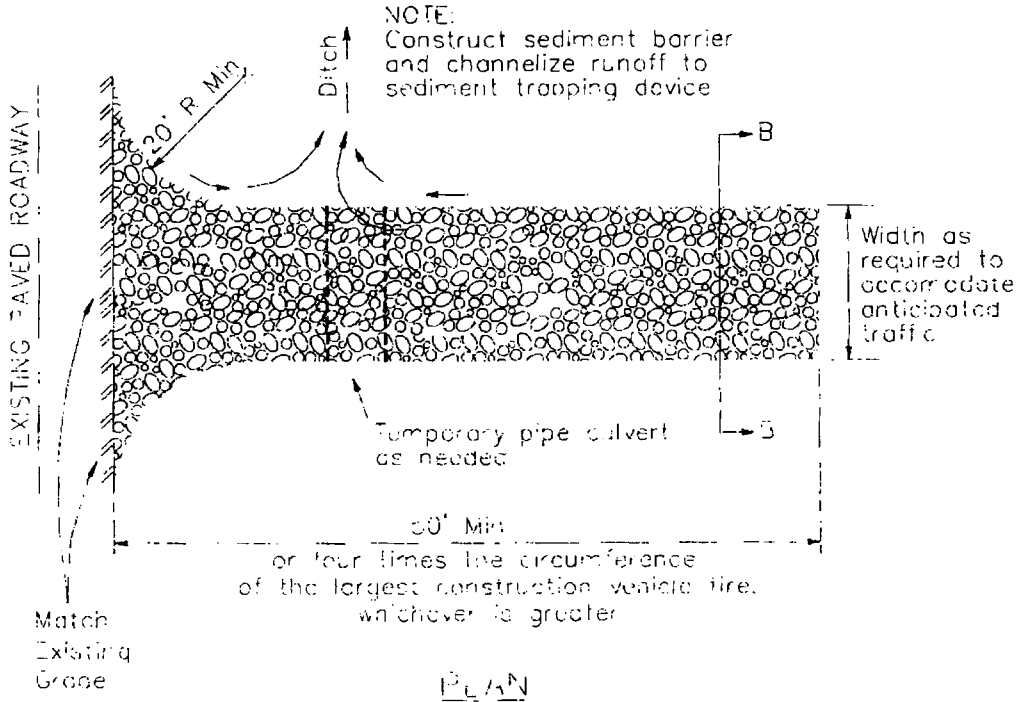

PLAN
NTS

Stabilized Construction Entrance/Exit TC-1

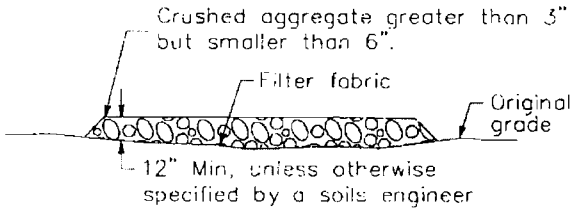

SECTION B–B
NTS

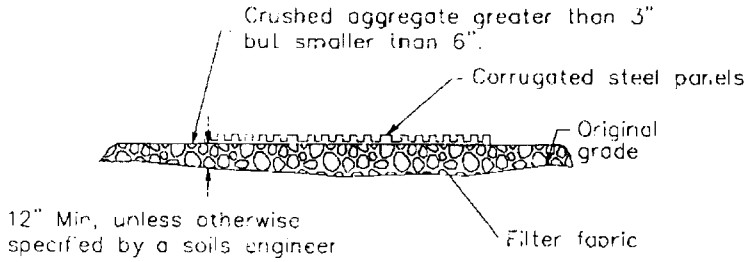

SECTION A–A
NOT TO SCALE

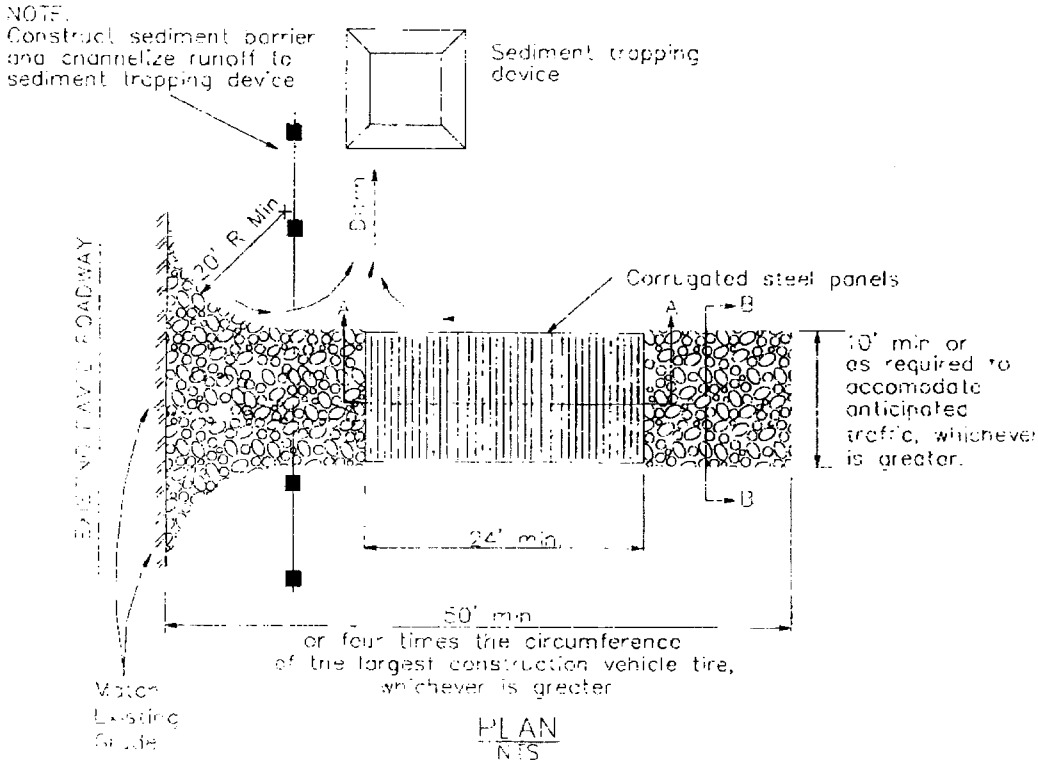

PLAN
NTS

Entrance/Outlet Tire Wash TC-3

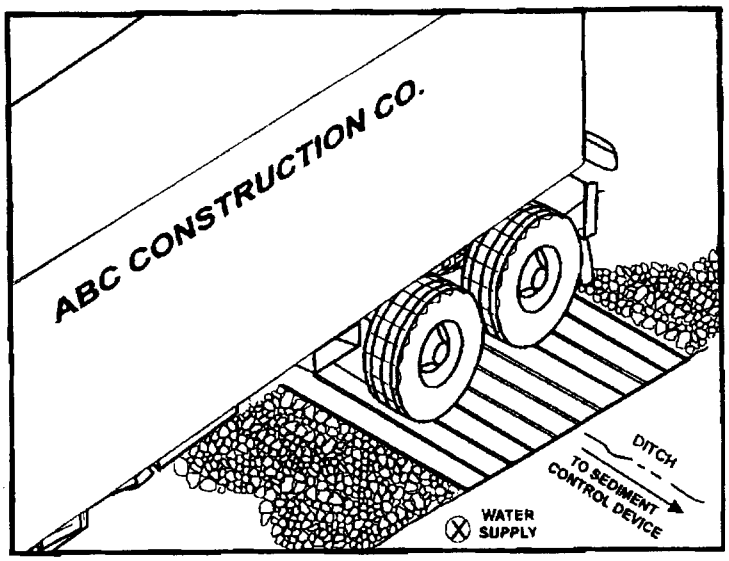

Objectives		
EC	Erosion Control	
SE	Sediment Control	✓
TC	Tracking Control	✓
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

TC-1 Stabilized Construction Entrance/Exit

Description and Purpose

A tire wash is an area located at stabilized construction access points to remove sediment from tires and under carriages and to prevent sediment from being transported onto public roadways.

Suitable Applications

Tire washes may be used on construction sites where dirt and mud tracking onto public roads by construction vehicles may occur.

Limitations

- The tire wash requires a supply of wash water.
- A turnout or doublewide exit is required to avoid having entering vehicles drive through the wash area.
- Do not use where wet tire trucks leaving the site leave the road dangerously slick.

Implementation

- Incorporate with a stabilized construction entrance/exit. See TC-1, Stabilized Construction Entrance/Exit.
- Construct on level ground when possible, on a pad of coarse aggregate greater than 3 in. but smaller than 6 in. A geotextile fabric should be placed below the aggregate.
- Wash rack should be designed and constructed/manufactured for anticipated traffic loads.

CASQA California Stormwater Quality Association

- Provide a drainage ditch that will convey the runoff from the wash area to a sediment trapping device. The drainage ditch should be of sufficient grade, width, and depth to carry the wash runoff.
- Use hoses with automatic shutoff nozzles to prevent hoses from being left on.
- Require that all employees, subcontractors, and others that leave the site with mud caked tires and undercarriages to use the wash facility.
- Implement SC-7, Street Sweeping and Vacuuming, as needed.

Costs

Costs are low for installation of wash rack.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect BMPs subject to non-stormwater discharge daily while non-stormwater discharges occur.
- Remove accumulated sediment in wash rack and/or sediment trap to maintain system performance.
- Inspect routinely for damage and repair as needed.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Coastal Nonpoint Pollution Control Program; Program Development and Approval Guidance, Working Group, Working Paper; USEPA, April 1992.

Manual of Standards of Erosion and Sediment Control Measures, Association of Bay Area Governments, May 1995.

Stormwater Quality Handbooks Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities, Developing Pollution Prevention Plans and Best Management Practices, EPA 832-R-92005; USEPA, April 1992.

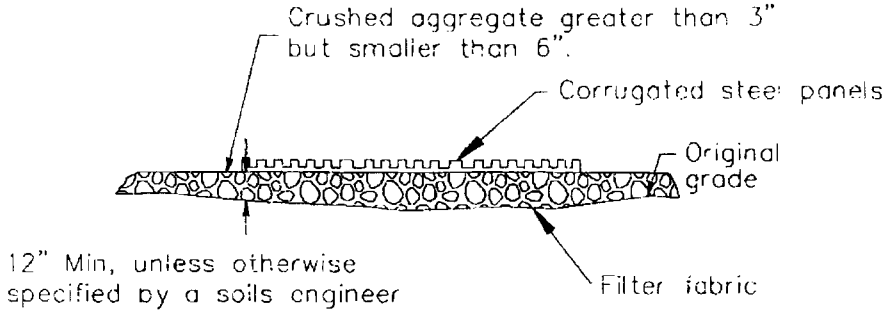

SECTION A–A
NOT TO SCALE

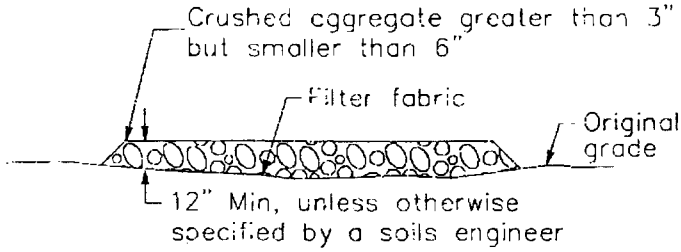

SECTION B–B
NTS

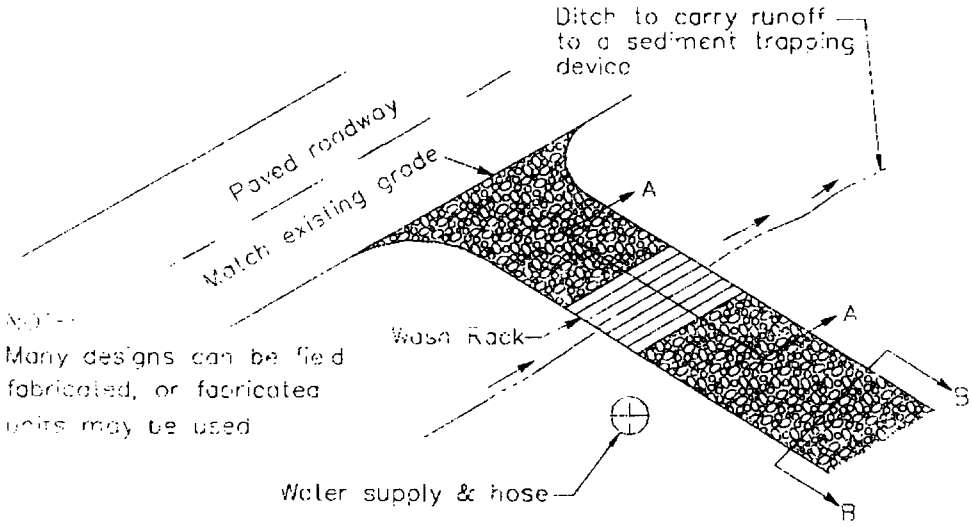

TYPICAL TIRE WASH
NOT TO SCALE

Wind Erosion Control WE-1

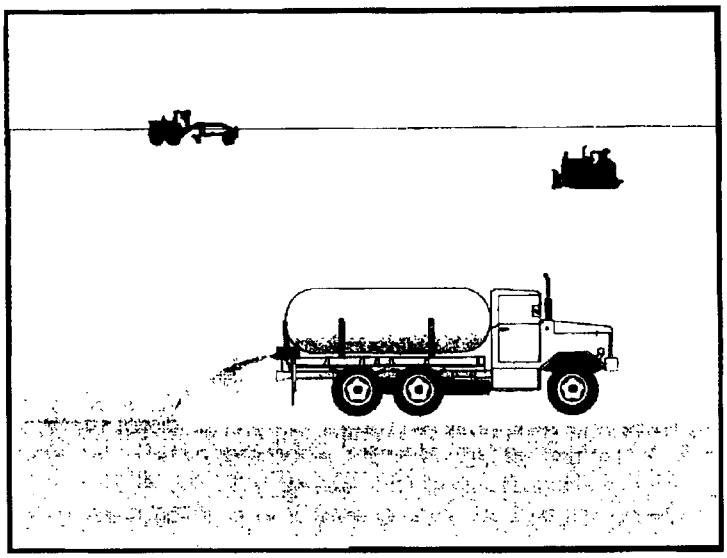

Objectives		
EC	Erosion Control	
SE	Sediment Control	✓
TC	Tracking Control	
WE	Wind Erosion Control	✓
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

None

Description and Purpose

Wind erosion or dust control consists of applying water or other dust palliatives as necessary to prevent or alleviate dust nuisance generated by construction activities. Covering small stockpiles or areas is an alternative to applying water or other dust palliatives.

Suitable Applications

Wind erosion control BMPs are suitable during the following construction activities:

- Construction vehicle traffic on unpaved roads
- Drilling and blasting activities
- Sediment tracking onto paved roads
- Soils and debris storage piles
- Batch drop from front-end loaders
- Areas with unstabilized soil
- Final grading/site stabilization

Limitations

- Watering prevents dust only for a short period and should be applied daily (or more often) to be effective.
- Over watering may cause erosion.

CASQA
California Stormwater Quality Association

- Oil or oil-treated subgrade should not be used for dust control because the oil may migrate into drainageways and/or seep into the soil.
- Effectiveness depends on soil, temperature, humidity, and wind velocity.
- Chemically treated sub grades may make the soil water repellant, interfering with long-term infiltration and the vegetation/re-vegetation of the site. Some chemical dust suppressants may be subject to freezing and may contain solvents and should be handled properly.
- Asphalt, as a mulch tack or chemical mulch, requires a 24-hour curing time to avoid adherence to equipment, worker shoes, etc. Application should be limited because asphalt surfacing may eventually migrate into the drainage system.
- In compacted areas, watering and other liquid dust control measures may wash sediment or other constituents into the drainage system.

Implementation

General

California's Mediterranean climate, with short wet seasons and long hot dry seasons, allows the soils to thoroughly dry out. During these dry seasons, construction activities are at their peak, and disturbed and exposed areas are increasingly subject to wind erosion, sediment tracking and dust generated by construction equipment.

Dust control, as a BMP, is a practice that is already in place for many construction activities. Los Angeles, the North Coast, and Sacramento, among others, have enacted dust control ordinances for construction activities that cause dust to be transported beyond the construction project property line.

Recently, the State Air Resources Control Board has, under the authority of the Clean Air Act, started to address air quality in relation to inhalable particulate matter less than 10 microns (PM-10). Approximately 90 percent of these small particles are considered to be dust. Existing dust control regulations by local ageucies, municipal departments, public works department, and public health departments are in place in some regions within California.

Many local agencies require dust control in order to comply with local nuisance laws, opacity laws (visibility impairment) and the requirements of the Clean Air Act. The following are measures that local agencies may have already implemented as requirements for dust control from contractors:

- Construction and Grading Permits: Require provisions for dust control plans.
- Opacity Emission Limits: Enforce compliance with California air pollution control laws.
- Increase Overall Enforcement Activities: Priority given to cases involving citizen complaints.
- Maintain Field Application Records: Require records of dust control measures from contractor;
- Stormwater Pollution Prevention Plan: (SWPPP): Integrate dust control measures into SWPPP.

Dust Control Practices

Dust control BMPs generally stabilize exposed surfaces and minimize activities that suspend or track dust particles. The following table shows dust control practices that can be applied to site conditions that cause dust. For heavily traveled and disturbed areas, wet suppression (watering), chemical dust suppression, gravel asphalt surfacing, temporary gravel construction entrances, equipment wash-out areas, and haul truck covers can be employed as dust control applications. Permanent or temporary vegetation and mulching can be employed for areas of occasional or no construction traffic. Preventive measures would include minimizing surface areas to be disturbed, limiting onsite vehicle traffic to 15 mph, and controlling the number and activity of vehicles on a site at any given time.

SITE CONDITION	DUST CONTROL PRACTICES								
	Permanent Vegetation	Mulching	Wet Suppression (Watering)	Chemical Dust Suppression	Gravel or Asphalt	Silt Fences	Temporary Gravel Construction Entrances/Equipment Wash Down	Haul Truck Covers	Minimize Extent of Disturbed Area
Disturbed Areas not Subject to Traffic	X	X	X	X	X				X
Disturbed Areas Subject to Traffic			X	X	X		X		X
Material Stock Pile Stabilization			X	X		X			X
Demolition			X				X	X	
Clearing/ Excavation			X	X		X			X
Truck Traffic on Unpaved Roads			X	X	X		X	X	
Mud/Dirt Carry Out					X		X		

Additional preventive measures include:

- Schedule construction activities to minimize exposed area (EC-1, Scheduling).
- Quickly stabilize exposed soils using vegetation, mulching, spray-on adhesives, calcium chloride, sprinkling, and stone/gravel layering.
- Identify and stabilize key access points prior to commencement of construction.
- Minimize the impact of dust by anticipating the direction of prevailing winds.
- Direct most construction traffic to stabilized roadways within the project site.
- Water should be applied by means of pressure-type distributors or pipelines equipped with a spray system or hoses and nozzles that will ensure even distribution.
- All distribution equipment should be equipped with a positive means of shutoff.
- Unless water is applied by means of pipelines, at least one mobile unit should be available at all times to apply water or dust palliative to the project.

- If reclaimed waste water is used, the sources and discharge must meet California Department of Health Services water reclamation criteria and the Regional Water Quality Control Board requirements. Non-potable water should not be conveyed in tanks or drain pipes that will be used to convey potable water and there should be no connection between potable and non-potable supplies. Non-potable tanks, pipes, and other conveyances should be marked, "NON-POTABLE WATER - DO NOT DRINK."
- Materials applied as temporary soil stabilizers and soil binders also generally provide wind erosion control benefits.
- Pave or chemically stabilize access points where unpaved traffic surfaces adjoin paved roads.
- Provide covers for haul trucks transporting materials that contribute to dust.
- Provide for wet suppression or chemical stabilization of exposed soils.
- Provide for rapid clean up of sediments deposited on paved roads. Furnish stabilized construction road entrances and vehicle wash down areas.
- Stabilize inactive construction sites using vegetation or chemical stabilization methods.
- Limit the amount of areas disturbed by clearing and earth moving operations by scheduling these activities in phases.

For chemical stabilization, there are many products available for chemically stabilizing gravel roadways and stockpiles. If chemical stabilization is used, the chemicals should not create any adverse effects on stormwater, plant life, or groundwater.

Costs

Installation costs for water and chemical dust suppression are low, but annual costs may be quite high since these measures are effective for only a few hours to a few days.

Inspection and Maintenance

- Inspect and verify that activity-based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and at two-week intervals in the non-rainy season to verify continued BMP implementation.
- Check areas protected to ensure coverage.
- Most dust control measures require frequent, often daily, or multiple times per day attention.

References

Best Management Practices and Erosion Control Manual for Construction Sites, Flood Control District of Maricopa County, Arizona, September 1992.

California Air Pollution Control Laws, California Air Resources Board, 1992.

Caltrans, Standard Specifications, Sections 10, "Dust Control"; Section 17, "Watering"; and Section 18, "Dust Palliative".

Prospects for Attaining the State Ambient Air Quality Standards for Suspended Particulate Matter (PM10), Visibility Reducing Particles, Sulfates, Lead, and Hydrogen Sulfide, California Air Resources Board, April 1991.

Stormwater Quality Handbooks Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Water Conservation Practices NS-1

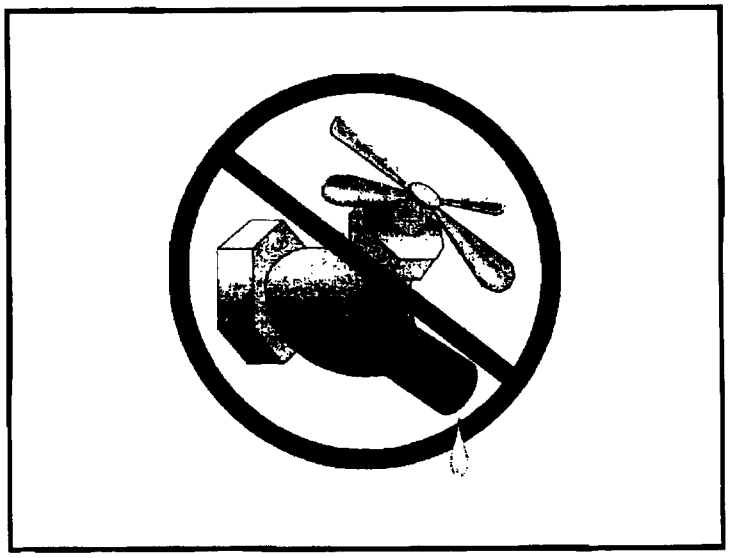

Objectives		
EC	Erosion Control	✓
SE	Sediment Control	✓
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	✓
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

None

Description and Purpose

Water conservation practices are activities that use water during the construction of a project in a manner that avoids causing erosion and the transport of pollutants offsite. These practices can reduce or eliminate non-stormwater discharges.

Suitable Applications

Water conservation practices are suitable for all construction sites where water is used, including piped water, metered water, trucked water, and water from a reservoir.

Limitations

- None identified.

Implementation

- Keep water equipment in good working condition.
- Stabilize water truck filling area.
- Repair water leaks promptly.
- Washing of vehicles and equipment on the construction site is discouraged.
- Avoid using water to clean construction areas. If water must be used for cleaning or surface preparation, surface should be swept and vacuumed first to remove dirt. This will minimize amount of water required.

CASQA
California Stormwater Quality Association

- Direct construction water runoff to areas where it can soak into the ground or be collected and reused.
- Authorized non-stormwater discharges to the storm drain system, channels, or receiving waters are acceptable with the implementation of appropriate BMPs.
- Lock water tank valves to prevent unauthorized use.

Costs

The cost is small to none compared to the benefits of conserving water.

Inspection and Maintenance

- Inspect and verify that activity based BMPs are in place prior to the commencement of authorized non-stormwater discharges.
- Inspect BMPs subject to non-stormwater discharges daily while non-stormwater discharges are occuring.
- Repair water equipment as needed to prevent unintended discharges.
  - Water trucks
  - Water reservoirs (water buffalos)
  - Irrigation systems
  - Hydrant connections

References

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Paving and Grinding Operations NS-3

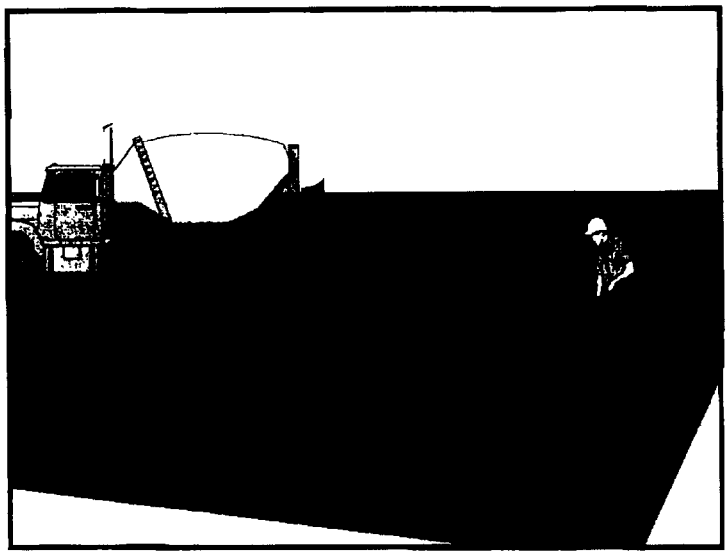

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	✓
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	
Bacteria	
Oil and Grease	✓
Organics	

Potential Alternatives

None

Description and Purpose

Prevent or reduce the discharge of pollutants from paving operations, using measures to prevent runon and runoff pollution, properly disposing of wastes, and training employees and subcontractors.

Suitable Applications

These procedures are implemented where paving, surfacing, resurfacing, or sawcutting, may pollute stormwater runoff or discharge to the storm drain system or watercourses.

Limitations

- Finer solids are not effectively removed by filtration systems.
- Paving opportunities may be limited during wet weather.

Implementation

General

- Avoid paving during the wet season when feasible.
- Reschedule paving and grinding activities if rain is in the forecast.
- Train employees and sub-contractors in pollution prevention and reduction.
- Store materials away from drainage courses to prevent stormwater runon (see WM-1, Material Delivery and Storage).

- Protect drainage courses, particularly in areas with a grade, by employing BMPs to divert runoff or to trap and filter sediment.
- If paving involves an onsite mixing plant, follow the stormwater permitting requirements for industrial activities.
- Stockpile material removed from roadways away from drain inlets, drainage ditches, and watercourses, These materials should be stored consistent with WM-3, Stockpile Management.
- Disposal of PCC and AC waste should be in conformance with WM-8, Concrete Waste Management.

Saw Cutting, Grinding, and Pavement Removal

- Shovel or vacuum saw-cut slurry and remove from site. Cover or barricade storm drains during saw cutting to contain slurry.
- When paving involves AC, the following steps should be implemented to prevent the discharge of grinding residue, uncompacted or loose AC, tack coats, equipment cleaners, or unrelated paving materials:
  - AC grindings, pieces, or chunks used in embankments or shoulder backing must not be allowed to enter any storm drains or watercourses. Install silt fence until structure is stabilized or permanent controls are in place. Examples of temporary perimeter controls can be found in EC-9, Earth Dikes and Drainage Swales; SE-1, Silt Fence; or SE-5, Fiber Rolls.
  - Collect and remove all broken asphalt and recycle when practical. Old or spilled asphalt must be recycled or disposed.
  - Any AC chunks and pieces used in embankments must be placed above the water table and covered by at least 1 ft of material.
- Do not allow saw-cut slurry to enter storm drains or watercourses. Residue from grinding operations should be picked up by means of a vacuum attachment to the grinding machine, should not be allowed to flow across the pavement, and should not be left on the surface of the pavement. See also WM-8, Concrete Waste Management, and WM-10, Liquid Waste Management.
- Dig out activities should not be conducted in the rain.
- Collect dig out material by mechanical or manual methods. This material may be recycled for use as shoulder backing or base material.
- If dig out material cannot be recycled, transport the material back to an approved storage site.

Asphaltic Concrete Paving

- If paving involves asphaltic cement concrete, follow these steps:

- Do not allow sand or gravel placed over new asphalt to wash into storm drains, streets, or creeks. Vacuum or sweep loose sand and gravel and properly dispose of this waste by referring to WM-5, Solid Waste Management.

- Old asphalt must be disposed of properly. Collect and remove all broken asphalt from the site and recycle whenever possible.

Portland Cement Concrete Paving

- Do not wash sweepings from exposed aggregate concrete into a storm drain system. Collect and return to aggregate base stockpile or dispose of properly.

- Allow aggregate rinse to settle. Then, either allow rinse water to dry in a temporary pit as described in WM-8, Concrete Waste Management, or pump the water to the sanitary sewer if allowed by the local wastewater authority.

Sealing Operations

- During chip seal application and sweeping operations, petroleum or petroleum covered aggregate must not be allowed to enter any storm drain or water courses. Apply temporary perimeter controls until structure is stabilized.

- Drainage inlet structures and manholes should be covered with filter fabric during application of seal coat, tack coat, slurry seal, and fog seal.

- Seal coat, tack coat, slurry seal, or fog seal should not be applied if rainfall is predicted to occur during the application or curing period.

Paving Equipment

- Leaks and spills from paving equipment can contain toxic levels of heavy metals and oil and grease. Place drip pans or absorbent materials under paving equipment when not in use. Clean up spills with absorbent materials rather than burying. See NS-10, Vehicle and Equipment Maintenance, WM-4, Spill Prevention and Control, and WM-10, Liquid Waste Management.

- Substances used to coat asphalt transport trucks, and asphalt spreading equipment should not contain soap and should be non-foaming and non-toxic.

- Use only non-toxic substances to coat asphalt transport trucks and asphalt spreading equipment.

- Paving equipment parked onsite should be parked over plastic to prevent soil contamination.

- Clean asphalt coated equipment offsite whenever possible. When cleaning dry, hardened asphalt from equipment, manage hardened asphalt debris as described in WM-5, Solid Waste Management. Any cleaning onsite should follow NS-8, Vehicle and Equipment Cleaning.

Thermoplastic Striping

- Thermoplastic striper and pre-heater equipment shutoff valves should be inspected to ensure that they are working properly to prevent leaking thermoplastic from entering drain inlets, the stormwater drainage system, or watercourses.
- Pre-heaters should be filled carefully to prevent splashing or spilling of hot thermoplastic. Leave six inches of space at the top of the pre-heater container when filling thermoplastic to allow room for material to move when the vehicle is deadheaded.
- Do not pre-heat, transfer, or load thermoplastic near drain inlets or watercourses.
- Clean truck beds daily of loose debris and melted thermoplastic. When possible, recycle thermoplastic material.

Raised/Recessed Pavement Marker Application and Removal

- Do not transfer or load bituminous material near drain inlets, the stormwater drainage system, or watercourses.
- Melting tanks should be loaded with care and not filled to beyond six inches from the top to leave room for splashing when vehicle is deadheaded.
- When servicing or filling melting tanks, ensure all pressure is released before removing lids to avoid spills.
- On large-scale projects, use mechanical or manual methods to collect excess bituminous material from the roadway after removal of markers.

Costs

- All of the above are low cost measures.

Inspection and Maintenance

- Inspect and verify that activity-based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and at two-week intervals in the non-rainy season to verify continued BMP implementation.
- Keep ample supplies of drip pans or absorbent materials onsite.
- Inspect and maintain machinery regularly to minimize leaks and drips.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Hot Mix Asphalt-Paving Handbook AC 150/5370-14, Appendix I, U.S. Army Corps of Engineers, July 1991.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Illicit Connection/Discharge NS-6

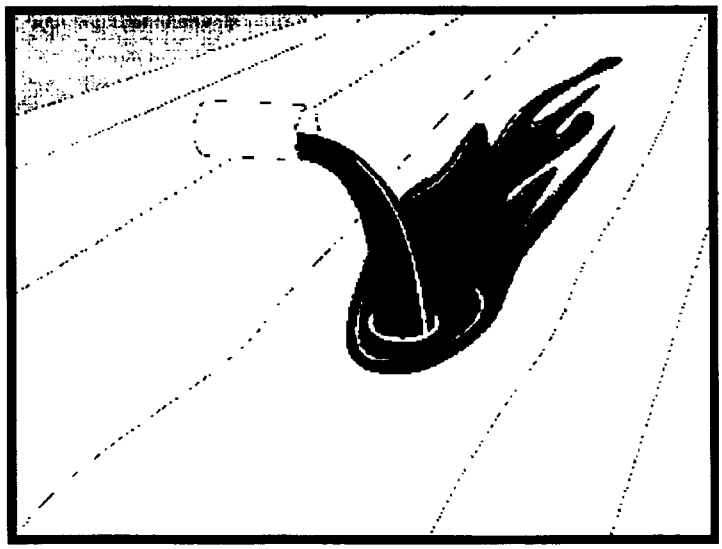

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	✓
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	
Nutrients	✓
Trash	✓
Metals	✓
Bacteria	✓
Oil and Grease	✓
Organics	✓

Potential Alternatives

None

Description and Purpose

Procedures and practices designed for construction contractors to recognize illicit connections or illegally dumped or discharged materials on a construction site and report incidents.

Suitable Applications

This best management practice (BMP) applies to all construction projects. Illicit connection/discharge and reporting is applicable anytime an illicit connection or discharge is discovered or illegally dumped material is found on the construction site.

Limitations

Illicit connections and illegal discharges or dumping, for the purposes of this BMP, refer to discharges and dumping caused by parties other than the contractor. If pre-existing hazardous materials or wastes are known to exist onsite, they should be identified in the SWPPP and handled as set forth in the SWPPP.

Implementation

Planning

- Review the SWPPP. Pre-existing areas of contamination should be identified and documented in the SWPPP.
- Inspect site before beginning the job for evidence of illicit connections, illegal dumping or discharges. Document any pre-existing conditions and notify the owner.

- Inspect site regularly during project execution for evidence of illicit connections, illegal dumping or discharges.
- Observe site perimeter for evidence for potential of illicitly discharged or illegally dumped material, which may enter the job site.

Identification of Illicit Connections and Illegal Dumping or Discharges

- **General** – unlabeled and unidentifiable material should be treated as hazardous.
- **Solids** - Look for debris, or rubbish piles. Solid waste dumping often occurs on roadways with light traffic loads or in areas not easily visible from the traveled way.
- **Liquids** - signs of illegal liquid dumping or discharge can include:
  - Visible signs of staining or unusual colors to the pavement or surrounding adjacent soils
  - Pungent odors coming from the drainage systems
  - Discoloration or oily substances in the water or stains and residues detained within ditches, channels or drain boxes
  - Abnormal water flow during the dry weather season
- **Urban Areas** - Evidence of illicit connections or illegal discharges is typically detected at storm drain outfall locations or at manholes. Signs of an illicit connection or illegal discharge can include:
  - Abnormal water flow during the dry weather season
  - Unusual flows in sub drain systems used for dewatering
  - Pungent odors coming from the drainage systems
  - Discoloration or oily substances in the water or stains and residues detained within ditches, channels or drain boxes
  - Excessive sediment deposits, particularly adjacent to or near active offsite construction projects
- **Rural Areas** - Illicit connections or illegal discharges involving irrigation drainage ditches are detected by visual inspections. Signs of an illicit discharge can include:
  - Abnormal water flow during the non-irrigation season
  - Non-standard junction structures
  - Broken concrete or other disturbances at or near junction structures

Reporting

Notify the owner of any illicit connections and illegal dumping or discharge incidents at the time of discovery. For illicit connections or discharges to the storm drain system, notify the local stormwater management agency. For illegal dumping, notify the local law enforcement agency.

Cleanup and Removal

The responsibility for cleanup and removal of illicit or illegal dumping or discharges will vary by location. Contact the local stormwater management agency for further information.

Costs

Costs to look for and report illicit connections and illegal discharges and dumping are low. The best way to avoid costs associated with illicit connections and illegal discharges and dumping is to keep the project perimeters secure to prevent access to the site, to observe the site for vehicles that should not be there, and to document any waste or hazardous materials that exist onsite before taking possession of the site.

Inspection and Maintenance

- Inspect and verify that activity-based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and at two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect the site regularly to check for any illegal dumping or discharge.
- Prohibit employees and subcontractors from disposing of non-job related debris or materials at the construction site.
- Notify the owner of any illicit connections and illegal dumping or discharge incidents at the time of discovery.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities, Developing Pollution Prevention Plans and Best Management Practices, EPA 832-R-92005; USEPA, April 1992.

Potable Water/Irrigation NS-7

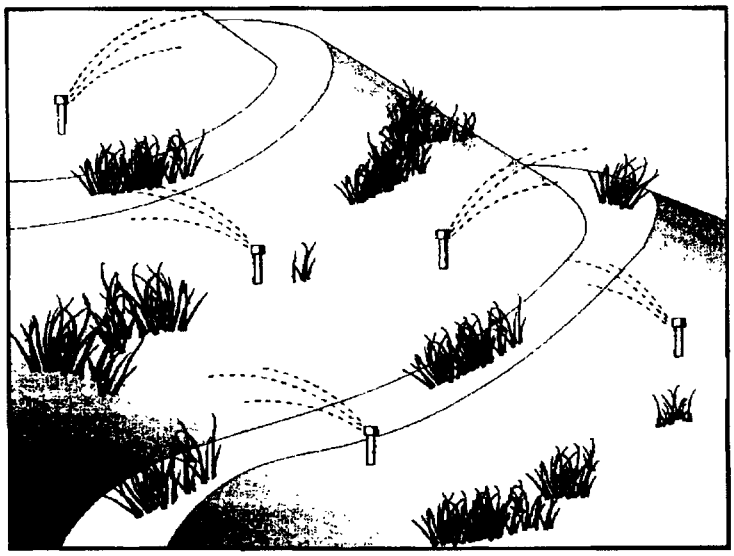

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	✓
WM	Waste Management and Materials Pollution Control	

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	✓
Trash	
Metals	✓
Bacteria	
Oil and Grease	
Organics	✓

Potential Alternatives

None

Description and Purpose

Potable Water/Irrigation consists of practices and procedures to manage the discharge of potential pollutants generated during discharges from irrigation water lines, landscape irrigation, lawn or garden watering, planned and unplanned discharges from potable water sources, water line flushing, and hydrant flushing.

Suitable Applications

Implement this BMP whenever potable water or irrigation water discharges occur at or enter a construction site.

Limitations

None identified.

Implementation

- Direct water from offsite sources around or through a construction site, where feasible, in a way that minimizes contact with the construction site.
- Discharges from water line flushing should be reused for landscaping purposes where feasible.
- Shut off the water source to broken lines, sprinklers, or valves as soon as possible to prevent excess water flow.
- Protect downstream stormwater drainage systems and watercourses from water pumped or bailed from trenches excavated to repair water lines.

- Inspect irrigated areas within the construction limits for excess watering. Adjust watering times and schedules to ensure that the appropriate amount of water is being used and to minimize runoff. Consider factors such as soil structure, grade, time of year, and type of plant material in determining the proper amounts of water for a specific area.

Costs

Cost to manage potable water and irrigation are low and generally considered to be a normal part of related activities.

Inspection and Maintenance

- Inspect and verify that activity-based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and at two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect BMPs subject to non-stormwater discharges daily while non-stormwater discharges occur.
- Repair broken water lines as soon as possible.
- Inspect irrigated areas regularly for signs of erosion and/or discharge.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities, Developing Pollution Prevention Plans and Best Management Practices, EPA 832-R-92005; USEPA, April 1992.

Concrete Curing NS-12

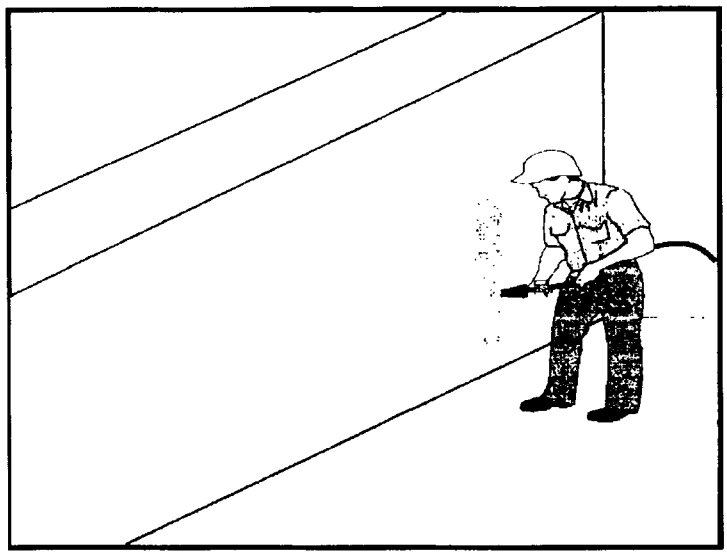

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	✓
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	✓
Bacteria	
Oil and Grease	✓
Organics	

Potential Alternatives

None

Description and Purpose

Concrete curing is used in the construction of structures such as bridges, retaining walls, pump houses, large slabs, and structured foundations. Concrete curing includes the use of both chemical and water methods. Discharges of stormwater and non-stormwater exposed to concrete during curing may have a high pH and may contain chemicals, metals, and fines. Proper procedures reduce or eliminate the contamination of stormwater runoff during concrete curing.

Suitable Applications

Suitable applications include all projects where Portland Cement Concrete (PCC) and concrete curing chemicals are placed where they can be exposed to rainfall, runoff from other areas, or where runoff from the PCC will leave the site.

Limitations

None identified.

Implementation

Chemical Curing

- Avoid over spray of curing compounds.
- Minimize the drift of chemical cure as much as possible by applying the curing compound close to the concrete surface. Apply an amount of compound that covers the surface, but does not allow any runoff of the compouud.
- Use proper storage and handling techniques for concrete curing compounds. Refer to WM-1, Material Delivery and Storage.

- Protect drain inlets prior to the application of curing compounds.
- Refer to WM-4, Spill Prevention and Control.

Water Curing for Bridge Decks, Retaining Walls, and other Structures

- Direct cure water away from inlets and watercourses to collection areas for infiltration or other means of removal in accordance with all applicable permits.
- Collect cure water at the top of slopes and transport or dispose of water in a non-erodible manner. See EC-9 Earth Dikes and Drainage Swales, EC-10, Velocity Dissipation Devices, and EC-11, Slope Drains.
- Utilize wet blankets or a similar method that maintains moisture while minimizing the use and possible discharge of water.

Costs

All of the above measures are generally low cost.

Inspection and Maintenance

- Inspect and verify that activity-based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and at two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect BMPs subject to non-stormwater discharges daily while non-stormwater discharges occur.
- Ensure that employees and subcontractors implement appropriate measures for storage, handling, and use of curing compounds.
- Inspect cure containers and spraying equipment for leaks.

References

Blue Print for a Clean Bay-Construction-Related Industries: Best Management Practices for Stormwater Pollution Prevention; Santa Clara Valley Non Point Source Pollution Control Program, 1992.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities, Developing Pollution Prevention Plans and Best Management Practices, EPA 832-R-92005; USEPA, April 1992.

Concrete Finishing NS-13

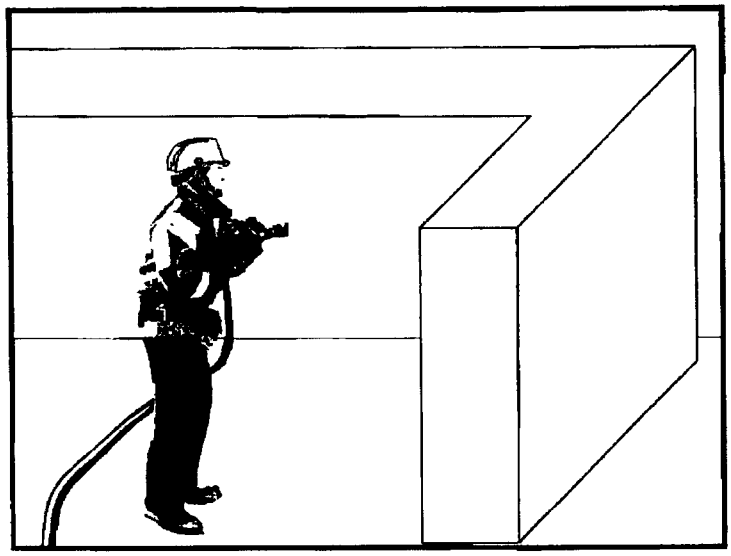

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	✓
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	
Trash	
Metals	✓
Bacteria	
Oil and Grease	
Organics	✓

Potential Alternatives

None

Description and Purpose

Concrete finishing methods are used for bridge deck rehabilitation, paint removal, curing compound removal, and final surface finish appearances. Methods include sand blasting, shot blasting, grinding, or high pressure water blasting. Stormwater and non-stormwater exposed to concrete finishing by-products may have a high pH and may contain chemicals, metals, and fines. Proper procedures and implementation of appropriate BMPs can minimize the impact that concrete-finishing methods may have on stormwater and non-stormwater discharges.

Suitable Applications

These procedures apply to all construction locations where concrete finishing operations are performed.

Limitations

None identified.

Implementation

- Collect and properly dispose of water from high-pressure water blasting operations.
- Collect contaminated water from blasting operations at the top of slopes. Transport or dispose of contaminated water while using BMPs such as those for erosion control. Refer to EC-9, Earth Dikes and Drainage Swales, EC-10, Velocity Dissipation Devices, and EC-11, Slope Drains.

- Direct water from blasting operations away from inlets and watercourses to collection areas for infiltration or other means of removal (dewatering). Refer to NS-2 De-Watering Operations.
- Protect inlets during sandblasting operations. Refer to SE-10, Storm Drain Inlet Protection.
- Refer to WM-8, Concrete Waste Management for disposal of concrete based debris.
- Minimize the drift of dust and blast material as much as possible by keeping the blasting nozzle close to the surface.
- When blast residue contains a potentially hazardous waste, refer to WM-6, Hazardous Waste Management.

Costs

These measures are generally of low cost.

Inspection and Maintenance

- Inspect and verify that activity-based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and at two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect BMPs subject to non-stormwater discharges daily while non-stormwater discharges occur.
- Sweep or vacuum up debris from sandblasting at the end of each shift.
- At the end of each work shift, remove and contain liquid and solid waste from containment structures, if any, and from the general work area.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities, Developing Pollution Prevention Plans and Best Management Practices, EPA 832-R-92005; USEPA, April 1992.

Material Delivery and Storage WM-1

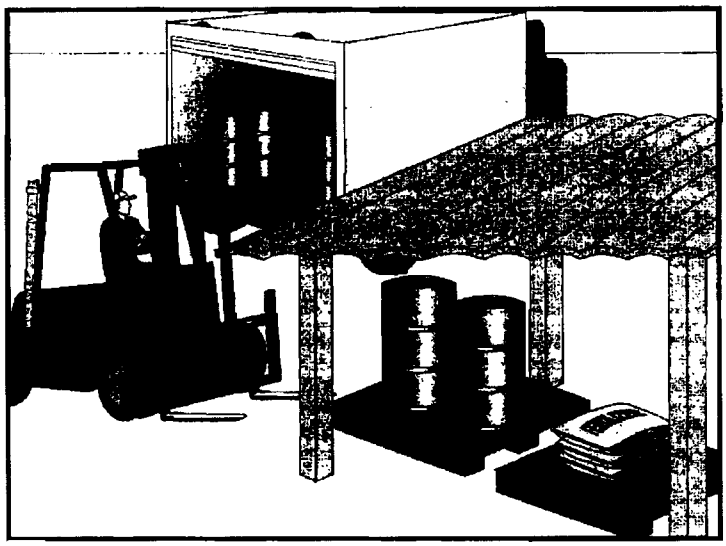

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	✓
Trash	✓
Metals	✓
Bacteria	
Oil and Grease	✓
Organics	✓

Potential Alternatives

None

Description and Purpose

Prevent, reduce, or eliminate the discharge of pollutants from material delivery and storage to the stormwater system or watercourses by minimizing the storage of hazardous materials onsite, storing materials in a designated area, installing secondary containment, conducting regular inspections, and training employees and subcontractors.

This best management practice covers only material delivery and storage. For other information on materials, see WM-2, Material Use, or WM-4, Spill Prevention and Control. For information on wastes, see the waste management BMPs in this section.

Suitable Applications

These procedures are suitable for use at all construction sites with delivery and storage of the following materials:

- Soil stabilizers and binders
- Pesticides and herbicides
- Fertilizers
- Detergents
- Plaster
- Petroleum products such as fuel, oil, and grease
- Asphalt and concrete components

- Hazardous chemicals such as acids, lime, glues, adhesives, paints, solvents, and curing compounds
- Concrete compounds
- Other materials that may be detrimental if released to the environment

Limitations

- Space limitation may preclude indoor storage.
- Storage sheds often must meet building and fire code requirements.

Implementation

The following steps should be taken to minimize risk:

- Temporary storage area should be located away from vehicular traffic.
- Material Safety Data Sheets (MSDS) should be supplied for all materials stored.
- Construction site areas should be designated for material delivery and storage.
- Material delivery and storage areas should be located near the construction entrances, away from waterways, if possible.
  - Avoid transport near drainage paths or waterways.
  - Surround with earth berms. See EC-9, Earth Dikes and Drainage Swales.
  - Place in an area which will be paved.
- Storage of reactive, ignitable, or flammable liquids must comply with the fire codes of your area. Contact the local Fire Marshal to review site materials, quantities, and proposed storage area to determine specific requirements. See the Flammable and Combustible Liquid Code, NFPA30.
- An up to date inventory of materials delivered and stored onsite should be kept.
- Hazardous materials storage onsite should be minimized.
- Hazardous materials should be handled as infrequently as possible.
- During the rainy season, consider storing materials in a covered area. Store materials in secondary containments such as earthen dike, horse trough, or even a children's wading pool for non-reactive materials such as detergents, oil, grease, and paints. Small amounts of material may be secondarily contained in "bus boy" trays or concrete mixing trays.
- Do not store chemicals, drums, or bagged materials directly on the ground. Place these items on a pallet and, when possible, in secondary containment.

- If drums must be kept uncovered, store them at a slight angle to reduce ponding of rainwater on the lids to reduce corrosion. Domed plastic covers are inexpensive and snap to the top of drums, preventing water from collecting.
- Chemicals should be kept in their original labeled containers.
- Employees and subcontractors should be trained on the proper material delivery and storage practices.
- Employees trained in emergency spill cleanup procedures must be present when dangerous materials or liquid chemicals are unloaded.
- If significant residual materials remain on the ground after construction is complete, properly remove materials and any contaminated soil. See WM-7, Contaminated Soil Management. If the area is to be paved, pave as soon as materials are removed to stabilize the soil.

Material Storage Areas and Practices

- Liquids, petroleum products, and substances listed in 40 CFR Parts 110, 117, or 302 should be stored in approved containers and drums and should not be overfilled. Containers and drums should be placed in temporary containment facilities for storage.
- A temporary containment facility should provide for a spill containment volume able to contain precipitation from a 25 year storm event, plus the greater of 10% of the aggregate volume of all containers or 100% of the capacity of the largest container within its boundary, whichever is greater.
- A temporary containment facility should be impervious to the materials stored therein for a minimum contact time of 72 hours.
- A temporary containment facility should be maintained free of accumulated rainwater and spills. In the event of spills or leaks, accumulated rainwater and spills should be collected and placed into drums. These liquids should be handled as a hazardous waste unless testing determines them to be non-hazardous. All collected liquids or non-hazardous liquids should be sent to an approved disposal site.
- Sufficient separation should be provided between stored containers to allow for spill cleanup and emergency response access.
- Incompatible materials, such as chlorine and ammonia, should not be stored in the same temporary containment facility.
- Throughout the rainy season, each temporary containment facility should be covered during non-working days, prior to, and during rain events.
- Materials should be stored in their original containers and the original product labels should be maintained in place in a legible condition. Damaged or otherwise illegible labels should be replaced immediately.

- Bagged and boxed materials should be stored on pallets and should not be allowed to accumulate on the ground. To provide protection from wind and rain throughout the rainy season, bagged and boxed materials should be covered during non-working days and prior to and during rain events.
- Stockpiles should be protected in accordance with WM-3, Stockpile Management.
- Materials should be stored indoors within existing structures or sheds when available.
- Proper storage instructions should be posted at all times in an open and conspicuous location.
- An ample supply of appropriate spill clean up material should be kept near storage areas.
- Also see WM-6, Hazardous Waste Management, for storing of hazardous materials.

Material Delivery Practices

- Keep an accurate, up-to-date inventory of material delivered and stored onsite.
- Arrange for employees trained in emergency spill cleanup procedures to be present when dangerous materials or liquid chemicals are unloaded.

Spill Cleanup

- Contain and clean up any spill immediately.
- Properly remove and dispose of any hazardous materials or contaminated soil if significant residual materials remain on the ground after construction is complete. See WM-7, Contaminated Soil Management.
- See WM-4, Spill Prevention and Control, for spills of chemicals and/or hazardous materials.

Cost

- The largest cost of implementation may be in the construction of a materials storage area that is covered and provides secondary containment.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation.
- Keep an ample supply of spill cleanup materials near the storage area.
- Keep storage areas clean, well organized, and equipped with ample cleanup supplies as appropriate for the materials being stored.
- Repair or replace perimeter controls, containment structures, covers, and liners as needed to maintain proper function.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Coastal Nonpoint Pollution Control Program: Program Development and Approval Guidance, Working Group Working Paper; USEPA, April 1992.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities; Developing Pollution Prevention Plans and Best Management Practice, EPA 832-R-92005; USEPA, April 1992.

Material Use

WM-2

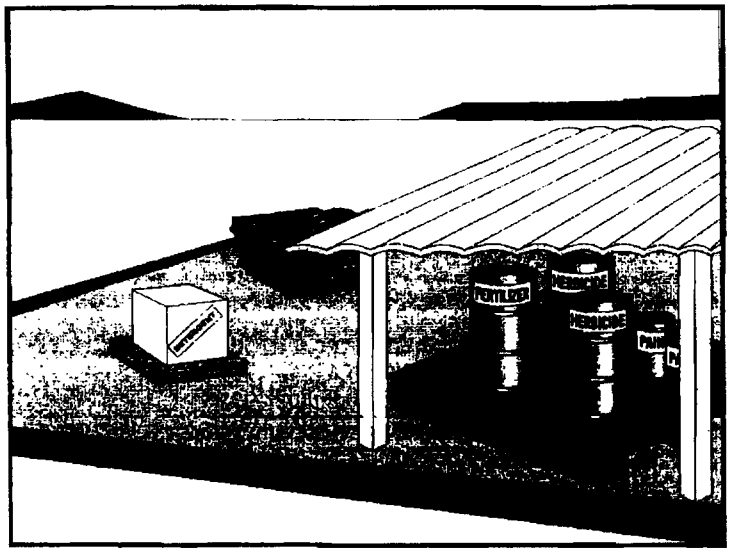

Objectives

EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	✓

Legend:

✓ **Primary Objective**

✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	✓
Trash	✓
Metals	✓
Bacteria	
Oil and Grease	✓
Organics	✓

Potential Alternatives

None

Description and Purpose

Prevent or reduce the discharge of pollutants to the storm drain system or watercourses from material use by using alternative products, minimizing hazardous material use onsite, and training employees and subcontractors.

Suitable Applications

This BMP is suitable for use at all construction projects. These procedures apply when the following materials are used or prepared onsite:

- Pesticides and herbicides
- Fertilizers
- Detergents
- Plaster
- Petroleum products such as fuel, oil, and grease
- Asphalt and other concrete components
- Other hazardous chemicals such as acids, lime, glues, adhesives, paints, solvents, and curing compounds
- Concrete compounds
- Other materials that may be detrimental if released to the environment

Limitations

Safer alternative building and construction products may not be available or suitable in every instance.

Implementation

The following steps should be taken to minimize risk:

- Minimize use of hazardous materials onsite.
- Follow manufacturer instructions regarding uses, protective equipment, ventilation, flammability, and mixing of chemicals.
- Train personnel who use pesticides. The California Department of Pesticide Regulation and county agricultural commissioners license pesticide dealers, certify pesticide applicators, and conduct onsite inspections.
- Do not over-apply fertilizers, herbicides, and pesticides. Prepare only the amount needed. Follow the recommended usage instructions. Over-application is expensive and environmentally harmful. Unless on steep slopes, till fertilizers into the soil rather than hydro seeding. Apply surface dressings in several smaller applications, as opposed to one large application, to allow time for infiltration and to avoid excess material being carried offsite by runoff. Do not apply these chemicals just before it rains.
- Train employees and subcontractors in proper material use.
- Supply Material Safety Data Sheets (MSDS) for all materials.
- Dispose of latex paint and paint cans, used brushes, rags, absorbent materials, and drop cloths, when thoroughly dry and are no longer hazardous, with other construction debris.
- Do not remove the original product label; it contains important safety and disposal information. Use the entire product before disposing of the container.
- Mix paint indoors or in a containment area. Never clean paintbrushes or rinse paint containers into a street, gutter, storm drain, or watercourse. Dispose of any paint thinners, residue, and sludge(s) that cannot be recycled, as hazardous waste.
- For water-based paint, clean brushes to the extent practicable, and rinse to a drain leading to a sanitary sewer where permitted, or into a concrete washout pit or temporary sediment trap. For oil-based paints, clean brushes to the extent practicable, and filter and reuse thinners and solvents.
- Use recycled and less hazardous products when practical. Recycle residual paints, solvents, non-treated lumber, and other materials.
- Use materials only where and when needed to complete the construction activity. Use safer alternative materials as much as possible. Reduce or eliminate use of hazardous materials onsite when practical.

- Require contractors to complete the "Report of Chemical Spray Forms" when spraying herbicides and pesticides.
- Keep an ample supply of spill clean up material near use areas. Train employees in spill clean up procedures.
- Avoid exposing applied materials to rainfall and runoff unless sufficient time has been allowed for them to dry.

Costs

All of the above are low cost measures.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and at two–week intervals in the non-rainy season to verify continued BMP implementation.
- Maintenance of this best management practice is minimal.
- Spot check employees and subcontractors throughout the job to ensure appropriate practices are being employed.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Coastal Nonpoint Pollution Control Program: Program Development and Approval Guidance, Working Group Working Paper; USEPA, April 1992.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities; Developing Pollution Prevention Plans and Best Management Practice, EPA 832-R-92005; USEPA, April 1992.

Stockpile Management WM-3

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	✓
Trash	✓
Metals	✓
Bacteria	
Oil and Grease	✓
Organics	✓

Potential Alternatives

None

Description and Purpose

Stockpile Management procedures and practices are designed to reduce or eliminate air and stormwater pollution from stockpiles of soil, paving materials such as portland cement concrete (PCC) rubble, asphalt concrete (AC), asphalt concrete rubble, aggregate base, aggregate sub base or pre-mixed aggregate, asphalt minder (so called "cold mix" asphalt), and pressure treated wood.

Suitable Applications

Implement in all projects that stockpile soil and other materials.

Limitations

None identified.

Implementation

Protection of stockpiles is a year-round requirement. To properly manage stockpiles:

- Locate stockpiles a minimum of 50 ft away from concentrated flows of stormwater, drainage courses, and inlets.
- Protect all stockpiles from stormwater runon using a temporary perimeter sediment barrier such as berms, dikes, fiber rolls, silt fences, sandbag, gravel bags, or straw bale barriers.

CASQA California Stormwater Quality Association

- Implement wind erosion control practices as appropriate on all stockpiled material. For specific information, see WE-1, Wind Erosion Control.
- Manage stockpiles of contaminated soil in accordance with WM-7, Contaminated Soil Management.
- Place bagged materials on pallets and under cover.

Protection of Non-Active Stockpiles

Non-active stockpiles of the identified materials should be protected further as follows:

Soil stockpiles

- During the rainy season, soil stockpiles should be covered or protected with soil stabilization measures and a temporary perimeter sediment barrier at all times.
- During the non-rainy season, soil stockpiles should be covered or protected with a temporary perimeter sediment barrier prior to the onset of precipitation.

Stockpiles of Portland cement concrete rubble, asphalt concrete, asphalt concrete rubble, aggregate base, or aggregate sub base

- During the rainy season, the stockpiles should be covered or protected with a temporary perimeter sediment barrier at all times.
- During the non-rainy season, the stockpiles should be covered or protected with a temporary perimeter sediment barrier prior to the onset of precipitation.

Stockpiles of "cold mix"

- During the rainy season, cold mix stockpiles should be placed on and covered with plastic or comparable material at all times.
- During the non-rainy season, cold mix stockpiles should be placed on and covered with plastic or comparable material prior to the onset of precipitation.

Stockpiles/Storage of pressure treated wood with copper, chromium, and arsenic or ammonical, copper, zinc, and arsenate

- During the rainy season, treated wood should be covered with plastic or comparable material at all times.
- During the non-rainy season, treated wood should be covered with plastic or comparable material at all times and cold mix stockpiles should be placed on and covered with plastic or comparable material prior to the onset of precipitation.

Protection of Active Stockpiles

Active stockpiles of the identified materials should be protected further as follows:

- All stockpiles should be protected with a temporary linear sediment barrier prior to the onset of precipitation.
- Stockpiles of "cold mix" should be placed on and covered with plastic or comparable material prior to the onset of precipitation.

Costs

All of the above are low cost measures.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation
- Repair and/or replace perimeter controls and covers as needed to keep them functioning properly.

References

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Spill Prevention and Control WM-4

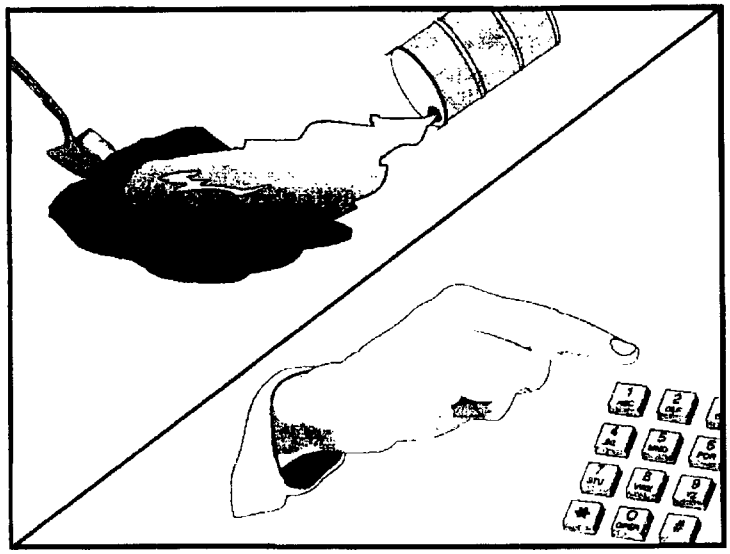

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	✓
Nutrients	✓
Trash	✓
Metals	✓
Bacteria	
Oil and Grease	✓
Organics	✓

Potential Alternatives

None

Description and Purpose

Prevent or reduce the discharge of pollutants to drainage systems or watercourses from leaks and spills by reducing the chance for spills, stopping the source of spills, containing and cleaning up spills, properly disposing of spill materials, and training employees.

This best management practice covers only spill prevention and control. However, WM-1, Materials Delivery and Storage, and WM-2, Material Use, also contain useful information, particularly on spill prevention. For information on wastes, see the waste management BMPs in this section.

Suitable Applications

This BMP is suitable for all construction projects. Spill control procedures are implemented anytime chemicals or hazardous substances are stored on the construction site, including the following materials:

- Soil stabilizers/binders
- Dust palliatives
- Herbicides
- Growth inhibitors
- Fertilizers
- Deicing/anti-icing chemicals

- Fuels
- Lubricants
- Other petroleum distillates

Limitations

- In some cases it may be necessary to use a private spill cleanup company.
- This BMP applies to spills caused by the contractor and subcontractors.
- Procedures and practices presented in this BMP are general. Contractor should identify appropriate practices for the specific materials used or stored onsite

Implementation

The following steps will help reduce the stormwater impacts of leaks and spills:

Education

- Be aware that different materials pollute in different amounts. Make sure that each employee knows what a "significant spill" is for each material they use, and what is the appropriate response for "significant" and "insignificant" spills.
- Educate employees and subcontractors on potential dangers to humans and the environment from spills and leaks.
- Hold regular meetings to discuss and reinforce appropriate disposal procedures (incorporate into regular safety meetings).
- Establish a continuing education program to indoctrinate new employees.
- Have contractor's superintendent or representative oversee and enforce proper spill prevention and control measures.

General Measures

- To the extent that the work can be accomplished safely, spills of oil, petroleum products, substances listed under 40 CFR parts 110,117, and 302, and sanitary and septic wastes should be contained and cleaned up immediately.
- Store hazardous materials and wastes in covered containers and protect from vandalism.
- Place a stockpile of spill cleanup materials where it will be readily accessible.
- Train employees in spill prevention and cleanup.
- Designate responsible individuals to oversee and enforce control measures.
- Spills should be covered and protected from stormwater runon during rainfall to the extent that it doesn't compromise clean up activities.
- Do not bury or wash spills with water.

- Store and dispose of used clean up materials, contaminated materials, and recovered spill material that is no longer suitable for the intended purpose in conformance with the provisions in applicable BMPs.
- Do not allow water used for cleaning and decontamination to enter storm drains or watercourses. Collect and dispose of contaminated water in accordance with WM-10, Liquid Waste Management.
- Contain water overflow or minor water spillage and do not allow it to discharge into drainage facilities or watercourses.
- Place proper storage, cleanup, and spill reporting instructions for hazardous materials stored or used on the project site in an open, conspicuous, and accessible location.
- Keep waste storage areas clean, well organized, and equipped with ample cleanup supplies as appropriate for the materials being stored. Perimeter controls, containment structures, covers, and liners should be repaired or replaced as needed to maintain proper function.

Cleanup

- Clean up leaks and spills immediately.
- Use a rag for small spills on paved surfaces, a damp mop for general cleanup, and absorbent material for larger spills. If the spilled material is hazardous, then the used cleanup materials are also hazardous and must be sent to either a certified laundry (rags) or disposed of as hazardous waste.
- Never hose down or bury dry material spills. Clean up as much of the material as possible and dispose of properly. See the waste management BMPs in this section for specific information.

Minor Spills

- Minor spills typically involve small quantities of oil, gasoline, paint, etc. which can be controlled by the first responder at the discovery of the spill.
- Use absorbent materials on small spills rather than hosing down or burying the spill.
- Absorbent materials should be promptly removed and disposed of properly.
- Follow the practice below for a minor spill:
  - Contain the spread of the spill.
  - Recover spilled materials.
  - Clean the contaminated area and properly dispose of contaminated materials.

Semi-Significant Spills

- Semi-significant spills still can be controlled by the first responder along with the aid of other personnel such as laborers and the foreman, etc. This response may require the cessation of all other activities.

- Spills should be cleaned up immediately:
  - Contain spread of the spill.
  - Notify the project foreman immediately.
  - If the spill occurs on paved or impermeable surfaces, clean up using "dry" methods (absorbent materials, cat litter and/or rags). Contain the spill by encircling with absorbent materials and do not let the spill spread widely.
  - If the spill occurs in dirt areas, immediately contain the spill by constructing an earthen dike. Dig up and properly dispose of contaminated soil.
  - If the spill occurs during rain, cover spill with tarps or other material to prevent contaminating runoff.

Significant/Hazardous Spills

- For significant or hazardous spills that cannot be controlled by personnel in the immediate vicinity, the following steps should be taken:
  - Notify the local emergency response by dialing 911. In addition to 911, the contractor will notify the proper county officials. It is the contractor's responsibility to have all emergency phone numbers at the construction site.
  - Notify the Governor's Office of Emergency Services Warning Center, (916) 845-8911.
  - For spills of federal reportable quantities, in conformance with the requirements in 40 CFR parts 110,119, and 302, the contractor should notify the National Response Center at (800) 424-8802.
  - Notification should first be made by telephone and followed up with a written report.
  - The services of a spills contractor or a Haz-Mat team should be obtained immediately. Construction personnel should not attempt to clean up until the appropriate and qualified staffs have arrived at the job site.
  - Other agencies which may need to be consulted include, but are not limited to, the Fire Department, the Public Works Department, the Coast Guard, the Highway Patrol, the City/County Police Department, Department of Toxic Substances, California Division of Oil and Gas, Cal/OSHA, etc.

Reporting

- Report significant spills to local agencies, such as the Fire Department; they can assist in cleanup.
- Federal regulations require that any significant oil spill into a water body or onto an adjoining shoreline be reported to the National Response Center (NRC) at 800-424-8802 (24 hours).

Use the following measures related to specific activities:

Vehicle and Equipment Maintenance

- If maintenance must occur onsite, use a designated area and a secondary containment, located away from drainage courses, to prevent the runon of stormwater and the runoff of spills.
- Regularly inspect onsite vehicles and equipment for leaks and repair immediately
- Check incoming vehicles and equipment (including delivery trucks, and employee and subcontractor vehicles) for leaking oil and fluids. Do not allow leaking vehicles or equipment onsite.
- Always use secondary containment, such as a drain pan or drop cloth, to catch spills or leaks when removing or changing fluids.
- Place drip pans or absorbent materials under paving equipment when not in use.
- Use absorbent materials on small spills rather than hosing down or burying the spill. Remove the absorbent materials promptly aud dispose of properly.
- Promptly transfer used fluids to the proper waste or recycling drums. Don't leave full drip pans or other open containers lying around
- Oil filters disposed of in trashcans or dumpsters can leak oil and pollute stormwater. Place the oil filter in a funnel over a waste oil-recycling drum to drain excess oil before disposal. Oil filters can also be recycled. Ask the oil supplier or recycler about recycling oil filters.
- Store cracked batteries in a non-leaking secondary container. Do this with all cracked batteries even if you think all the acid has drained out. If you drop a battery, treat it as if it is cracked. Put it into the containment area until you are sure it is not leaking.

Vehicle and Equipment Fueling

- If fueling must occur onsite, use designate areas, located away from drainage courses, to prevent the runon of stormwater and the runoff of spills.
- Discourage "topping off" of fuel tanks.
- Always use secondary containment, such as a drain pan, when fueling to catch spills/ leaks.

Costs

Prevention of leaks and spills is inexpensive. Treatment and/ or disposal of contaminated soil or water can be quite expensive.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect BMPs subject to non-stormwater discharge daily while non-stormwater discharges occur.

- Keep ample supplies of spill control and cleanup materials onsite, near storage, unloading, and maintenance areas.
- Update your spill prevention and control plan and stock cleanup materials as changes occur in the types of chemicals onsite.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities; Developing Pollution Prevention Plans and Best Management Practice, EPA 832-R-92005; USEPA, April 1992.

Solid Waste Management WM-5

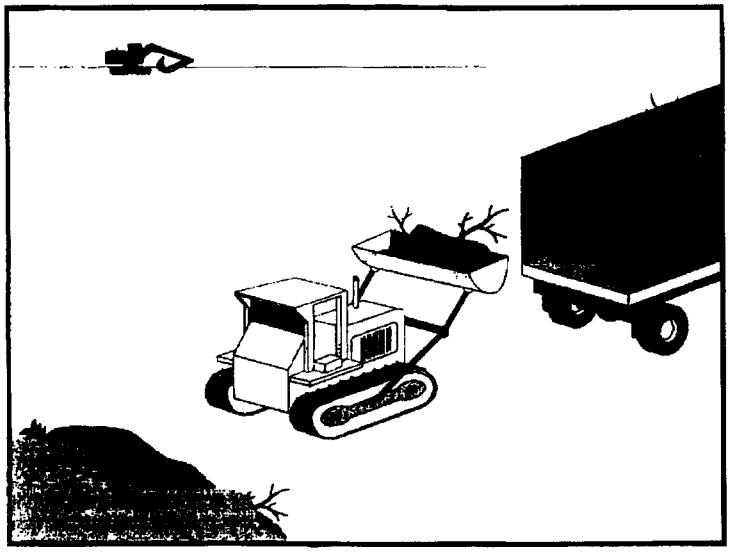

Objectives

EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	✓
Trash	✓
Metals	✓
Bacteria	
Oil and Grease	✓
Organics	✓

Potential Alternatives

None

Description and Purpose

Solid waste management procedures and practices are designed to prevent or reduce the discharge of pollutants to stormwater from solid or construction waste by providing designated waste collection areas and containers, arranging for regular disposal, and training employees and subcontractors.

Suitable Applications

This BMP is suitable for construction sites where the following wastes are generated or stored:

- Solid waste generated from trees and shrubs removed during land clearing, demolition of existing structures (rubble), and building construction
- Packaging materials including wood, paper, and plastic
- Scrap or surplus building materials including scrap metals, rubber, plastic, glass pieces and masonry products
- Domestic wastes including food containers such as beverage cans, coffee cups, paper bags, plastic wrappers, and cigarettes
- Construction wastes including brick, mortar, timber, steel and metal scraps, pipe and electrical cuttings, non-hazardous equipment parts, styrofoam and other materials used to transport and package construction materials

- Highway planting wastes, including vegetative material, plant containers, and packaging materials

Limitations

Temporary stockpiling of certain construction wastes may not necessitate stringent drainage related controls during the non-rainy season or in desert areas with low rainfall.

Implementation

The following steps will help keep a clean site and reduce stormwater pollution:

- Select designated waste collection areas onsite.
- Inform trash-hauling contractors that you will accept only watertight dumpsters for onsite use. Inspect dumpsters for leaks and repair any dumpster that is not watertight.
- Locate containers in a covered area or in a secondary containment.
- Provide an adequate number of containers with lids or covers that can be placed over the container to keep rain out or to prevent loss of wastes when it is windy.
- Plan for additional containers and more frequent pickup during the demolition phase of construction.
- Collect site trash daily, especially during rainy and windy conditions.
- Remove this solid waste promptly since erosion and sediment control devices tend to collect litter.
- Make sure that toxic liquid wastes (used oils, solvents, and paints) and chemicals (acids, pesticides, additives, curing compounds) are not disposed of in dumpsters designated for construction debris.
- Do not hose out dumpsters on the construction site. Leave dumpster cleaning to the trash hauling contractor.
- Arrange for regular waste collection before containers overflow.
- Clean up immediately if a container does spill.
- Make sure that construction waste is collected, removed, and disposed of only at authorized disposal areas.

Education

- Have the contractor's superintendent or representative oversee and enforce proper solid waste management procedures and practices.
- Instruct employees and subcontractors on identification of solid waste and hazardous waste.
- Educate employees and subcontractors on solid waste storage and disposal procedures.

- Hold regular meetings to discuss and reinforce disposal procedures (incorporate into regular safety meetings).
- Require that employees and subcontractors follow solid waste handling and storage procedures.
- Prohibit littering by employees, subcontractors, and visitors.
- Minimize production of solid waste materials wherever possible.

Collection, Storage, and Disposal

- Littering on the project site should be prohibited.
- To prevent clogging of the storm drainage system, litter and debris removal from drainage grates, trash racks, and ditch lines should be a priority.
- Trash receptacles should be provided in the contractor's yard, field trailer areas, and at locations where workers congregate for lunch and break periods.
- Litter from work areas within the construction limits of the project site should be collected and placed in watertight dumpsters at least weekly, regardless of whether the litter was generated by the contractor, the public, or others. Collected litter and debris should not be placed in or next to drain inlets, stormwater drainage systems, or watercourses.
- Dumpsters of sufficient size and number should be provided to contain the solid waste generated by the project.
- Full dumpsters should be removed from the project site and the contents should be disposed of by the trash hauling contractor.
- Construction debris and waste should be removed from the site biweekly or more frequently as needed.
- Construction material visible to the public should be stored or stacked in an orderly manner.
- Stormwater runon should be prevented from contacting stored solid waste through the use of berms, dikes, or other temporary diversion structures or through the use of measures to elevate waste from site surfaces.
- Solid waste storage areas should be located at least 50 ft from drainage facilities and watercourses and should not be located in areas prone to flooding or ponding.
- Except during fair weather, construction and highway planting waste not stored in watertight dumpsters should be securely covered from wind and rain by covering the waste with tarps or plastic.
- Segregate potentially hazardous waste from non-hazardous construction site waste.
- Make sure that toxic liquid wastes (used oils, solvents, and paints) and chemicals (acids, pesticides, additives, curing compounds) are not disposed of in dumpsters designated for construction debris.

- For disposal of hazardous waste, see WM-6, Hazardous Waste Management. Have hazardous waste hauled to an appropriate disposal and/or recycling facility.
- Salvage or recycle useful vegetation debris, packaging and surplus building materials when practical. For example, trees and shrubs from land clearing can be used as a brush barrier, or converted into wood chips, then used as mulch on graded areas. Wood pallets, cardboard boxes, and construction scraps can also be recycled.

Costs

All of the above are low cost measures.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation.
- Inspect BMPs subject to non-stormwater discharge daily while non-stormwater discharges occur
- Inspect construction waste area regularly.
- Arrange for regular waste collection.

References

Processes, Procedures and Methods to Control Pollution Resulting from All Construction Activity, 430/9-73-007, USEPA, 1973.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities; Developing Pollution Prevention Plans and Best Management Practice, EPA 832-R-92005; USEPA, April 1992.

Concrete Waste Management WM-8

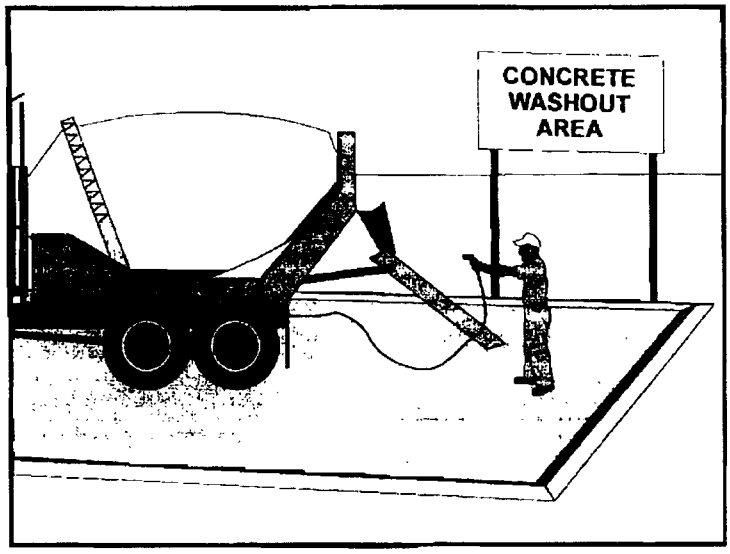

Objectives

EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents

Sediment	✓
Nutrients	
Trash	
Metals	✓
Bacteria	
Oil and Grease	
Organics	

Potential Alternatives

None

Description and Purpose

Prevent or reduce the discharge of pollutants to stormwater from concrete waste by conducting washout offsite, performing onsite washout in a designated area, and training employee and subcontractors.

Suitable Applications

Concrete waste management procedures and practices are implemented on construction projects where:

- Concrete is used as a construction material or where concrete dust and debris result form demolition activities
- Slurries containing portland cement concrete (PCC) or asphalt concrete (AC) are generated, such as from saw cutting, coring, grinding, grooving, and hydro-concrete demolition
- Concrete trucks and other concrete-coated equipment are washed onsite
- Mortar-mixing stations exist
- See also NS-8, Vehicle and Equipment Cleaning

Limitations

- Offsite washout of concrete wastes may not always be possible.

CASQA California Stormwater Quality Association

Implementation

The following steps will help reduce stormwater pollution from concrete wastes:

- Discuss the concrete management techniques described in this BMP (such as handling of concrete waste and washout) with the ready-mix concrete supplier before any deliveries are made.
- Incorporate requirements for concrete waste management into material supplier and subcontractor agreements.
- Store dry and wet materials under cover, away from drainage areas.
- Avoid mixing excess amounts of fresh concrete.
- Perform washout of concrete trucks offsite or in designated areas only.
- Do not wash out concrete trucks into storm drains, open ditches, streets, or streams.
- Do not allow excess concrete to be dumped onsite, except in designated areas.
- For onsite washout:
  - Locate washout area at least 50 feet from storm drains, open ditches, or water bodies. Do not allow runoff from this area by constructing a temporary pit or bermed area large enough for liquid and solid waste.
  - Wash out wastes into the temporary pit where the concrete can set, be broken up, and then disposed properly.
- Avoid creating runoff by draining water to a bermed or level area when washing concrete to remove fine particles and expose the aggregate.
- Do not wash sweepings from exposed aggregate concrete into the street or storm drain. Collect and return sweepings to aggregate base stockpile or dispose in the trash.

Education

- Educate employees, subcontractors, and suppliers on the concrete waste management techniques described herein.
- Arrange for contractor's superintendent or representative to oversee and enforce concrete waste management procedures.

Concrete Slurry Wastes

- PCC and AC waste should not be allowed to enter storm drains or watercourses.
- PCC and AC waste should be collected and disposed of or placed in a temporary concrete washout facility.
- A sign should be installed adjacent to each temporary concrete washout facility to inform concrete equipment operators to utilize the proper facilities.

- Below grade concrete washout facilities are typical. Above grade facilities are used if excavation is not practical.
- A foreman or construction supervisor should monitor onsite concrete working tasks, such as saw cutting, coring, grinding and grooving to ensure proper methods are implemented.
- Saw-cut PCC slurry should not be allowed to enter storm drains or watercourses. Residue from grinding operations should be picked up by means of a vacuum attachment to the grinding machine. Saw cutting residue should not be allowed to flow across the pavement and should not be left on the surface of the pavement. See also NS-3, Paving and Grinding Operations; and WM-10, Liquid Waste Management.
- Slurry residue should be vacuumed and disposed in a temporary pit (as described in OnSite Temporary Concrete Washout Facility, Concrete Transit Truck Washout Procedures, below) and allowed to dry. Dispose of dry slurry residue in accordance with WM-5, Solid Waste Management.

Onsite Temporary Concrete Washout Facility, Transit Truck Washout Procedures

- Temporary concrete washout facilities should be located a minimum of 50 ft from storm drain inlets, open drainage facilities, and watercourses. Each facility should be located away from construction traffic or access areas to prevent disturbance or tracking.
- A sign should be installed adjacent to each washout facility to inform concrete equipment operators to utilize the proper facilities.
- Temporary concrete washout facilities should be constructed above grade or below grade at the option of the contractor. Temporary concrete washout facilities should be constructed and maintained in sufficient quantity and size to contain all liquid and concrete waste generated by washout operations.
- Temporary washout facilities should have a temporary pit or bermed areas of sufficient volume to completely contain all liquid and waste concrete materials generated during washout procedures.
- Washout of concrete trucks should be performed in designated areas only.
- Only concrete from mixer truck chutes should be washed into concrete wash out.
- Concrete washout from concrete pumper bins can be washed into concrete pumper trucks and discharged into designated washout area or properly disposed of offsite.
- Once concrete wastes are washed into the designated area and allowed to harden, the concrete should be broken up, removed, and disposed of per WM-5, Solid Waste Management. Dispose of hardened concrete on a regular basis.
- Temporary Concrete Washout Facility (Type Above Grade)
  - Temporary concrete washout facility (type above grade) should be constructed as shown on the details at the end of this BMP, with a recommended minimum length and

minimum width of 10 ft, but with sufficient quantity and volume to contain all liquid and concrete waste generated by washout operations.

- Straw bales, wood stakes, and sandbag materials should conform to the provisions in SE-9, Straw Bale Barrier.
- Plastic lining material should be a minimum of 10 mil in polyethylene sheeting and should be free of holes, tears, or other defects that compromise the impermeability of the material.

- Temporary Concrete Washout Facility (Type Below Grade)
  - Temporary concrete washout facilities (type below grade) should be constructed as shown on the details at the end of this BMP, with a recommended minimum length and minimum width of 10 ft. The quantity and volume should be sufficient to contain all liquid and concrete waste generated by washout operations.
  - Lath and flagging should be commercial type.
  - Plastic lining material should be a minimum of 10 mil polyethylene sheeting and should be free of holes, tears, or other defects that compromise the impermeability of the material.

Removal of Temporary Concrete Washout Facilities

- When temporary concrete washout facilities are no longer required for the work, the hardened concrete should be removed and disposed of. Materials used to construct temporary concrete washout facilities should be removed from the site of the work and disposed of.
- Holes, depressions or other ground disturbance caused by the removal of the temporary concrete washout facilities should be backfilled and repaired.

Costs

All of the above are low cost measures.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation.
- Temporary concrete washout facilities should be maintained to provide adequate holding capacity with a minimum freeboard of 4 in. for above grade facilities and 12 in. for below grade facilities. Maintaining temporary concrete washout facilities should include removing and disposiug of hardened concrete and returning the facilities to a functional condition. Hardened concrete materials should be removed and disposed of.
- Washout facilities must be cleaned, or new facilities must be constructed and ready for use once the washout is 75% full.

References

Blueprint for a Clean Bay: Best Management Practices to Prevent Stormwater Pollution from Construction Related Activities; Santa Clara Valley Nonpoint Source Pollution Control Program, 1995.

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities; Developing Pollution Prevention Plans and Best Management Practice, EPA 832-R-92005; USEPA, April 1992.

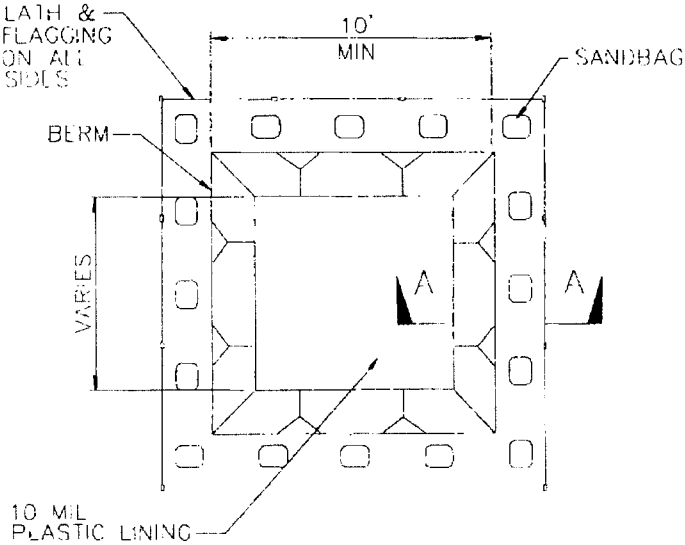

PLAN
NOT TO SCALE
TYPE "BELOW GRADE"

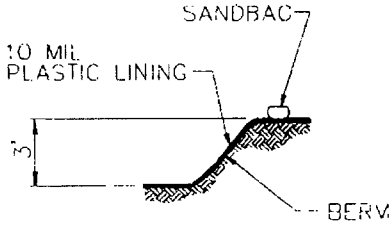

SECTION A A
NOT TO SCALE

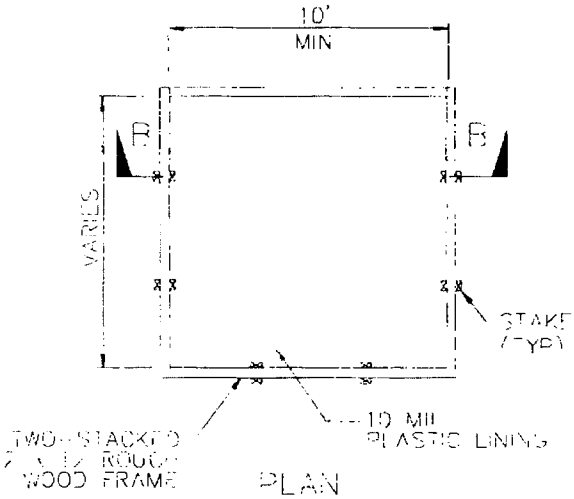

PLAN
NOT TO SCALE
TYPE "ABOVE GRADE"

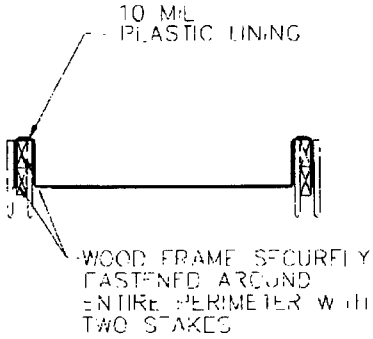

SECTION B B
NOT TO SCALE

NOTES

1. ACTUAL LAYOUT DETERMINED IN FIELD.
2. THE CONCRETE WASHOUT SIGN SHALL BE INSTALLED WITHIN 30 FT. OF THE TEMPORARY CONCRETE WASHOUT FACILITY.

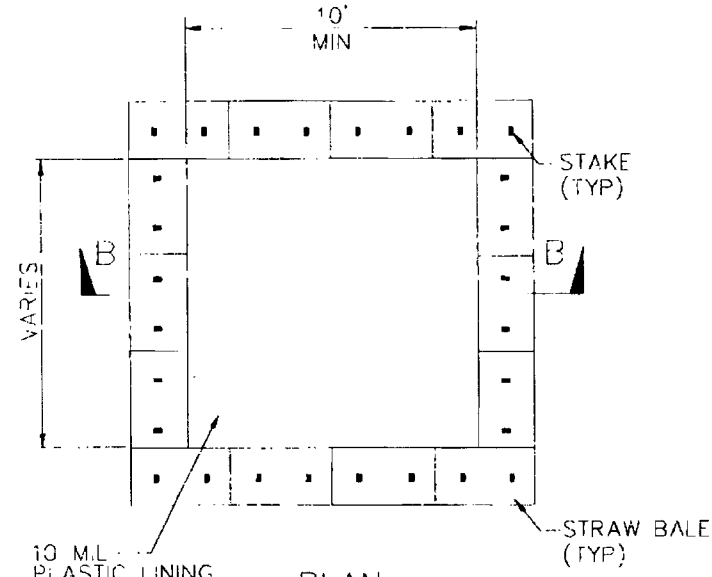

PLAN
NOT TO SCALE
TYPE "ABOVE GRADE"
WITH STRAW BALES

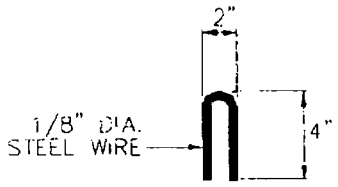

STAPLE DETAIL

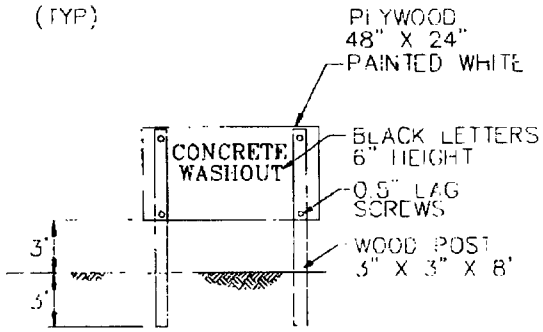

CONCRETE WASHOUT
SIGN DETAIL
(OR EQUIVALENT)

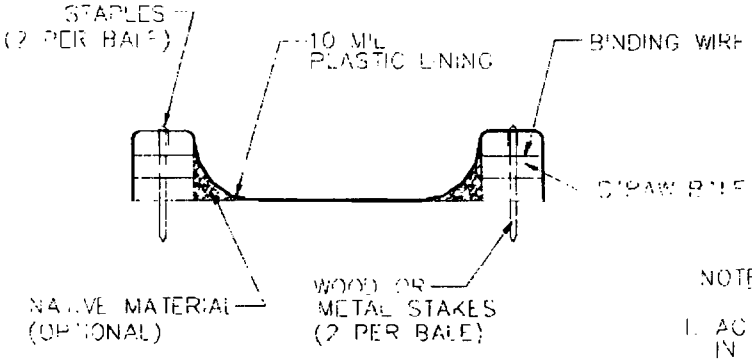

SECTION B–B
NOT TO SCALE

NOTES

1. ACTUAL LAYOUT DETERMINED IN FIELD.
2. THE CONCRETE WASHOUT SIGN SHALL BE INSTALLED WITHIN 50 FT OF THE TEMPORARY CONCRETE WASHOUT FACILITY

Sanitary/Septic Waste Management WM-9

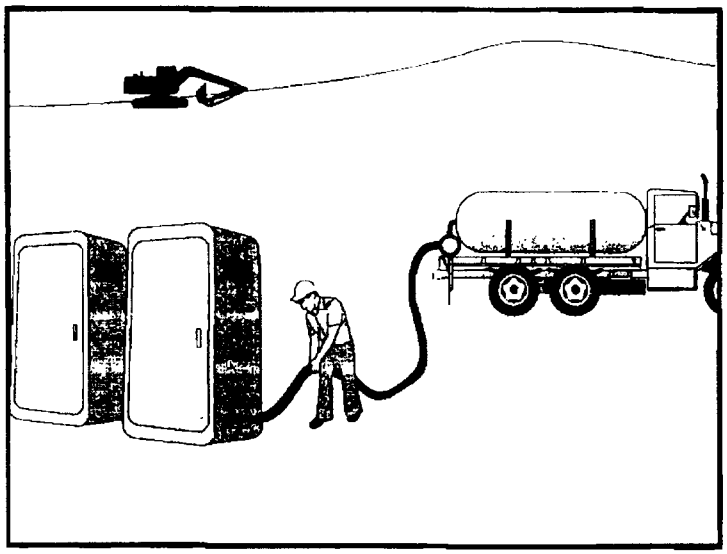

Objectives		
EC	Erosion Control	
SE	Sediment Control	
TC	Tracking Control	
WE	Wind Erosion Control	
NS	Non-Stormwater Management Control	
WM	Waste Management and Materials Pollution Control	✓

Legend:
✓ **Primary Objective**
✓ **Secondary Objective**

Targeted Constituents	
Sediment	
Nutrients	✓
Trash	✓
Metals	
Bacteria	✓
Oil and Grease	
Organics	✓

Potential Alternatives

None

Description and Purpose

Proper sanitary and septic waste management prevent the discharge of pollutants to stormwater from sanitary and septic waste by providing convenient, well-maintained facilities, and arranging for regular service and disposal.

Suitable Applications

Sanitary septic waste management practices are suitable for use at all construction sites that use temporary or portable sanitary and septic waste systems.

Limitations

None identified.

Implementation

Sanitary or septic wastes should be treated or disposed of in accordance with state and local requirements. In many cases, one contract with a local facility supplier will be all that it takes to make sure sanitary wastes are properly disposed.

Storage and Disposal Procedures

- Temporary sanitary facilities should be located away from drainage facilities, watercourses, and from traffic circulation. When subjected to high winds or risk of high winds, temporary sanitary facilities should be secured to prevent overturning.
- Wastewater should not be discharged or buried within the project site.

CASQA California Stormwater Quality Association

WM-9 Sanitary/Septic Waste Management

- Sanitary and septic systems that discharge directly into sanitary sewer systems, where permissible, should comply with the local health agency, city, county, and sewer district requirements.
- Only reputable, licensed sanitary and septic waste haulers should be used.
- Sanitary facilities should be located in a convenient location.
- Untreated raw wastewater should never be discharged or buried.
- Temporary septic systems should treat wastes to appropriate levels before discharging.
- If using an onsite disposal system (OSDS), such as a septic system, local health agency requirements must be followed.
- Temporary sanitary facilities that discharge to the sanitary sewer system should be properly connected to avoid illicit discharges.
- Sanitary and septic facilities should be maintained in good working order by a licensed service.
- Regular waste collection by a licensed hauler should be arranged before facilities overflow.

Education

- Educate employees, subcontractors, and suppliers on sanitary and septic waste storage and disposal procedures.
- Educate employees, subcontractors, and suppliers of potential dangers to humans and the environment from sanitary and septic wastes.
- Instruct employees, subcontractors, and suppliers in identification of sanitary and septic waste.
- Hold regular meetings to discuss and reinforce disposal procedures (incorporate into regular safety meetings).
- Establish a continuing education program to indoctrinate new employees.

Costs

All of the above are low cost measures.

Inspection and Maintenance

- Inspect and verify that activity–based BMPs are in place prior to the commencement of associated activities. While activities associated with the BMP are under way, inspect weekly during the rainy season and of two-week intervals in the non-rainy season to verify continued BMP implementation.
- Arrange for regular waste collection.
- If high winds are expected, portable sanitary facilities must be secured with spikes or weighed down to prevent over turning.

References

Stormwater Quality Handbooks - Construction Site Best Management Practices (BMPs) Manual, State of California Department of Transportation (Caltrans), November 2000.

Stormwater Management for Construction Activities; Developing Pollution Prevention Plans and Best Management Practice, EPA 832-R-92005; USEPA, April 1992.

ATTACHMENT R

Sampling Activity Log

RAIN EVENT GENERAL INFORMATION				
Project Name	PERRIS VALLEY BIG LEAGUE DREAMS			
Project Number	NEC TRUMBLE ROAD AND MAPES ROAD			
Contractor				
Sampler's Name				
Signature				
Date of Sampling				
Season (Check Applicable)	❒ Rainy		❒ Non-Rainy	
Storm Data	Storm Start Date & Time:		Storm Duration (hrs):	
	Time elapsed since last storm (Circle Applicable Units)	Min. Hr. Days	Approximate Rainfall Amount (inches)	

For rainfall information: http://cdec.water.ca.gov/weather.html or http://www.wrh.noaa.gov/wrhq/nwspage.html

SAMPLE LOG		
Sample Identification	**Sample Location**	**Sample Collection Date and Time**

Specific sample locations descriptions may include: 100 ft upstream from discharge at eastern boundary, runoff from northern waste storage area, downgradient of inlet located near the intersection of A Street and B avenue, etc.

FIELD ANALYSIS		
❑Yes	❑ No	
Sample Identification	**Test**	**Result**

ATTACHMENT S

Pollutant Testing Guidance Table

Attachment S
Pollutant Testing Guidance Table [1]

Category	Construction Site Material	Visually Observable?	Pollutant Indicators [2]	Suggested Analyses Field [3]	Laboratory
Asphalt Products	Hot Asphalt	Yes - Rainbow Surface or Brown Suspension	Visually Observable - No Testing Required		
	Asphalt Emulsion				
	Liquid Asphalt (tack coat)				
	Cold Mix				
	Crumb Rubber	Yes – Black, solid material	Visually Observable - No Testing Required		
	Asphalt Concrete (Any Type)	Yes - Rainbow Surface or Brown Suspension	Visually Observable - No Testing Required		
Cleaning Products	Acids	No	**pH** Acidity Anions (acetic acid, phosphoric acid, sulfuric acid, nitric acid, hydrogen chloride)	pH Meter Acidity Test Kit	EPA 150.1 (pH)
					SM 2310B (Acidity)
					EPA 300.0 (Anion)
	Bleaches	No	Residual Chlorine	Chlorine	SM 4500-CL G (Res. Chlorine)
	Detergents	Yes - Foam	Visually Observable - No Testing Required		
	TSP	No	*(a)* Phosphate	Phosphate	EPA 365.3 (Phosphate)
	Solvents	No	**VOC**	None	EPA 601/602 or EPA 624 (VOC)
			SVOC	None	EPA 625 (SVOC)

Attachment S
Pollutant Testing Guidance Table [1]

Category	Construction Site Material	Visually Observable?	Pollutant Indicators [2]	Suggested Analyses Field [3]	Laboratory
Portland Concrete Cement & Masonry Products	Portland Cement (PCC)	Yes - Milky Liquid	Visually Observable - No Testing Required		
	Masonry products	No	**pH**	pH Meter Alkalinity or Acidity Test Kit	EPA 150.1 (pH)
			Alkalinity		SM 2320 (Alkalinity)
	Sealant (Methyl Methacrylate - MMA)	No	Methyl Methacrylate	None	EPA 625 (SVOC)
			Cobalt		EPA 200.8 (Metal)
			Zinc		
	Incinerator Bottom Ash Bottom Ash Steel Slag Foundry Sand Fly Ash Municipal Solid Waste	No	**Aluminum** **Calcium** **Vanadium** **Zinc**	Calcium Test	EPA 200.8 (Metal) EPA 200.7 (Calcium)
	Mortar	Yes - Milky Liquid	Visually Observable - No Testing Required		
	Concrete Rinse Water	Yes - Milky Liquid	Visually Observable - No Testing Required		
	Non-Pigmented Curing Compounds	No	Acidity	pH Meter Alkalinity or Acidity Test Kit	SM 2310B (Acidity)
			Alkalinity		SM 2320 (Alkalinity)
			pH		EPA 150.1 (pH)
			VOC		EPA 601/602 or EPA 624 (VOC)
			SVOC		EPA 625 (SVOC)

Attachment S
Pollutant Testing Guidance Table [1]

Category	Construction Site Material	Visually Observable?	Pollutant Indicators [2]	Suggested Analyses Field [3]	Laboratory
Landscaping and Other Products	Aluminum Sulfate	No	Aluminum	TDS Meter Sulfate	EPA 200.8 (Metal)
			TDS		EPA 160.1 (TDS)
			Sulfate		EPA 300.0 (Sulfate)
	Sulfur-Elemental	No	Sulfate	Sulfate	EPA 300.0 (Sulfate)
	Fertilizers-Inorganic [4]	No	Nitrate	Nitrate	EPA 300.0 (Nitrate)
			Phosphate	Phosphate	EPA 365.3 (Phosphate)
			Organic Nitrogen	None	EPA 351.3 (TKN)
			Potassium	None	EPA 200.8 (Metal)
	Fertilizers-Organic	No	TOC	Nitrate	EPA 415.1 (TOC)
			Nitrate		EPA 300.0 (Nitrate)
			Organic Nitrogen		EPA 351.3 (TKN)
			COD		EPA 410.4 (COD)
	Natural Earth (Sand, Gravel, and Topsoil)	Yes - Cloudiness and turbidity	Visually Observable - No Testing Required		
	Herbicide	No	Herbicide	None	Check lab for specific herbicide or pesticide
	Pesticide		**Pesticide**		
	Lime		Alkalinity	pH Meter Alkalinity or Acidity Test Kit	SM 2320 (Alkalinity)
			pH		EPA 150.1 (pH)

Attachment S
Pollutant Testing Guidance Table [1]

Category	Construction Site Material	Visually Observable?	Pollutant Indicators [2]	Suggested Analyses Field [3]	Laboratory
Painting Products	Paint	Yes	Visually Observable - No Testing Required		
	Paint Strippers	No	VOC	None	EPA 601/602 or EPA 624 (VOC)
			SVOC	None	EPA 625 (SVOC)
	Resins	No	COD	None	EPA 410.4 (COD)
			SVOC		EPA 625 (SVOC)
	Sealants	No	COD	None	EPA 410.4 (COD)
	Solvents	No	COD	None	EPA 410.4 (COD)
			VOC		EPA 601/602 or EPA 624 (VOC)
			SVOC		EPA 625 (SVOC)
	Lacquers, Varnish, Enamels, and Turpentine	No	COD	None	EPA 410.4 (COD)
			VOC		EPA 601/602 or EPA 624 (VOC)
			SVOC		EPA 625 (SVOC)
	Thinners	No	VOC	None	EPA 601/602 or EPA 624 (VOC)
			COD		EPA 410.4 (COD)
Portable Toilet Waste Products	Portable Toilet Waste	Yes	Visually Observable - No Testing Required		

Attachment S
Pollutant Testing Guidance Table [1]

Category	Construction Site Material	Visually Observable?	Pollutant Indicators [2]	Suggested Analyses Field [3]	Laboratory
Contaminated Soil [5]	Aerially Deposited Lead[3]	No	*(b)* Lead	None	EPA 200.8 (Metal)
	Petroleum	Yes – Rainbow Surface Sheen and Odor	Visually Observable - No Testing Required		
	Other	No	Contaminant Specific	Contaminant Specific	Contaminant Specific
Line Flushing Products	Chlorinated Water	No	Total chlorine	Chlorine	SM 4500-CL G (Res. Chlorine)
Adhesives	Adhesives	No	COD	None	EPA 410.4 (COD)
			Phenols	Phenol	EPA 420.1 (Phenol)
			SVOC	None	EPA 625 (SVOC)
Dust Palliative Products	Salts (Magnesium Chloride, Calcium Chloride, and Natural Brines)	No	Chloride	Chloride	EPA 300.0 (Chloride)
			TDS	TDS Meter	EPA 160.1 (TDS)
			Cations (Sodium, Magnesium, Calcium)	None	EPA 200.7 (Cations)
Vehicle	Antifreeze and Other Vehicle Fluids	Yes - Colored Liquid	Visually Observable - No Testing Required		
	Batteries	No	Sulfuric Acid	None	EPA 300.0 (Sulfate)
			Lead	None	EPA 200.8 (Metal)
			pH	pH Meter Alkalinity or Acidity Test Kit	EPA 150.1 (pH)

Attachment S
Pollutant Testing Guidance Table [1]

Category	Construction Site Material	Visually Observable?	Pollutant Indicators [2]	Suggested Analyses Field [3]	Laboratory
	Fuels, Oils, Lubricants	Yes - Rainbow Surface Sheen and Odor	Visually Observable - No Testing Required		
Soil Amendment/ Stabilization Products	Polymer/Copolymer [6, 7]	No	Organic Nitrogen	None	EPA 351.3 (TKN)
			BOD	None	EPA 405.1 (BOD)
			COD	None	EPA 410.4 (COD)
			DOC	None	EPA 415.1 (DOC)
			Nitrate	Nitrate	EPA 300.0 (Nitrate)
			Sulfate	Sulfate	EPA 300.0 (Sulfate)
			Nickel	None	EPA 200.8 (Metal)
	Straw/Mulch	Yes - Solids	Visually Observable - No Testing Required		
	Lignin Sulfonate	No	Alkalinity	Alkalinity	SM 2320 (Alkalinity)
			TDS	TDS Meter	EPA 160.1 (TDS)
	Psyllium	No	COD	None	EPA 410.4 (COD)
			TOC		EPA 415.1 (TOC)
	Guar/Plant Gums	No	COD	None	EPA 410.4 (COD)
			TOC		EPA 415.1 (TOC)
			Nickel		EPA 200.8 (Metal)
	Gypsum	No	pH	pH Meter Alkalinity or Acidity Test Kit	EPA 150.1 (pH)
			Calcium	Calcium	EPA 200.7 (Calcium)
			Sulfate	Sulfate	EPA 300.0 (Sulfate)
			Aluminum	None	EPA 200.8 (Metal)
			Barium		

Attachment S
Pollutant Testing Guidance Table [1]

Category	Construction Site Material	Visually Observable?	Pollutant Indicators [2]	Suggested Analyses Field [3]	Laboratory
			Manganese		
			Vanadium		
Treated Wood Products	Ammoniacal-Copper-Zinc-Arsenate (ACZA) Copper-Chromium-Arsenic (CCA) Ammoniacal-Copper-Arsenate (ACA) Copper Naphthenate	No	Arsenic	Total Chromium	EPA 200.8 (Metal)
			Total Chromium		
			Copper		
			Zinc		
	Creosote	Yes - Rainbow Surface or Brown Suspension	Visually Observable - No Testing Required		

Notes:

1. 1 If specific pollutant is known, analyze only for that specific pollutant. See MSDS to verify.
2. For each construction material, test for one of the pollutant indicators. Bolded pollutant indicates lowest analysis cost or best indicator. However, the composition of the specific construction material, if known, is the first criterion for selecting which analysis to use.
3. See www.hach.com, www.lamotte.com, www.ysi.com and www.chemetrics.com for some of the test kits
4. If the type of inorganic fertilizer is unknown, analyze for all pollutant indicators listed.
5. Only if special handling requirements are required in the contract documents for aerially deposited lead (ADL)
6. If used with a dye or fiber matrix, it is considered visually observable and no testing is required.
7. Based upon research conducted by the State of California Department of Transportation (Caltrans), the following copolymers/polymers do not discharge pollutants and water quality sampling and analysis is **not** required: Super Tak™, M-Binder™, Fish Stik™, Pro40dc™, Fisch-Bond™, and Soil Master WR™.

ATTACHMENT T

Discharge Reporting Log

Project Name: PERRIS VALLEY BIG LEAGUE DREAMS

Project Number: NEC TRUMBLE ROAD AND MAPES ROAD

Date	Material(s) Discharged	Estimated Quantity	Observed By